

# AudioCodes Quick Reference Guide Software License Activation

#### **Background:**

This quick reference guide explains how a user can generate a new license key for an AudioCodes product installed on a virtual machine platform. AudioCodes products which reside on a virtual platform require a license key that is comprised of two components:

- 1. **Product Key**: This unique string is used to associate an AudioCodes product with a specific purchase and is used to reference the features options enabled for this product.
- 2. **Fingerprint** (or Machine ID/Serial Number): A unique string associated with the virtual machine in which the AudioCodes product is being installed.

When upgrading the virtual machine or performing maintenance to the platform, it's possible that the fingerprint can be changed. In these instances, the license key installed may no longer be valid. To resolve this issue, a new license key is required which contains the original Product Key as well as the new fingerprint information from the VM host.

Products supported by this process include the Mediant 9000/VE SBC, OVOC (SEM, IP Phone Manager) and AudioCodes Routing Manager (ARM).

## Identifying the Product Key and Fingerprint on SBC Products:

The Product Key is provided in the order-confirmation e-mail sent to a customer following the product purchase. If this e-mail is not available, you should be able to identify the Product Key on the previously installed product.

The Product Key and serial number should be displayed in the License Key page (**Navigation tree: Setup** menu > **Administration** tab > **License** folder > **License Key**) and on the Device Information page (**Monitor** menu > **Monitor** tab > **Summary** folder > **Device Information**) of your SBC's web interface.

The Product Key and serial number should also be displayed in the header of the configuration (INI) file as downloaded from the SBC's web interface.

If your License Key was purchased in an earlier version, the 'Product Key' field may appear empty. In such a scenario, you can contact AudioCodes Technical Support to submit a support ticket at <u>https://services.audiocodes.com</u>.

# Caudiocodes

#### Identifying the Product Key and Machine ID on OVOC Products:

The Product Key is provided in the order-confirmation e-mail sent to a customer following the product purchase. If this e-mail is not available, you should be able to identify the Product Key on the previously installed product.

The Product Key and Machine ID for OVOC can be found in the EMS Server Manager menu. To connect to the EMS Server Manager, connect to your OVOC server using Secure Shell (SSH) or use the management serial port or keyboard and monitor if you wish to run it locally.

Login to the OVOC server by SSH as 'acems' with the appropriate credentials.

Switch to user 'root'

su - root

And then type the command 'EmsServerManager':

# EmsServerManager

Select the "Application Maintenance" menu, and then choose the License option. Press enter, and the current license details are displayed, including the Server Machine ID and Product Key.

Example:

	000C Server 7.4.2050 Management
Main	Menu> Apylication Maintenance> License
	License Configuration Manager: Server Machine ID: D4547B4719EA Product Key: 1111 License Status: ENABLED OVOC Advanced: Yes Floating License: ENABLED Expiration Date: 01-01-2019
Main	License Pool Managed Devices: 10 SBC Sessions: 100 SBC Registrations: 188 SBC Transcoding: 288 Menu> Application Maintenance> License
	CB PBX Users: 10 CB Analog Devices: 10 CB Voicenail Accounts: 10
	Endpoints Managed Endpoints: 3,000
	Voice Quality Total Devices: 1,000 Total Endpoints: 5,000 Total Sessions: 2,000 Total Users: 4,000
	>1.Load License b.Back q.Quit to main Menu

INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED TO THE BEST OF AUDIOCODES KNOWLEDGE, AND AUDIOCODES SHALL NOT BE HELD LIABLE FOR ANY INACCURACIES.



# Identifying the Machine ID on AudioCodes Routing Manager (ARM):

The Machine ID should be displayed in the License page (**Settings** menu > **Administration** tab > **License** item) of your ARM web interface:

AudioCodes Ro	outing Manager NETWOR	K ROUTING USERS ALARMS SETTINGS
NETWORK SERVICES	CALL FLOW CONFIGURATIONS	ROUTING ADMINISTRATION ROUTING SERVERS
LICENSE	License	
SECURITY		
OPERATORS	LICENSE	484648FD4256
	License Key:	cSkNg4GCiMpYkAIsj8CHA7bwMLSKDj2TgNdiniluB0RY0+Z8hN2w
	LICENSE DETAILS	
	Expiration Date:	Unlimited
	Number of sessions:	20000
		Submit



#### **Generating a new License Key:**

Once you have identified the Product Key and current serial number/machine ID information for your product, you can generate a new license key based on these values by visiting the webpage: <a href="https://www.audiocodes.com/swactivation">https://www.audiocodes.com/swactivation</a>

On the "Software License Activation" page, enter the Product Key in the field labeled "Product Key". In the "Fingerprint" field, please enter either the serial number (SBC) or Machine ID strings (OVOC/ARM).

Once both strings are entered, simply include your e-mail address and press the "SUBMIT" button. A new license key should then be sent to your e-mail address.

← → œ https://www.audioc	Software License Activation ×	- □ <u>×</u> ↑ ★ ☆
Home > Software License Activation		^
Sof	tware License Activation	Ġ
Please enter your Product Ke Number or Server Machine II For technical assistance, plea "Supports CloudBond 365 versio	ey received from AudioCodes and the fingerprint (e.g. Serial )) that was generated as a result of your installation. ase contact AudioCodes support at <u>support@audiocodes.com</u> on 7.2 and above.	
Product Key *		
Fingerprint *	For instructions on how to locate your product's fingerprint, please read the documentation relevant to your product	
Email *		Ð
	✓ I'm not a robot	v

For instructions on how to install the new license key, please refer the product documentation.

## For any further questions regarding this topic or other technical topics:

- Contact your AudioCodes Sales Engineer
- Visit our AudioCodes Services and support page at <a href="https://www.audiocodes.com/services-support">https://www.audiocodes.com/services-support</a>
- Access our technical documentation library at <a href="https://www.audiocodes.com/library/technical-documents">https://www.audiocodes.com/library/technical-documents</a>
- Access to AudioCodes Management Utilities is available at <a href="https://services.audiocodes.com/app/answers/detail/a\_id/20">https://services.audiocodes.com/app/answers/detail/a\_id/20</a>
- Contact Technical Support to submit a support ticket at <a href="https://services.audiocodes.com">https://services.audiocodes.com</a>

INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED TO THE BEST OF AUDIOCODES KNOWLEDGE, AND AUDIOCODES SHALL NOT BE HELD LIABLE FOR ANY INACCURACIES.