

Installation Guide

1. Before Installing

Congratulations on purchasing the Expansion Module for your AudioCodes C456HD IP Phone! Before installing it, make sure the following items are included in the shipped box:

- ✓ Expansion Module
- ✓ Desk stand for C456HD with Expansion Module
- ✓ Plastic packet containing two Philips screws, three Allen screws, and an Allen wrench

2. Installation Process



Before proceeding with the installation:

- Disconnect the phone from the Power Supply / Power over Ethernet (PoE).
- Obtain a Philips screwdriver.

To connect the Expansion Module to the C456HD phone:

- ✓ Step 1: If relevant, unmount the phone from the desk stand for non-expansion phones – see [here](#)
- ✓ Step 2: Prepare the two units – see [here](#)
- ✓ Step 3: Remove the phone's side panel – see [here](#)
- ✓ Step 4: Connect the Expansion Module to the phone – see [here](#)
- ✓ Step 5: Secure the assembly – see [here](#)
- ✓ Step 6: Mount the assembly to the desk stand supplied with the expansion unit- see [here](#)




- ✓ **Step 1 – only if relevant:** If you previously purchased the phone without the expansion module and mounted it on a desk stand, unmount it. To do this, invert the phone, unscrew the two screws that fasten the stand to the phone using the supplied Allen wrench, and remove the stand.



- ✓ **Step 2:** Place the parts on a table: The phone, the Expansion Module, the Desktop Stand, the provided screws, and the Philips screwdriver (not supplied).



- ✓ **Step 3:** Invert the phone, then unscrew the two Philips screws shown below using the screwdriver and pull out the phone's side cover:

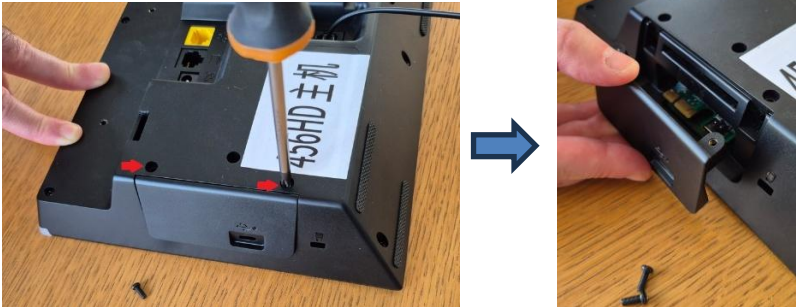

It is recommended to invert the phone on a surface that won't scratch the screen such as a towel or printer paper.

- ✓ **Step 4:** Return the phone to an upright position, then connect the Expansion Module to the phone as shown in the figure below.



- ✓ **Step 5:** Invert the assembled unit and secure the side panel by screwing in the two screws you unscrewed in Step 2:



- ✓ **Step 6:** With the assembly inverted, mount it on the supplied desk stand:
 - ✓ Align the two hooks of the desk stand with the corresponding slots on the assembly base.
 - ✓ Gently push the stand down until it snaps securely into place.



- ✓ Secure the stand to the phone by fastening the three Allen screws using the wrench (screws and wrench supplied).



- ✓ Invert the assembled unit. The installation is complete.



Notice Information

Information contained in this document is believed to be accurate and reliable at the time of publishing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from <https://www.audiocodes.com/library/technical-documents>.

This document is subject to change without notice.

Date Published: July-16-2026

LTRT-13447

