

C470HD IP Phone

Microsoft Teams Application

Version 2.3



Notice

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from <https://www.audiocodes.com/library/technical-documents>.

This document is subject to change without notice.

Date Published: September-29-2024

WEEE EU Directive

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Security Vulnerabilities

All security vulnerabilities should be reported to vulnerability@audiocodes.com.

Customer Support

Customer technical support and services are provided by AudioCodes or by an authorized AudioCodes Service Partner. For more information on how to buy technical support for AudioCodes products and for contact information, please visit our website at <https://www.audiocodes.com/services-support/maintenance-and-support>.

Documentation Feedback

AudioCodes continually strives to produce high quality documentation. If you have any comments (suggestions or errors) regarding this document, please fill out the Documentation Feedback form on our website at <https://online.audiocodes.com/documentation-feedback>.

Stay in the Loop with AudioCodes



Related Documentation

Document Name
Android Device Utility User's Manual
IP Phones How To . A selection of video clips explaining how to perform a variety of frequently needed actions on AudioCodes IP phones quickly and easily.
C470HD IP Phone for Microsoft Teams Quick Guide
C470HD IP Phone for Microsoft Teams Release Notes
Device Manager Administrator's Manual
Device Manager Deployment Guide
https://docs.microsoft.com/en-us/MicrosoftTeams/phones-for-teams

Table of Contents

1	Overview	1
	Specifications	2
	Allowing URLs, Ports (Security)	4
	Security Guidelines for Android-based Native Teams Devices	5
	Android-Level Security Hardening	5
	Google Play Services	6
	Running Android in Kiosk Mode	6
	Screen Lock	6
	AudioCodes Private Key	6
	Android Debug Bridge (ADB)	7
	App Signing	7
	Web Browser	7
	Remote Configuration Management	7
	AudioCodes Device Manager Validation	7
	Sandboxing	8
	Device File System	8
	Keystore	8
	Device Certificate	8
	Data Protection	8
	Debugging Interface	8
	SSH Access: Reduced File System Privileges	9
	Android Security Updates	9
	AudioCodes Root CA Certificate	9
2	Setting up the Phone	12
	Unpacking	12
	Device Description	13
	Front View	13
	Rear View	16
	Cabling	17
	Mounting the Phone	17
	Before Using AudioCodes Devices	17
3	Starting up	18
	Configuring Device Settings	18
	Configuring Wi-Fi	33
	Connecting to an Available Wi-Fi Network	33
	Manually Connecting to a Wi-Fi Network	36
	Configuring Wi-Fi with Hidden SSID	41
	Configuring VLAN via DHCP Option when CDP-LLDP isn't Allowed	49
	Restoring the Phone to Default Settings	50
	Performing a Hard Restore	50
	Performing a Soft Restore	50

Performing User Data Reset	51
Recovery Mode	52
Locking and Unlocking the Phone	53
Automatic Lock	53
Unlock	53
4 Teams Application	56
Signing In	56
Multi-Cloud Sign-in	61
Remote Provisioning and Sign-in from Teams admin center	62
Getting Acquainted with the Phone Screen	66
Enabling Google Talkback	69
Opting in or out of Call Queues	72
Setting Status	72
Hot Desking	73
Changing Presence Status	74
Enabling Power Saving	76
Enabling Voicemail Support on CAP Users	76
Configuring Teams Application Settings	77
Setting up a Meeting	80
Using the People Screen	81
Accessing Voicemail	82
Using Audio Devices	82
Transferring Calls and Meetings across Devices	83
Signing Out	83
5 Performing Teams Call Operations	85
Making a Call	85
Microsoft Lightweight Calling Experience	86
Dialing a Missed Call	87
Select to Dial	87
Transferring a Call	87
Making an Emergency Call	88
Answering Calls	89
Ending an Established Call	90
Managing Calls	90
Paging to a Group of Phones (Multicast)	90
Using Boss-Admin	94
Parking a Call	95
Managing Teams Meetings	95
Using Live Captions	97
Raising a Hand During a Meeting	98
Hiding Names and Meeting Titles for Individual Devices	98
Reacting During a Meeting	98

Transferring a Call to Frequent Contacts	99
Transferring a Call to Work Voicemail	99
Viewing and Playing Voicemail Messages	99
Rejecting an Incoming Call, Sending it Directly to Voicemail	100
Adjusting Volume	101
Adjusting Ring Volume	101
Adjusting Tones Volume	101
Adjusting Handset Volume	101
Adjusting Speaker Volume	102
Adjusting Headset Volume	102
Playing Incoming Call Ringing through USB Headset	102
Using the Phone as a USB Speaker	102
Viewing and Joining Meetings	103
Better Together over Bluetooth	104
Adding a Speed Dial	107
Adding a Speed Dial Group	109
6 Performing Administrator-Related Operations	110
Setting up Automatic Provisioning	110
Setting up an E911 Emergency Location using TAC	111
Updating Phone Firmware Manually	116
Loading Certificates to Phones	119
AudioCodes Android Device Utility	120
Certificate Enrollment using SCEP	122
Manually Performing Recovery Operations	124
Enrolling a Device with Intune Policies	125
Creating a Dynamic Group	125
Creating an Exclusion Group	125
Removing Devices from Intune admin center	126
Updating Microsoft Teams Devices Remotely	129
Defining Password Complexity	129
Disabling a Device's USB Port	130
Enabling a Phone to be used as an Audio Device	131
Managing Phones with the Device Manager	132
Configuring a Periodic Provisioning Cycle	133
Configuring TimeZone and Daylight Savings	134
Managing Devices with HTTPS	135
Supported Parameters	135
Configuring QoS on PC Port	136
Configuring Admin Login Timeout	137
Monitoring Phone Process Statuses	137
7 Troubleshooting	139
DSCP	139
Users	140

Exporting Logs to USB when Phone is in Recovery Mode	141
Network Administrators	141
Android Device Utility	141
Capturing the Phone Screen	143
Running Tcpdump	144
Getting Information about Phones	145
Remote Logging (Syslog)	146
Getting Diagnostics	149
Getting Logs	150
Activating DSP Recording	151
Deactivating DSP Recording	152
SSH	153
Getting the Phone IP Address	154
Installing the APK using SSH	154
Updating Phones using SSH Commands	154
Microsoft Teams Admin Center	156
Collecting Logs	156
Getting Audio Debug Recording Logs	158
Collecting Media Logs (*.blog) from the Phone	159
Capturing Traffic Using 'rpcapd'	159

1 Overview

The AudioCodes Microsoft Teams-native C470HD IP phone is a feature-rich, executive high-end business phone for Microsoft Teams. A native Microsoft Teams Total Touch high-end business phone, it features a large color touch screen and full UC integration. The phone is equipped with a large, single surface, full touch interface, incorporating an exceptionally sharp 5.5" color touch screen, with optional support for Wi-Fi and Wireless.

AudioCodes IP phones can be offered as part of its Managed IP Phones solution, which defines the IP phone as an IT-managed entity and delivers unique and complete lifecycle management of end-user desktop devices.

C470HD Features:

- Native support for Microsoft Teams
- Graphical portrait 5.5" color touch screen (1280 x 720) with multi-lingual support
- GbE support
- USB headset support
- Wireless support

400HD IP Phone Series Highlights:

- Superior voice quality
- Full duplex speaker phone
- Robust security mechanisms
- PoE or external power supply
- Centralized management supported by AudioCodes Device Manager (available for download free of charge)
- Power-saving mode for MWI LED and LCD is automatically activated during non-working hours. The phone's uppermost-right LED is switched off and the LCD is dimmed. This conserves energy and minimizes light disturbance, providing a seamless and efficient user experience.



AudioCodes Teams phones can operate in a Survivable Branch Appliance (SBA) environment. Branch office survivability is aimed at providing limited calling functionality when a phone no longer has connectivity with the Teams cloud. Basic functionalities are:

- Making PSTN calls
- Receiving PSTN calls
- Hold & Resume of PSTN calls

If a user attempts to make a Teams call and the internet connection is down, they'll be notified that they can try calling a phone number instead. A 'No internet connection' indication is displayed suggesting that calling a phone number is available.

See [here](#) for video blogs and blogs about AudioCodes' Teams phones.

See [here](#) for videos and webinars about AudioCodes' Teams phones.

See [here](#) marketing material related to all AudioCodes' Teams phones.

Specifications

The following table summarizes the phone's specifications.

Table 1-1: Specifications

Feature	Details
Media Processing	■ Voice Coders: G.711, G.729, G.722, SILK, Opus ■ Acoustic Echo Cancellation: G.168-2004 compliant, 64-msec tail length ■ Adaptive Jitter Buffer ■ Voice Activity Detection ■ Comfort Noise Generation ■ Packet Lost Concealment ■ RTP/RTCP Packetization (RFC 3550, RFC 3551), SRTP (RFC 3711)
Microsoft Teams phones feature set	■ Authentication (Sign in with user credentials; Sign in using PC/Smartphone; Modern Authentication; Phone lock/unlock) ■ Calling (Incoming/Outgoing P2P calls; In-call controls via UI (Mute, hold/resume, transfer, end call); PSTN calls; Visual Voicemail; 911 support) ■ Calendar and Presence (roadmap feature) (Calendar Access and Meeting Details; Presence Integration; Exchange Calendar Integration; Contact Picture Integration; Corporate Directory Access) ■ Meetings (roadmap feature) (One-click Join for Meetings; Join Skype for Business meetings; Meeting Call controls [Mute/unmute, hold/resume, hang up, add/remove participant]; Meeting Details. See also here for related Microsoft documentation.
Configuration and Management	■ Teams admin center (TAC) ■ OVOC / Device Manager
Debugging Tools	■ AudioCodes' Android Device Utility (see Android Device Utility on page 141) ■ Log upload to Microsoft server (certification for 3rd party Skype for

Feature	Details
	Business clients) ■ Remote logging via Syslog ■ SSH Access ■ Capturing the phone screen ■ TCPdump ■ Audio Debug recording logs ■ Echo Canceler (EC) debug recording ■ Media logs (*.blog) ■ Remote Packet Capture network sniffer application
Localization Support	■ Multi-lingual support; the language pack list is not yet final and is subject to modification.
Hardware	■ Graphical portrait 5.5" color touch screen, 1280 x 720 resolution ■ Wired connectivity: ✓ Two RJ-45 [Gigabit Ethernet (GbE)] (10/100/1000BaseT Ethernet) ports: LAN and PC port ✓ USB port ✓ RJ-11 interface ✓ Survivable Branch Appliance (SBA) ■ Wireless connectivity: ✓ Dual band 2.4GHz/5GHz, 802.11b/g/n Wi-Fi support ✓ Wi-Fi supported protocols: WEP, WPA-PSK/WPA2-PSK and WPA/WPA2 Enterprise (802.1X) PEAP only ■ Wireless support; integrated; optional ✓ Max. # of Bluetooth devices that can connect simultaneously to C470HD: 1 ■ Power: ✓ 12V DC jack ✓ Power supply AC 100 ~ 240V ✓ PoE Class 2: IEEE802.3af (optional) ■ Keys:

Feature	Details
	✓ Hold ✓ Mute ✓ Transfer ✓ Volume ✓ Headset (including LED) ✓ Speaker (including LED) ✓ Back ✓ Home

Allowing URLs, Ports (Security)

This section shows network administrators which URLs/Ports to allow when deploying Teams phones (security).

From the device point of view, the following table summaries the ports the phone uses. See also [Microsoft's guide to the ports the phone uses](#).

Table 1-2: URLs / Ports to Allow when Deploying Teams Phones (Security)

Server Role	Service Name	Port	Protocol	Notes
DNS Server	All	53	DNS	-
AudioCodes Device Manager	AudioCodes DM	443	HTTPS	AudioCodes device management server
AudioCodes Redirect service	AudioCodes DM	443	HTTPS	AudioCodes redirect service redirect.audiocodes.com
NTP timeserver	Android NTP	123	UDP	-
Time Zone Database	Time Zones	443	HTTPS	Time Zone Database (often called tz or zoneinfo)
Microsoft Apps Artifacts server	Package manager	-	-	Microsoft will be requested for the protocol and port and FQDN. These URLs are provided by the Admin agent.

Security Guidelines for Android-based Native Teams Devices

AudioCodes' Android-based Native Teams devices are purpose-built and customized for Microsoft Teams calling and meeting. Customers might perceive Android-based products as vulnerable to security issues but security is *less* of an issue on devices purpose-built and customized for Microsoft Teams calling and meeting. Security is in fact *enhanced* on these devices *as part of their default use*.

When analyzing device security, two levels must be addressed:

- Authentication and security with respect to Teams connectivity and use
- Android level / system of the device

AudioCodes recommends the following:

- Use the sign-in mode **Sign-in with other device option**. In this mode, users do not type the password on the device but instead obtain a code on their PC / laptop to be used to sign-in; the phone obtains a private token that enables it to access Teams cloud; this token, unlike a password, allows only that device which obtained it to reuse it. The token is stored on the secured file system.
- Leverage Multi-Factor-authentication (MFA) to improve sign-in security.
- Reduce the expiration time of the sign-in for devices which are connected remotely (outside the organization's network) versus devices inside the organization's premises.

AudioCodes recommends visiting Microsoft's technical pages for more security guidelines and policies for Microsoft Teams adoption:

- [Overview of security and compliance - Microsoft Teams | Microsoft Docs](#)
- [Identity models and authentication for Microsoft Teams - Microsoft Teams | Microsoft Docs](#)
- [Sign in to Microsoft Teams - Microsoft Teams | Microsoft Docs](#)

Android-Level Security Hardening

Major Android-level system-level developments have been incorporated into AudioCodes' devices to improve security:

- See [Google Play Services](#) on the next page
- See [Running Android in Kiosk Mode](#) on the next page
- See [Screen Lock](#) on the next page
- See [AudioCodes Private Key](#) on the next page
- See [Android Debug Bridge \(ADB\)](#) on page 7
- See [App Signing](#) on page 7
- See [Web Browser](#) on page 7
- See [Remote Configuration Management](#) on page 7

- See [AudioCodes Device Manager Validation](#) on the next page
- See [Sandboxing](#) on page 8
- See [Device File System](#) on page 8
- See [Keystore](#) on page 8
- See [Device Certificate](#) on page 8
- See [Data Protection](#) on page 8
- See [Debugging Interface](#) on page 8
- See [SSH Access: Reduced File System](#)
- See [Android Security Updates](#) on page 9

Google Play Services

Google Play services were removed from AudioCodes devices software. Access to any Google store or Play service is not allowed.

- Updating the AudioCodes device's Android software and application is performed via special software components that either connect to the Teams Admin Center or to AudioCodes' Device Manager over a secured channel.

Running Android in Kiosk Mode

Android Kiosk Lockdown software 'locks down' Android devices to only allow essential apps by disabling access to the Home / Launcher. Using Android Kiosk Lockdown software, Android devices can be converted into public kiosk terminals or secured work devices.

- Only specific Microsoft apps and AudioCodes-signed apps that were certified and approved in the certification process can run in Kiosk mode; even if a malicious user manages to install a new unauthorized app on the file system, the launcher on the device will only run those specific approved apps and this cannot be changed in run time (only with a new software code provided by AudioCodes).

Screen Lock

AudioCodes devices use a screen lock mechanism to prevent any malicious user/users from gaining access to Calendar information and / or Active Directory list of employees and / or triggering unauthorized calls from the device. After enabling screen lock, the device automatically locks after a preconfigured period; a code is required to unlock the device and resume full operation.

AudioCodes Private Key

The system software on AudioCodes devices is signed with AudioCodes' private key. Users can replace the complete software only with new software that is also signed by AudioCodes' private key.

This prevents users from replacing the complete over-the-air (OTA) package of the device with any new system software, unless the software is fully signed by AudioCodes.

Android Debug Bridge (ADB)



The device does not allow access to ADB.

AudioCodes disabled the Android Debug Bridge (ADB) application and keeps the Teams app running in the front all the time. As a result, it's impossible to install other apps from unknown sources, and to sideload apps.

App Signing

Android requires all apps to be digitally-signed with a developer key before installation; currently, the AudioCodes devices verify that apps are signed by Microsoft.

App signing prevents malicious user/users from replacing a Microsoft-signed app with an app that "pretends" to be Microsoft but which lacks the private key that is known only to Microsoft.

Web Browser

The AudioCodes device does not include a Web browser. Users cannot browse to the public internet or internal intranet. All Web services are customized to connect to Office 365 services and AudioCodes' managed services such as the One Voice Operations Center (OVOC).

Without a Web browser, malicious user/users will not be able to access the device and browse from it as a trusted device into the customer network.

Remote Configuration Management

AudioCodes devices do not have an embedded Web server. Configuration and management are performed using one of the following remote interfaces:

- Microsoft Teams Admin Center (for Native Teams devices) over HTTPS protocols, enabled after a successful sign-in authentication process.
- AudioCodes Device Manager (part of AudioCodes' OVOC suite) over HTTPS.
- Debugging interface over SSH. Note that SSH must be disabled by default and enabled only per specific case for debugging purposes only.

AudioCodes Device Manager Validation

The AudioCodes Native Teams devices validate the AudioCodes Device Manager identity using a known trusted certificate:

- The device is shipped with known trusted certificate installed. See [AudioCodes Root CA Certificate](#) on page 9.

- For the initial connection, the AudioCodes Device Manager accesses devices using a known trusted certificate.
- Once a successful secured connection has been established between the device and the Device Manager, the user can replace the trusted certificate on the Device Manager and on the phone, and re-establish the connection leveraging any Private Trusted Certificate.

Sandboxing

AudioCodes devices use Android Application Sandbox so that each application can access its own data and is isolated from other applications. This prevents a malicious app from accessing the code or the data of other applications in the system.

Device File System

The AudioCodes device's file system is encrypted on C470HD devices. Customers may enforce a policy of device encryption via Microsoft's cloud-based Intune service.

Keystore

With AudioCodes devices, the certificate keys are encrypted on the device file system.

Device Certificate

AudioCodes devices are shipped with a unique certificate which is signed by AudioCodes Root CA. Network administrators can install a third-party certificate on the phone in the customer's trusted environment. Network administrators should follow the following guidelines when replacing the existing device certificate:

- The device certificate URL will only be valid if no SCEP server URL is present
- Use the following two parameters to set the device certificate in the phone's configuration file:
 - security/device_certificate_url=http://<server-ip>/device.crt
 - security/device_private_key_url=http://<server-ip>/device.key



- Trusted certificates are provisioned by parameter security/ca_certificate/[0-4]/
- The loaded certificate's file name must be without spaces. Spaces between words can be created using an underscore _

Data Protection

AudioCodes devices run Android which has integral procedures for protecting and securing user data.

Debugging Interface

- AudioCodes devices leverage SSH as a debugging interface.

- AudioCodes recommends that customers disable SSH on devices via AudioCodes' Device Manager (OVOC).
- AudioCodes recommends changing the Admin password from the default, via the Teams Admin Center or AudioCodes' Device Manager (OVOC).
- When a device - or multiple devices - needs to be debugged, users can enable SSH on it / them, access SSH with the new Admin password for the debugging phase, and disable SSH once debugging is finished.



SSH is by default disabled and can be enabled with Administrator permissions in the phone screen (Device Administration > Debugging > SSH).

SSH Access: Reduced File System Privileges

Administrator users who access SSH have reduced file system privileges. For example, files cannot be deleted, and some parts of the file system cannot be reviewed. This prevents malicious actions or unintended errors that might cause damage to the device.


Android Security Updates

AudioCodes regularly adopts and integrates Android security updates.

For reference, see [here](#).

AudioCodes Root CA Certificate

The following figure shows the AudioCodes Root CA Certificate.

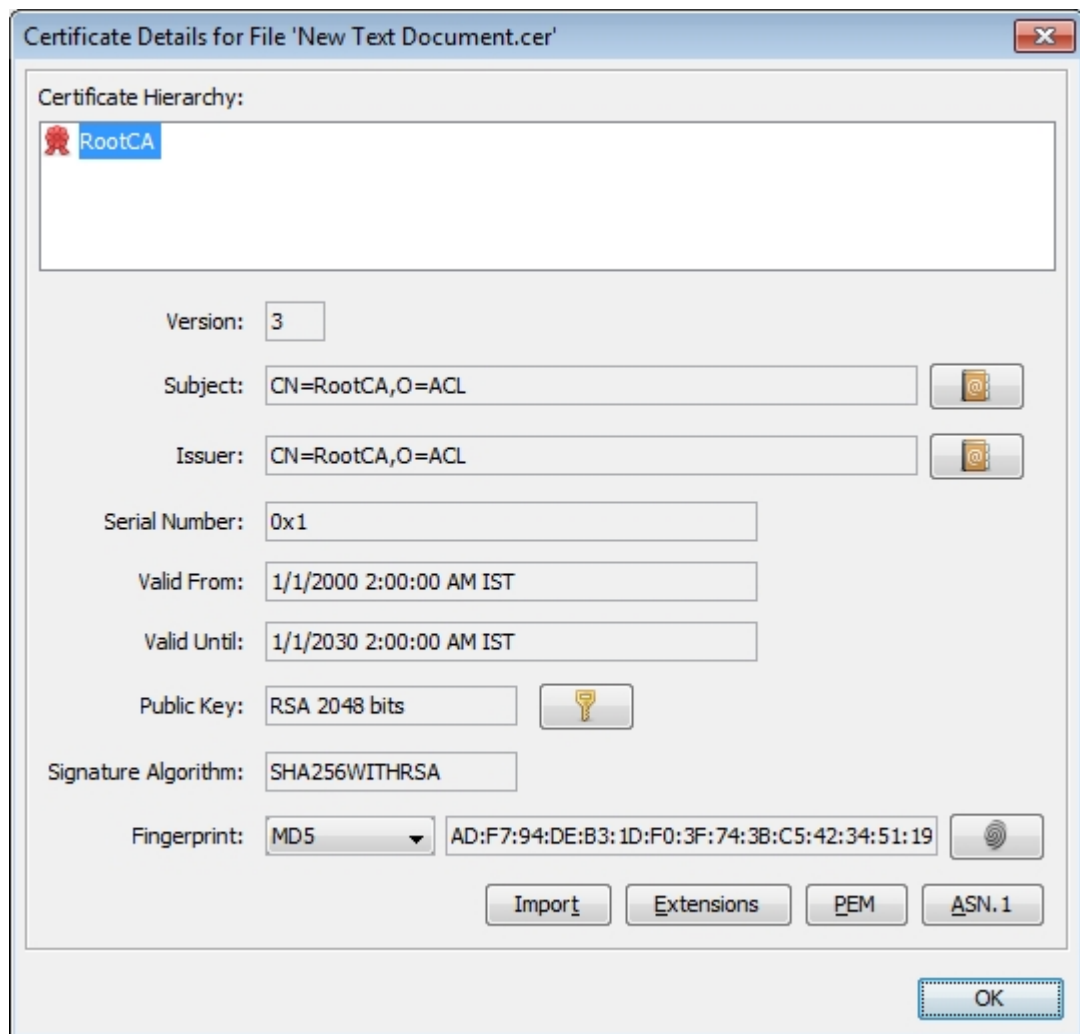

-----BEGIN CERTIFICATE-----

MIIDMTCCAhmGAWIBAgIBATANBgkqhkiG9w0BAQsFADAfMQwwCgYDVQQKEwNBQ0wx

DzANBgNVBAMTBiJvb3RDQTAeFw0wMDAxMDEwMDAwMDBaFw0zMDAxMD
EwMDAwMDBa

MB8xDDAKBgNVBAoTA0FDTDEPMA0GA1UEAxMGUm9vdENBMIIBIjANBgkqh
kiG9w0B

AQEFAAOCAQ8AMIIBCgKCAQEA6GK495KUCXAm/UE17G4/cjnZN4LNaxYEEZ
bfZL0a

EhgSKYt/LQ+iUcDhojsneusNgrcGkpwKkIKsGsvGWmSRNULV01CW+TX2VJN7
3+hh
V0uzhyOIYAUhbDaoqNM6Kp5b7sJ1ew4lg9kfd/ma9Czl5koESLlw/inLj/r+rD96

mUcPEIWkKspv7Qy4I14fsK/yMArixRopTL1munVVPpSFM9Jh8IY3JHyr5CQJXKK
S

EhGAJsnHaRqsR2Su3X/WtslgEF+cvP34pxhIhFL29nMfnaFATSS3rgGaFISvl1ZS

esLMqkWjp9cqGYrvt7K61sYnvMMb+o/KbWqVokXb+Fr7bwIDAQABo3gwdjAMB
gNV

HRMEBTADAQH/MB0GA1UdDgQWBBQDXySn9hz15IDraZ+iXddZGReB+zBHB
gNVHSME

QDA+gBQDXySn9hz15IDraZ+iXddZGReB+6EjpCEwHzEMMAoGA1UEChMDQU
NMMQ8w

DQYDVQQDEwZSb290Q0GCAQEwDQYJKoZIhvcNAQELBQADggEBAI0rUywo
mmWWJnH3

JOfKiS3+VnX5hJITZymvWanMXUz/6FonHccPXEBYTrUYwhiWx3dwELAFXDFK
kxMp

0KKWZ4F39cAOLRjqhzya+xUeeJ9HQZCXAYAJ6XgvTfN2BtyZk9Ma8WG+H1hNv
vTZY

QLbWsjQdu4eFniEufeYDke1jQ6800LwMIFlc59hMQCeJTEnRx4HdJbJV86k1gBU
E

A7fJT1ePrRnXNDRz6QtADWoX3OmN7Meqen/roTwvLpEP22nYwvB28dq3JetlQ
Kwu

XC4gwl/o8K2wo3pySLU9Y/vanxXCr0/en5l3RDz1YpYWmQwHA8jJlu8rxdhr+VNQ
Zv6R/Ys=

-----END CERTIFICATE-----

2 Setting up the Phone

The instructions following show how to set up the phone.

Unpacking

When unpacking, make sure the items listed in the phone's *Quick Guide* are present and undamaged.

If anything appears to be missing or broken, contact the distributor from whom you purchased the phone for assistance.

For detailed information, see the phone's *Quick Guide* shipped with the device or available from AudioCodes.

Device Description

Use the following graphics to identify and familiarize yourself with the device's hardware functions.

Front View

The front view of the phone is shown in the figure and described in the table.

Figure 2-1: Front View

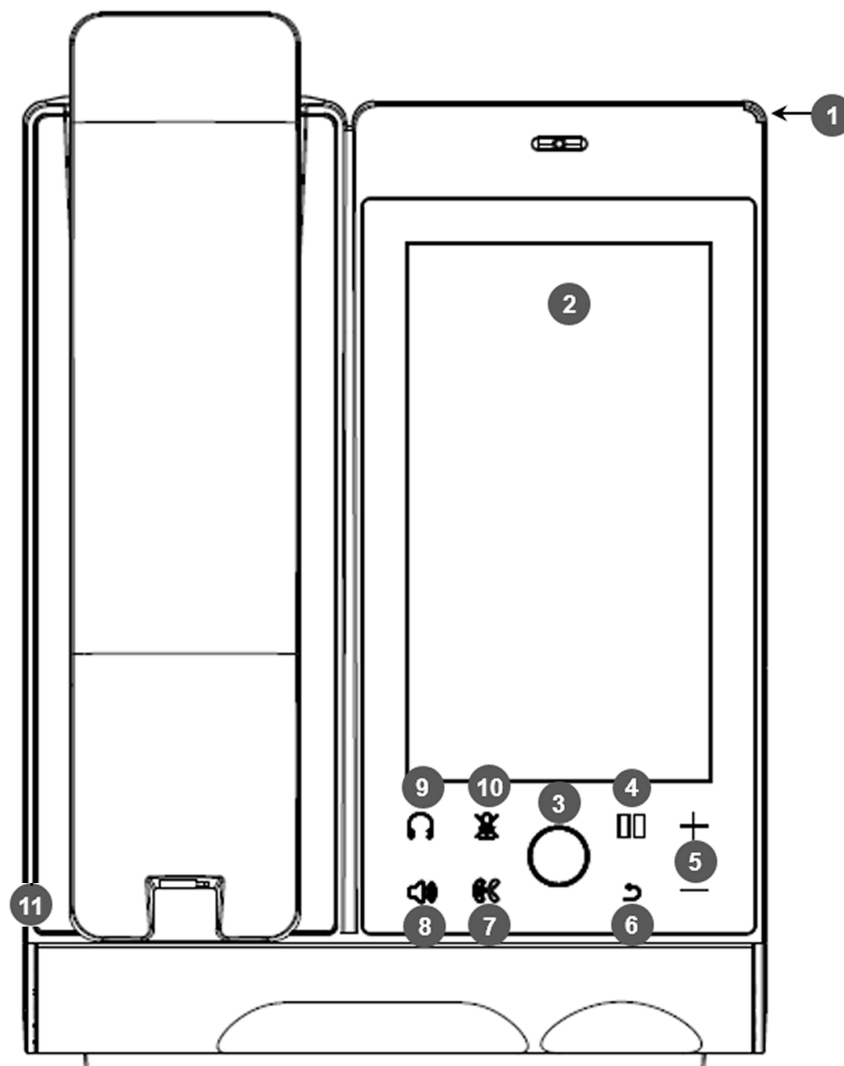



Table 2-1: Font View Description

Item #	Label/Name	Description
1	Ring LED	Indicates phone status: ■ Green: Idle state

Item #	Label/Name	Description
		■ Flashing red: Incoming call (ringing) ■ Red: Answered call
2	TFT touch screen	Thin Film Transistor touch screen, a type of LCD (Liquid Crystal Display) interactive screen which displays calling information and lets you configure phone features by touching the glass.
3	Home	■ Touch the key to return to the phone's home (idle) screen from any screen. ■ Long-press the key to open the device Settings screen. ■ Visual indications: ✓ If the key is illuminated red (constantly, without flashing), it indicates 'No network'; touching the key then gives the user direct access to the Network menu. ✓ Flashing red indicates a system alert, for example, when a user tries to charge via the device's USB port (see the note after this table). ✓ Flashing yellow indicates that the phone is in the process of a software upgrade.
4	Hold	Touch to place an active call on hold.
5	Volume	Increases or decreases the volume of the handset, headset, speaker, ring tone or call progress tones. See Adjusting Volume on page 101 for detailed information.
6	'Back' key	Touch to return to the previous screen.
7	Call transfer	Touch to transfer a call to a third party.
8	Speaker	Touch to activate the speaker, allowing a hands-free conversation.
9	Headset	Touch to activate a call using an external headset.
10	Mute	Touch to mute an established call.
11	USB port	For a USB headset. See also the note below.



A USB delimiter enables the phone to identify when the USB port is overloaded and to then display an alert on the screen. An alert is also sent to the OVOC. The feature helps to deter users from using the USB port for purposes other than for a USB headset, e.g., for charging devices. If users use the USB port for a headset, the alert will not be sent.



USB port shutdown due to over current exceeded
Please disconnect the USB device.
Please make sure that the USB port is used for USB headset
only.

Rear View

The ports located on the rear of the phone are described in the table.

Figure 2-2: Rear View

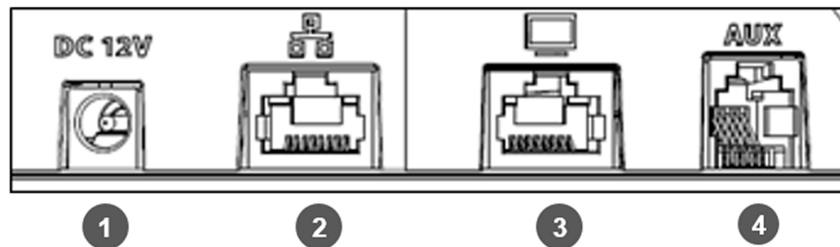


Table 2-2: Rear View Description

#	Description
1	12V DC power jack that connects to the AC power adapter.
2	RJ-45 port to connect to the Ethernet LAN cable for the LAN connection (uplink - 10/100/1000 Mbps). If you're using Power over Ethernet (PoE), power to the phone is supplied from the Ethernet cable (draws power from either a spare line or a signal line).
3	RJ-45 port to connect the phone to a PC (10/100/1000 Mbps downlink).
4	Headset jack, i.e., RJ-9 port that connects to an external headset.

Cabling

See the phone's *Quick Guide* shipped with the device and also available from AudioCodes for detailed information on how to cable the phone.

Mounting the Phone

The phone can be mounted on a:

- Desk (see Desktop Mounting)

See the phone's *Quick Guide* shipped with the device and also available from AudioCodes for detailed information on how to mount the phone.

See also [here](#) for a clip showing *the principle* of how to mount an AudioCodes IP phone. The principle is the same across all AudioCodes IP phone models.

Before Using AudioCodes Devices

AudioCodes recommends frequently cleaning devices' screens especially screens on devices in common use areas such as conference rooms and lobbies.

➤ To clean a device's screen:


1. Disconnect all cables.
2. Spray onto a clean, dry, microfiber duster a medicinal isopropyl alcohol and water solution of 70:30. Don't oversaturate the duster. If it's wet, squeeze it out.
3. Lightly wipe the screen of the device.
4. Wait for the screen to dry before reconnecting cables.

3 Starting up

Here's how to start up the phone.

➤ **To start up:**

1. Connect the phone to the network (or reset it); the language selection screen is displayed by default.

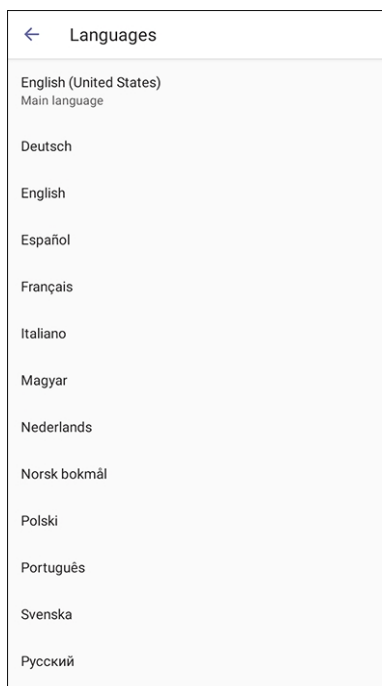

2. Select the language of your choice and then configure device settings to suit specific requirements.




It will be necessary to repeat this only if the phone is restored to default settings.

Configuring Device Settings

The section familiarizes you with the phone's settings. Phones are delivered to customers configured with their default settings. Customers can customize these settings to suit specific personal or enterprise requirements.


➤ **To access device settings:**




1. In the home screen, select the user (avatar) picture and then select the **Settings** option and then **Device settings**.


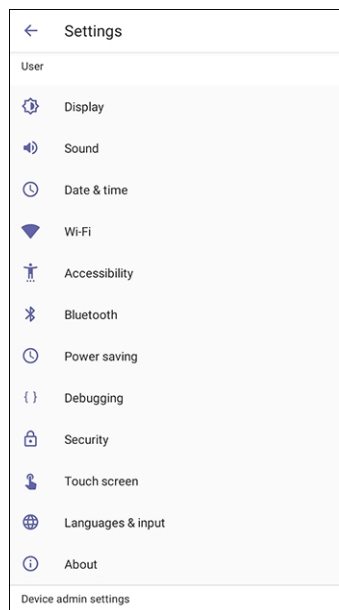




2. View the settings under 'User'. Select a setting to open it. Use the table following as reference. [To view settings related to the network administrator, scroll down and open 'Device admin settings'].




Table 3-1: Device Settings

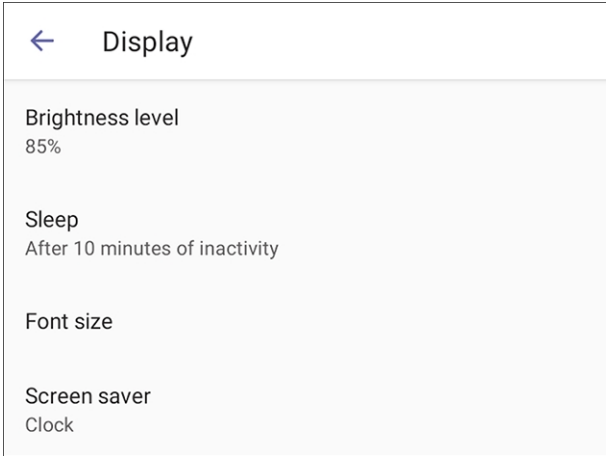Setting	Description
User	
Display	Opens the 'Display' screen [Brightness level].  The phone's screen supports different brightness levels. Choose the level that suits your requirements. ■ Sleep

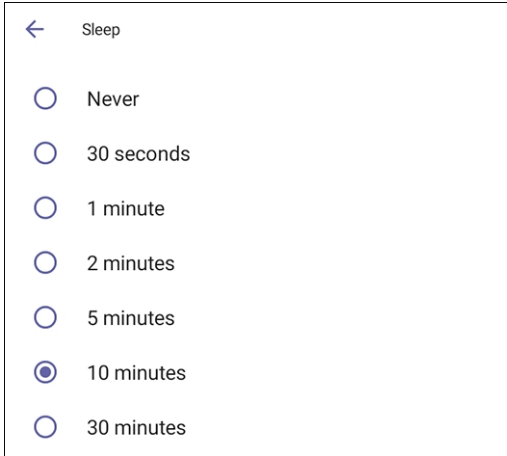
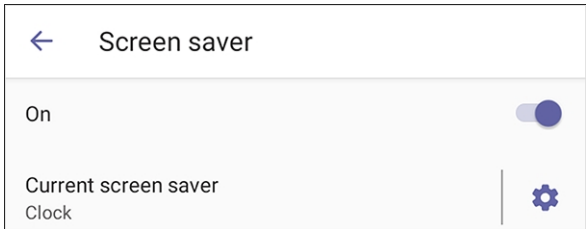
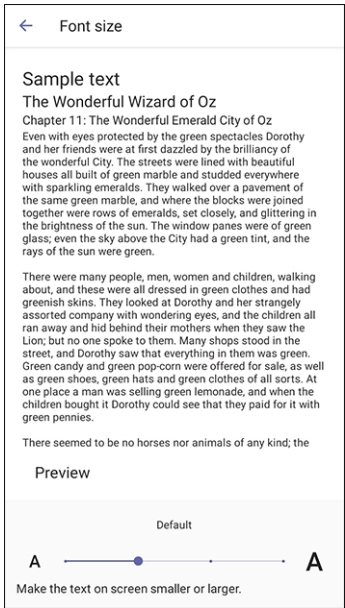
Setting	Description
	 ■ Screen saver  ■ Font size 
Sound	Allows you to customize phone volume for a friendlier user experience. Ring volume at n%

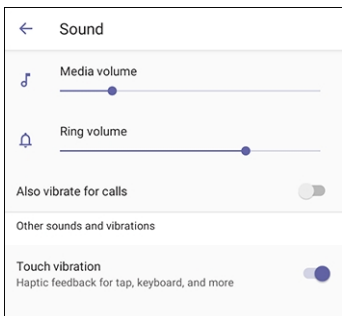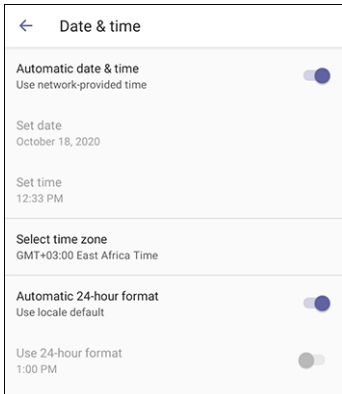
Setting	Description
	
Date & time	Date and time are automatically retrieved from the deployed Network Time Protocol (NTP) server.  Use 24-hour format [Allows you to select the Time format] Also supported is a simplified version of NTP called Simple Network Time Protocol (SNTP). Both can be used to synchronize device clocks. SNTP is typically used if full implementation of NTP is not required.
NTP Preferred NTP server	Admins can use this parameter to <i>manually</i> define the NTP server, to comply with enterprise security requirements if those requirements preclude using DHCP Option 42. Manual configuration takes precedence over DHCP Option 42 and the time servers. Two ways to manually define the NTP server are available: Admins can define it in the phone's GUI.

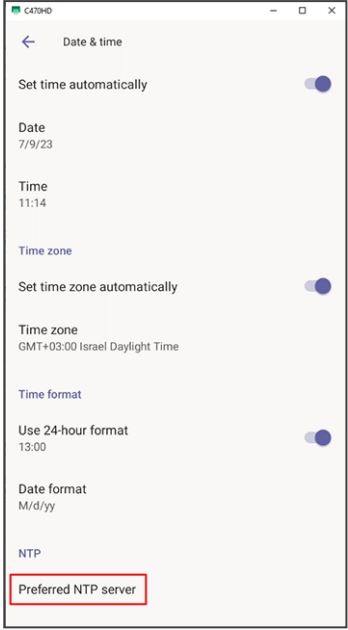
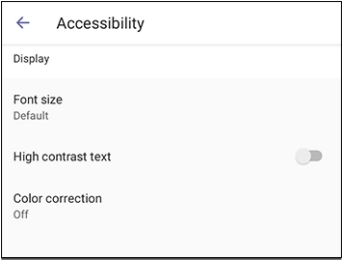
Setting	Description
	 ■ Admins can alternatively use the newly added parameter 'date_time/ntp/server_address' in the phone's .cfg configuration file. See also under Signing In on page 56.
Wi-Fi	The phone can connect to an Access Point via Wi-Fi. See the phone's <i>Quick Guide</i> for detailed information on setting up Wi-Fi. See also Configuring Wi-Fi on page 33 in this document for information about configuring the feature.
Accessibility	Allows making the screen reader-friendlier. See also Enabling Google Talkback on page 69. 
Bluetooth	Hands free profile where the phone is able to connect to Bluetooth headset or speaker. See the phone's <i>Quick Guide</i> for detailed information on setting up Bluetooth.
Power Saving	Allows users to contribute to power saving in the enterprise.

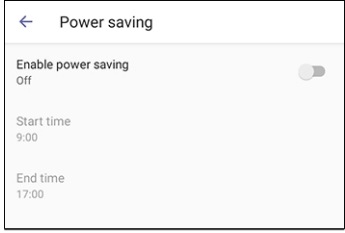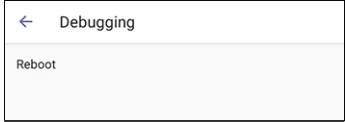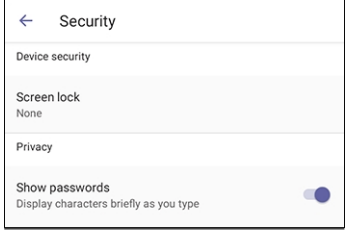
Setting	Description
	 Enable power saving Start time [The device consumes minimal energy before the user arrives at the office] End time [The device consumes minimal energy after the user leaves the office]
Debugging	Enables users to reboot the device.  Log in as Administrator for more debugging settings to be available.
Security	Helps secure the enterprise telephony network against breaches.  Screen lock [The phone automatically locks after a configured period to secure it against unwanted use. If left unattended for 10 minutes (default), it automatically locks and is inaccessible to anyone who doesn't know its lock code.] Make passwords available
Touch screen	Allows users to disable the phone's touch screen.
Languages & input	Allows users to customize inputting to suit personal requirements.


Setting	Description
	← Languages & input 🌐 Languages English (United States) Keyboard & inputs Virtual keyboard Android Keyboard (AOSP) Text-to-speech output
About	Provides users with device information. ← About device Status Model C470HD Device information C470HD, integrated BT, 2 GB RAM, dual band WiFi Android version 9 Version info To determine the device's IP address, select the 'Status' option. ← Status IP address 10.22.13.12 fe80::290:8fff:fec8:b251 Wi-Fi MAC address d8:c0:a6:a2:6b:23 MAC address 00:90:8f:c8:b2:51 Bluetooth address Unavailable Serial number WS13152849 Up time 142:28:35

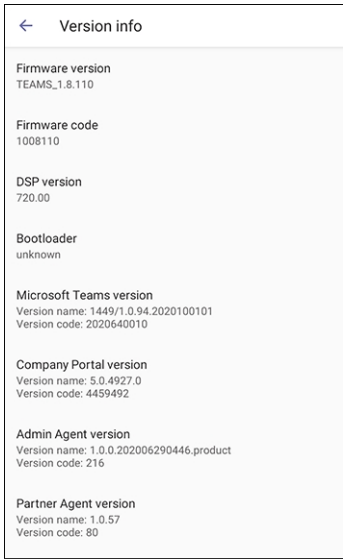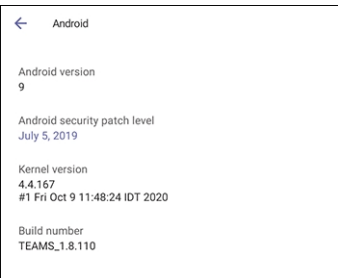Setting	Description
	To get information about the version, select 'Version info'.  To get information about the Android version, select 'Android version'. 
Device admin settings	
Device administration	Allows the user to log in as Administrator, necessary for some of the debugging options. It is password protected. Default password: 1234 (or 1111 in early versions). After logging in as an Administrator, the user can log out change password.  Select Login and then in the Login screen that opens, select the 'Enter password' field and use the virtual keyboard to enter the password (1234 or 1111). Note that the virtual keyboard pops up for all 'Settings' fields to allow inputting characters and / or numbers. Two virtual keyboard types can be displayed: Numeric or QWERTY.

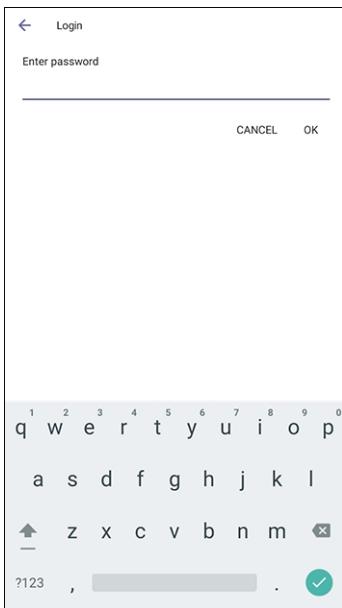Setting	Description
	  • The phone support a strong password check in order to log in as Administrator. The feature strengthens security. Note that the default password: ✓ must be changed before accessing the device via SSH ✓ can be changed per device from the phone screen (the user first enters the default password and is then prompted to modify it to a more complete password) or via bulk configuration of multiple devices using Microsoft's TAC or AudioCodes' Device Manager. • Criteria required for a strong password are provided. The password must: ✓ be greater than or equal to 8 characters in length. ✓ contain one or more uppercase characters. ✓ contain one or more lowercase characters. ✓ contain one or more numeric values. ✓ contain one or more special characters. The virtual keyboard is also displayed when the network administrator needs to enter an IP address to debug, or when they need to enter their PIN lock for the security tab. After logging in, scroll down in the Settings screen to the section 'Device admin settings'.

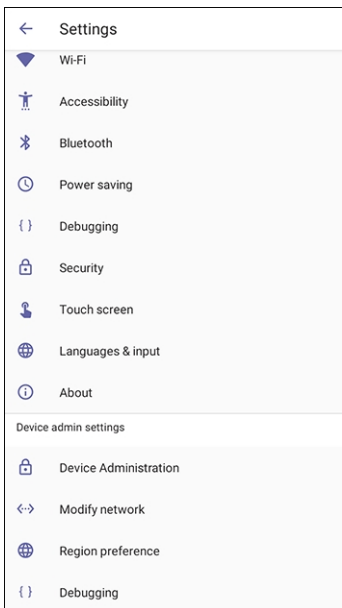
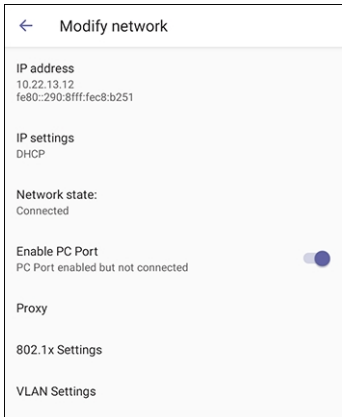
Setting	Description
	
Modify network	Enables the Admin user to determine network information and to modify network settings.  IP Address [Read Only] IP Settings [DHCP or Static IP] Network state [Read Only] Enable PC port Enable PC port mirror Proxy 802.1x Settings VLAN Settings. Allows you to configure the VLAN mode Manual, CDP only or LLDP only. Note that LLDP switch information is retrieved (for location purposes) when parameter network/lan/lldp/enabled=1 (even when VLAN is retrieved from CDP or VLAN is disabled or VLAN is Manual). In versions

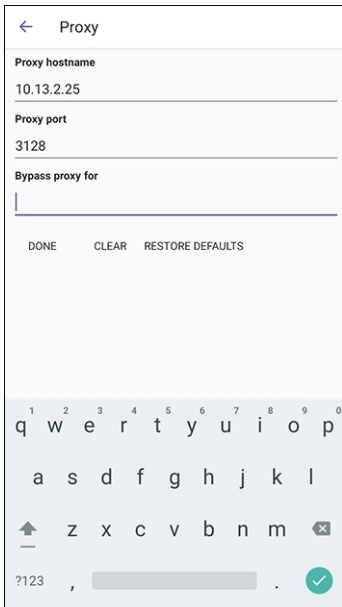Setting	Description
	prior to 1.19, if network VLAN mode 'network/lan/vlan/mode' was set to LLDP , the phone retrieved the VLAN and LLDP switch information (for location purposes) from LLDP.
Proxy	The phone can be configured with an HTTP Proxy server by an Admin user in two ways: ■ Manually. The Admin user can use this method to configure HTTP proxy server parameters through the Teams application: a. Log in as Administrator and select Modify network. b. Select the Proxy option and then configure the proxy host name and port:  ■ Over DHCP with Option 252. It's recommended that the Admin user uses this method when provisioning multiple phones. Option 252 provides a DHCP client with a URL to use to configure its proxy settings:

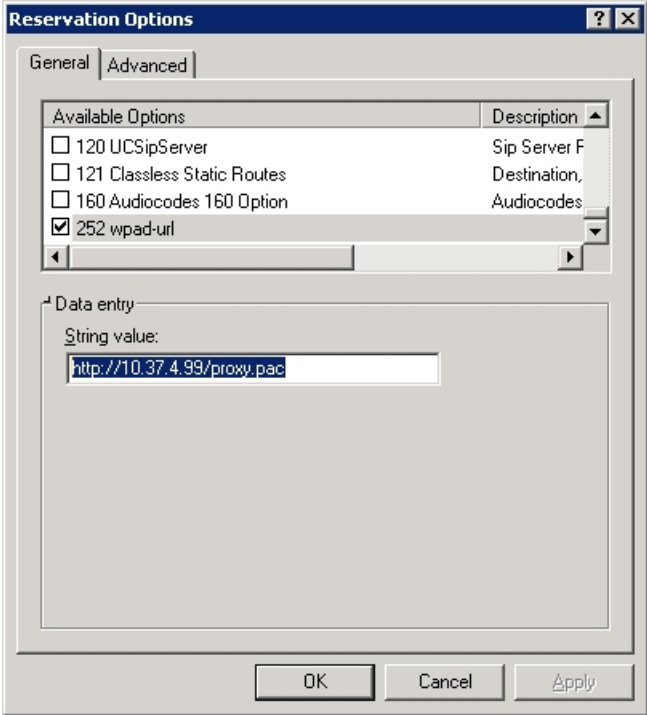Setting	Description
	 The proxy setting is provided in a Proxy Auto-Configuration (PAC) file that contains a set of rules coded in JavaScript which allows a web browser to determine whether to send web traffic directly to the Internet or to be sent via a proxy server. PAC files control how the phone handles HTTP, HTTPS and FTP traffic. Example of a basic PAC file: <pre>function FindProxyForURL(url, host) { return "PROXY 10.13.2.40:3128"; }</pre> If the enterprise features a proxy server that requires user authentication, the network administrator can use the PAC file and DHCP Option 252 to configure it. Alternatively, the administrator can configure it using the following parameters: <pre>http_client/fwd_proxy/ip=0.0.0.0 http_client/fwd_proxy/password= http_client/fwd_proxy/port=8080 http_client/fwd_proxy/username=</pre>
802.1x Settings	802.1x Authentication is the IEEE Standard for Port-based Network Access Control (PNAC). See https://1.ieee802.org/security/802-1x/ for more information. To configure an 802.1X Authentication method:

Setting	Description
	- From the 'Modify Network' screen (as an Admin), access the 802.1x Settings screen. - From the 'EAP method' drop-down, select the method: MD5 or TLS (for example). In version 2.3, the option for non-validating a CA certificate was removed. - Enter this information: ✓ Identity: User ID ✓ Password ✓ root certificate (not required for every method) ✓ device certificate (not required for every method) - Select the Save softkey The 802.1x settings are not only available via the phone screen, they're also supported in the device Configuration File, enabling network administrator's to perform pre-staging configuration for 802.1x. The 802.1x settings available in the Configuration File are: ■ Enable/Disable ■ EAP method ■ Identity ■ Password
VLAN Settings	Select the menu option VLAN Settings. Select VLAN Discovery mode.

Setting	Description
	← VLAN Discovery mode ☐ Disabled ☐ Manual configuration ☐ Automatic configuration (CDP) ☐ Automatic configuration (LLDP) ☒ Automatic configuration (CDP+LLDP) CANCEL OK ■ Cisco Discovery Protocol (CDP) is a Cisco proprietary Data Link Layer protocol ■ Link Layer Discovery Protocol (LLDP) is a standard, layer two discovery protocol Select the mode you require and then select OK. If you select Manual configuration, this screen opens: ← VLAN Settings VLAN Discovery mode Manual configuration VLAN ID -1 VLAN Priority 1 Changes will only be applied after both VLAN ID and VLAN Priority have been set Select VLAN ID. ← VLAN ID Enter VLAN ID (range 0 to 4094) CANCEL OK Select VLAN Priority. ← VLAN Priority Enter VLAN Priority (range 0 to 7) CANCEL OK

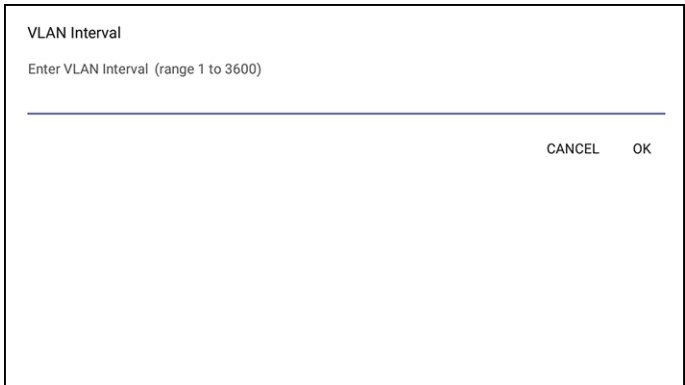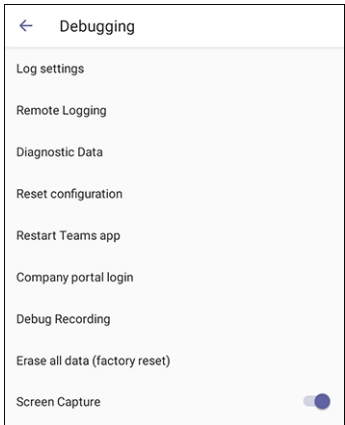Setting	Description
	Select VLAN Interval.  The 'VLAN interval' refers to CDP/LLDP advertisements' periodic interval. Default: 30 seconds. You can increase or decrease the intervals between the CDP/LLDP packets that are sent, based on network traffic and topology.
Debugging	Allows the Admin user to perform debugging for troubleshooting purposes. Available after logging in as Admin.  Log settings Remote Logging (see under Remote Logging (Syslog) on page 146 for more information) Diagnostic Data (see under Getting Diagnostics on page 149 for more information) Reset configuration (see here for more information) User data reset Restart Teams app Company portal login Debug Recording (for Media/DSP debugging) (see under Remote Logging (Syslog) on page 146 for more information) Erase all data (factory reset) (the equivalent of restore to defaults;

Setting	Description
	including logout and device reboot) Screen Capture. By default, this setting is enabled. If it's disabled, the phone won't allow its screens to be captured.

Configuring Wi-Fi

[Applies to devices whose PN indicates **DBW**] Network administrators can configure Wi-Fi parameters for the phone. The parameters are concealed from the user's view.



- Users can enable|disable Wi-Fi using the phone screen; Wi-Fi cannot be enabled|disabled using SSH command.
- The Wi-Fi connection is transparent to users; which frequency is used, 2.4 GHz or 5 GHz, is made for users by the phone; users cannot disable one or the other.

Network administrators can configure Wi-Fi settings in the phone screen.


Connecting to an Available Wi-Fi Network

➤ To connect to an available Wi-Fi network:




Make sure to first disconnect your Ethernet cable. If it's connected, the device will not be able to connect to a Wi-Fi network.


1. In the Wi-Fi screen (**Settings > Wi-Fi**), slide the **Use Wi-Fi** setting to 'on'.

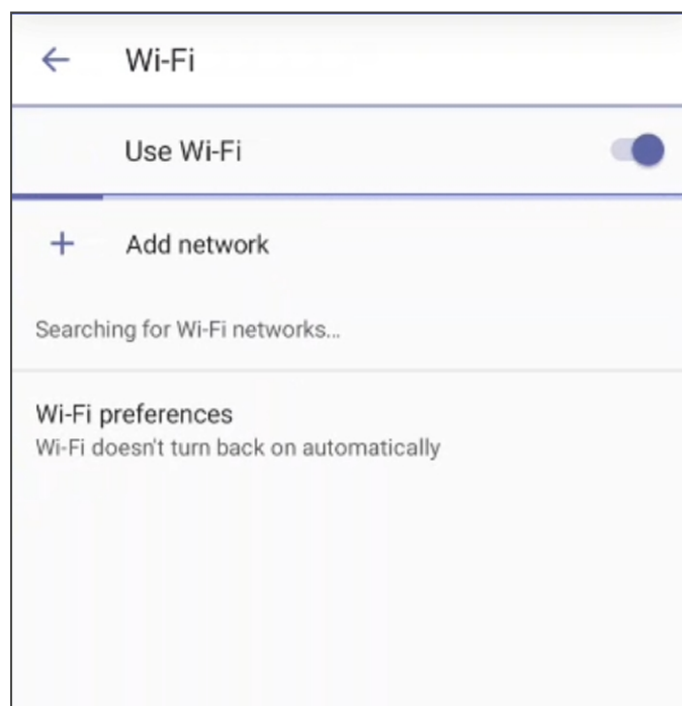


2. View a list of available connections.

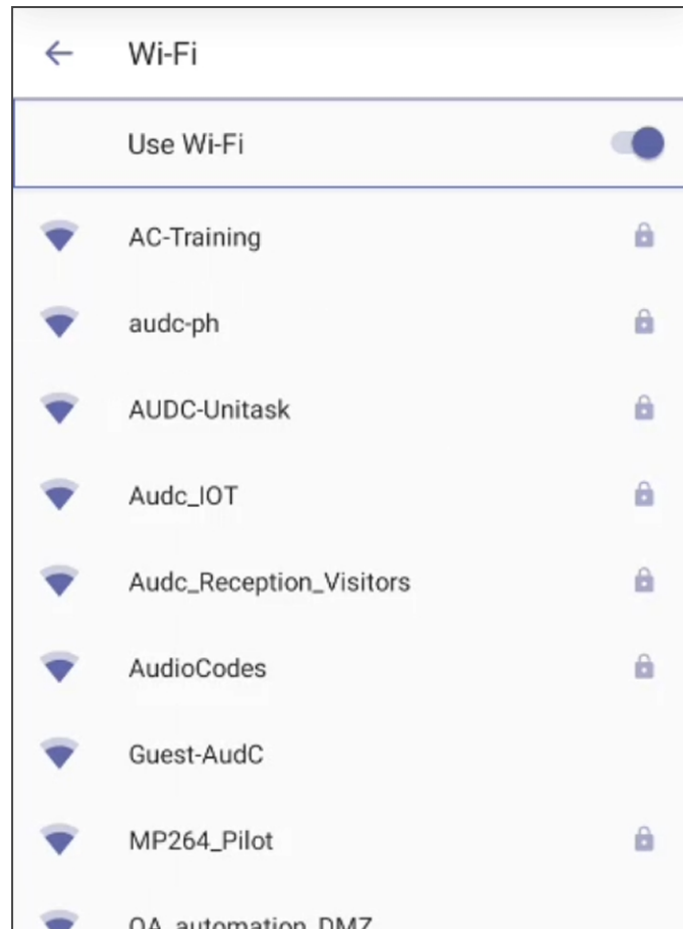

3. Select the Wi-Fi network you want and enter the password.

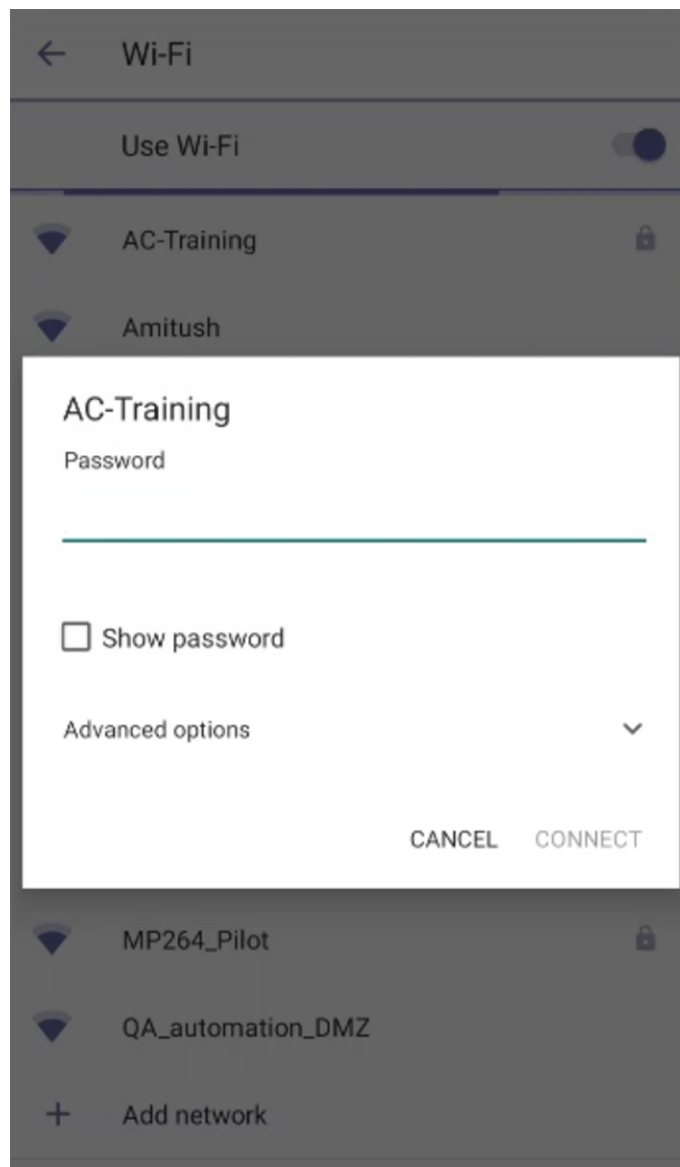

4. View the network you selected 'Connected'.

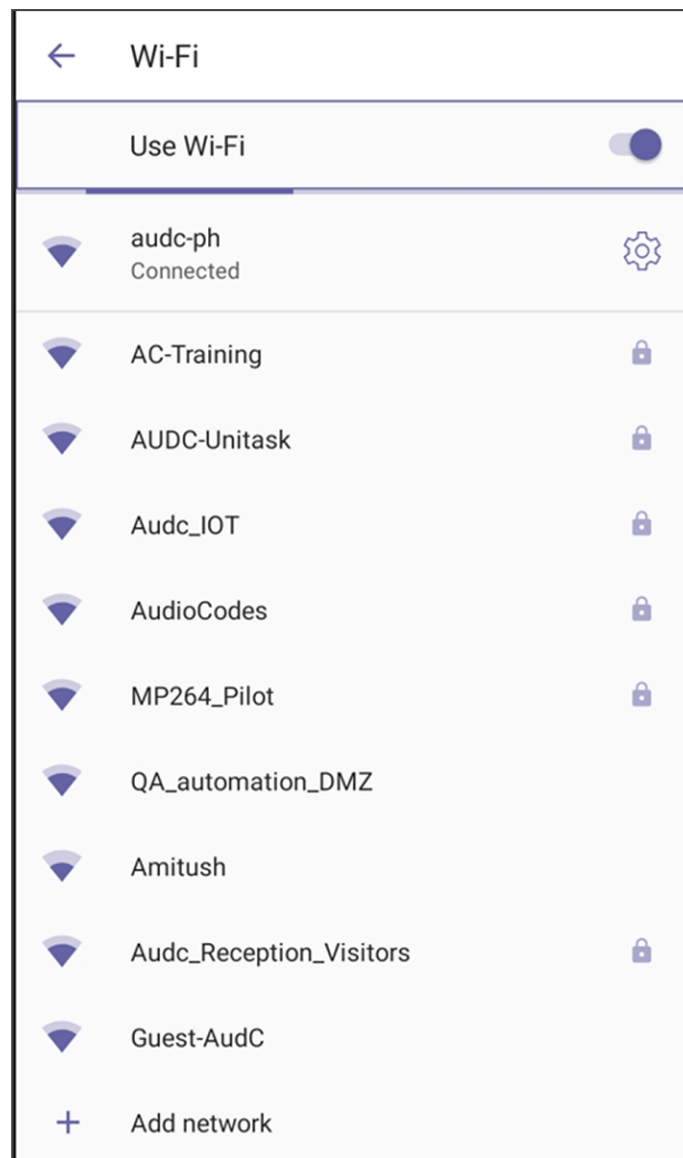

Manually Connecting to a Wi-Fi Network

➤ **To manually connect to a Wi-Fi network:**



Make sure to first disconnect your Ethernet cable. If it's connected, the device will not be able to connect to a Wi-Fi network.

1. In the Wi-Fi screen (**Settings > Wi-Fi**), click **+ Add network** and then enter the SSID of the network to add manually.

Add network

Network name
Enter the SSID

Security
None

Advanced options
Metered

Detect automatically


Proxy
None

IP settings

CANCEL SAVE

1 2 3 4 5 6 7 8 9 0
q w e r t y u i o p
a s d f g h j k l
↑ z x c v b n m ✕
?123 , . ✓

2. From the 'Security' drop-down, select one of the following security key strengths (encryption methods):

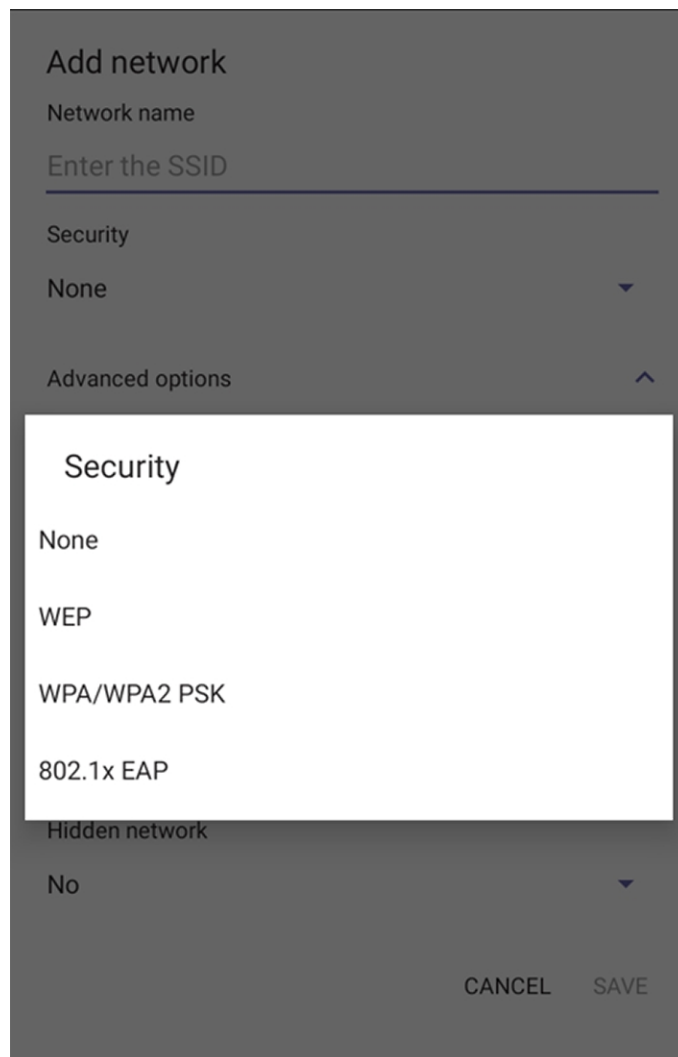


The screenshot shows the 'Add network' dialog box. The 'Network name' field is labeled 'Enter the SSID'. The 'Security' dropdown menu is open, showing options: None, WEP, WPA/WPA2 PSK, and 802.1x EAP. The 'Advanced options' section is collapsed. The 'Hidden network' dropdown menu is set to 'No'. At the bottom right are 'CANCEL' and 'SAVE' buttons.


3. Optionally meter the selected network. Expand **Advanced Options**. Leave the setting at its default value of **Detect automatically** if you don't want to meter the network. Select a **Metered** option to meter it.



'Proxy' and 'DHCP' shown in the figures below will automatically be configured by the network.

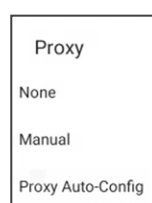


The screenshot shows the 'Proxy' settings menu with options: None, Manual, and Proxy Auto-Config.

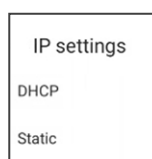

The screenshot shows the 'IP settings' menu with options: DHCP and Static.



Enabling the setting **Turn on Wi-Fi automatically** shown in the 'Wi-Fi preference' shown below allows the device to automatically connect in the future to the highest signal-quality network remembered by the device.

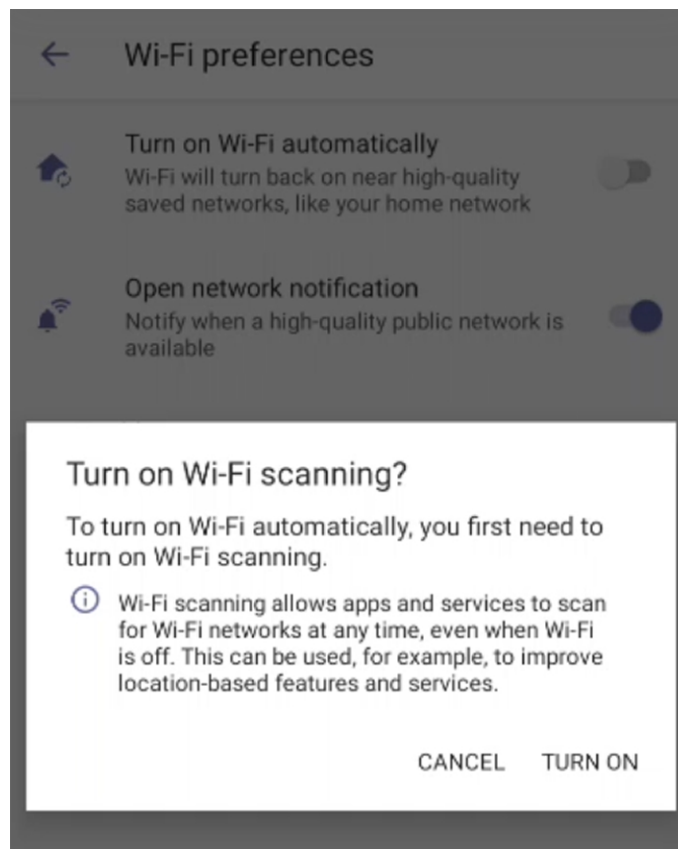

As an alternative to manually configuring Wi-Fi settings via the phone's user interface as shown above, you can configure the Wi-Fi settings described in the next table, using the Configuration File. Available from version 1.19.

Table 3-2: Configuration File Wi-Fi Settings

Wi-Fi Setting	Description
network/wireless/advanced_options/dns1	Defines the IP of the wireless DNS1.
network/wireless/advanced_options/dns2	Defines the IP of the wireless DNS2.
network/wireless/advanced_options/gateway	Defines the IP address of the wireless gateway
network/wireless/advanced_options/hidden_network	Defines the name of the wireless hidden network. See also here .

Wi-Fi Setting	Description
network/wireless/advanced_options/ip_addr	Defines the IP address of the static Wi-Fi network if you're operating with a static Wi-Fi network.
network/wireless/advanced_options/ip_settings	Used to define DHCP.
network/wireless/advanced_options/network_prefix_length	Defines the network prefix length to be used.
network/wireless/advanced_options/proxy	Defines the proxy wireless server source.
network/wireless/advanced_options/proxy/auto_config/pac_url	Defines the URL of the PAC file.
network/wireless/advanced_options/proxy/manual/exclusion_list	Defines the list of IP addresses that will be blocked.
network/wireless/advanced_options/proxy/manual/proxy_hostname	Defines the name of the proxy host.
network/wireless/advanced_options/proxy/manual/proxy_port	Defines the proxy port.
network/wireless/anon_identity	Defines the anonymous wireless users who won't be seen.
network/wireless/ca_cert	Defines which CA certificate to use.
network/wireless/client_cert	Defines which client certificate to use.
network/wireless/domain	Defines the domain name.
network/wireless/eap_method	Defines the EAP method.
network/wireless/identity	Defines the identity of the user.
network/wireless/password	Defines the password of the network.
network/wireless/phase2_method NONE,MSCHAPV2,GTC,PAP,MSCHAP	Defines the encryption method. Phase 2 applies only to the 802.1x EAP method.
network/wireless/security	Defines the security method (encryption protocol).

Wi-Fi Setting	Description
network/wireless/ssid	Defines the SSID of the network.

Configuring Wi-Fi with Hidden SSID

This feature applies to customers using Wi-Fi access points with hidden SSID. To connect to the Wi-Fi network, these customers' admins must configure their phones according to the instructions presented here.

➤ To configure Wi-Fi with hidden SSID:

1. Open the 'Settings' screen.



Settings

User



Sound



Display



Date & time



Wi-Fi



Accessibility



Bluetooth



USB



Power saving



Reboot



Security




Touch screen



Languages & input

2. Select the **Wi-Fi** option.

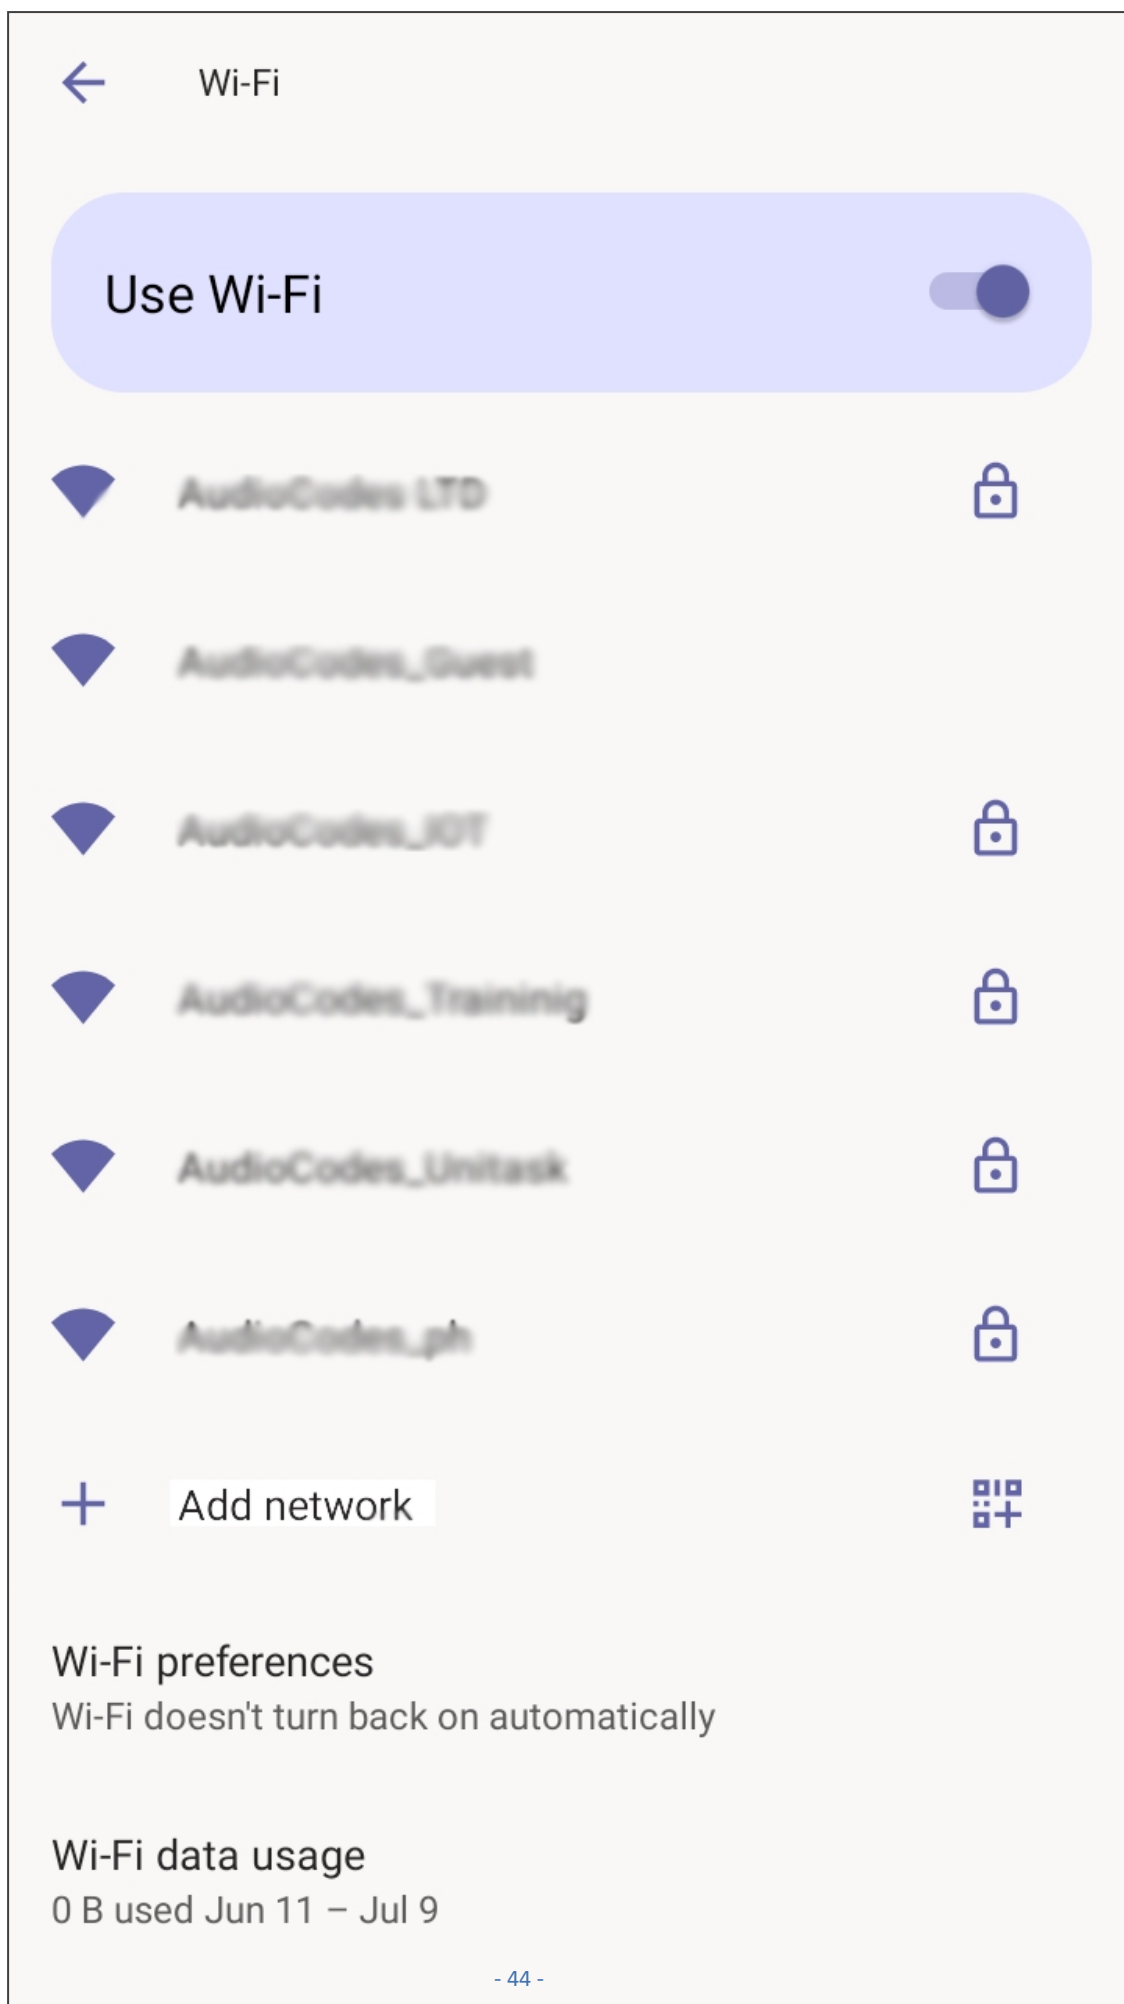

3. Select the + **Add network** option.



Add network

Network name

Enter the SSID



Security

None



Advanced options



CANCEL

SAVE

1234567890

q w e r t y u i o p

a s d f g h j k l

 z x c v b n m 

?123 , . 

4. Enter the SSID (Network name) and then select **Advanced Options**.

 Add network

Network name

Enter the SSID



Security

None



Hidden network

Yes



If your router is not broadcasting a network ID but you would like to connect to it in the future, you can set the network as hidden.

This may create a security risk because your phone will regularly broadcast its signal to find the network.

Setting the network as hidden will not change your router settings.

Metered

Detect automatically



Proxy

None



IP settings

DHCP



CANCEL

SAVE

5. From the 'Hidden network' drop-down, select **YES** as shown in the preceding figure and then **Save**.



See also [here](#) for information about the equivalent configuration file parameter 'network/wireless/advanced_options/hidden_network'.

Configuring VLAN via DHCP Option when CDP-LLDP isn't Allowed

AudioCodes Android devices can configure VLAN via a DHCP Option when CDP/LLDP isn't allowed in the organization. The following DHCP Options offer a VLAN ID: Option 43, 132, 128, 129, 144, 157, 191. If the device gets more than one of these DHCP Options, it will apply only one according to the aforementioned order of priority.

Admins must configure 'VLAN Discovery Mode' to CDP/LLDP/CDP+LLDP to get VLAN via a DHCP Option. If 'VLAN Discovery Mode' is disabled, the devices will not get VLAN via a DHCP Option.

When CDP/LLDP is allowed in the organization, devices will get VLAN via LLDP/CDP Discovery; they will not get it from a DHCP Option. LLDP/CDP Discovery takes precedence over a DHCP Option.

Valid range of VLAN ID values: 0~4094.

DHCP Option syntax is as follows:

DHCP Option 43 (vendor-encapsulated-options). DHCP Server, for MSCPEClient Vendor Class, 010 VLANID (VLAN identifier) has two types:

- VLANID=544(string), packet: 0a0400353434, VLANID=544
- VLANID=0x10(Hex), packet: 0x0a 0x02 0x00 0x10, VLANID=16

DHCP Option 128/129/144/157/191

Syntax: VLAN-A=<value>;(value=hex, octal or decimal)

Examples:

- VLAN-A=12
VLAN ID is decimal 12
- VLAN-A=0xc
VLAN ID is Hex 0xc (i.e., decimal 12)
- VLAN-A=014
VLAN ID is octal 014 (i.e., decimal 12)

DHCP Option 132

Syntax: <value>; only supports a decimal value

Example: 5

VLAN ID is 5

Restoring the Phone to Default Settings

Users can restore the device to factory default settings at any time.

Click [here](#) to view a video clip showing how to reset the AudioCodes Teams phone to its factory default settings. The principle is similar across all AudioCodes Teams phones.

The feature can be used if the admin user has forgotten their password, for example.



Restoring the phone to factory default settings brings up the phone with its original bundled Teams application.

Two kinds of restore are available:

■ [Performing a Hard Restore](#) below


■ [Performing a Soft Restore](#) below

Performing a Hard Restore

You can restore the phone's settings to their defaults when the phone is up and running.

➤ To perform a hard restore while the phone is up and running:

1. Long-press the HOLD key on the phone (more than 15 seconds); the screen shown below is displayed and the device performs a restore to default factory settings.



After the restore, the phone automatically reboots and goes through the Wizard and sign-in process.


2. Select **OK**; the sign-in screen is displayed (see [Signing In](#) on page 56 for more information).

Performing a Soft Restore

Users must log in as Administrator (**Settings > Device Administration > Login**) and then use the virtual keyboard to enter the default password of **1234** in order to perform a soft restore. The soft restore is then performed in the Debugging screen.

➤ To perform a soft restore:

1. After logging in as Administrator, you'll have Admin privileges to configure settings. Under Device Admin Settings, select the **Debugging** option.

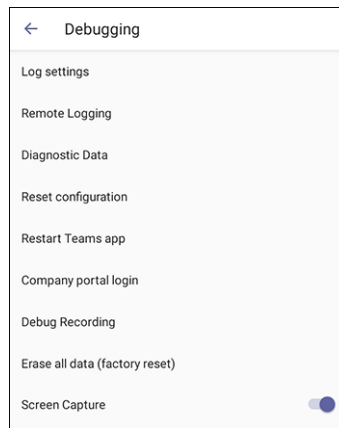


2. Select the **Erase all data (factory reset)** option; the device performs a restore to default factory settings.

Performing User Data Reset

AudioCodes Teams devices provide a **User data reset** option that is similar to factory reset except that it preserves predefined data after firmware upgrade. The option enables the data to be retained to handle devices more efficiently in scenarios where the factory reset option is inappropriate.

➤ To access the functionality:

- Navigate to **Device administration > Debugging > User data reset**.

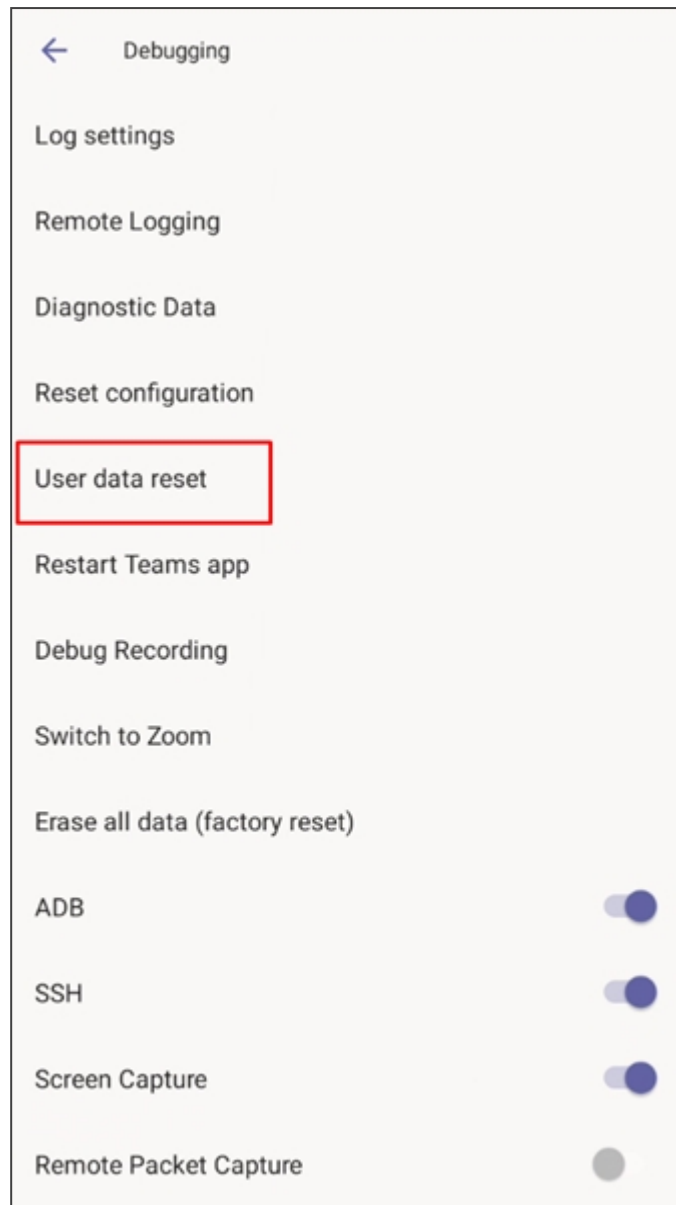


After 'User data reset', network settings are preserved.

Recovery Mode

If a phone goes into recovery mode, you can boot it using the touch screen.

➤ To boot the phone:

1. In the screen of the phone that has gone into recovery mode, swipe down or up to navigate to **Reboot to bootloader**.

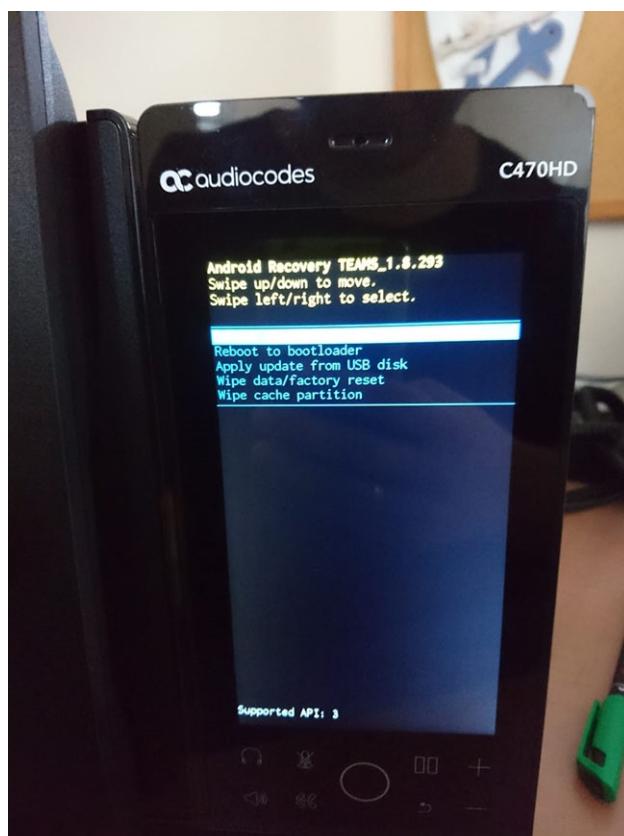

2. Swipe left or right to select the option; the phone reboots and the issue is resolved.

Locking and Unlocking the Phone

As a security precaution, the phone can be locked and unlocked. The feature includes:

- Unlock (see [Unlock](#) below)
- Automatic lock ([Automatic Lock](#) below)

Automatic Lock

Users can lock their phones as a security precaution. Configure the phone with any of the lock options before attempting to lock it. If an option isn't configured, the action won't function.


➤ To lock the phone:

- Press the back key  on the phone for at least three seconds for the device to automatically lock.


Unlock

➤ To unlock the phone:


1. When the screen shown in the figure below is displayed, touch the lock icon and swipe up

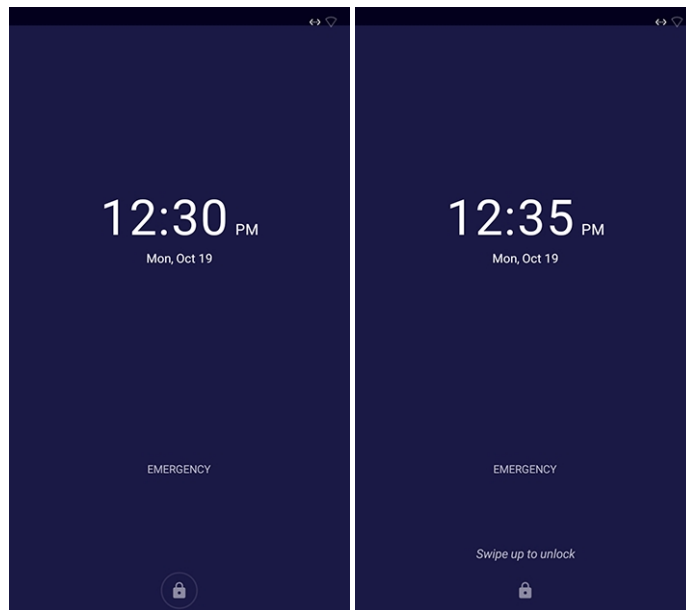

2. In the virtual keyboard that opens, start typing your unlock PIN code; the phone displays the digits as you type.

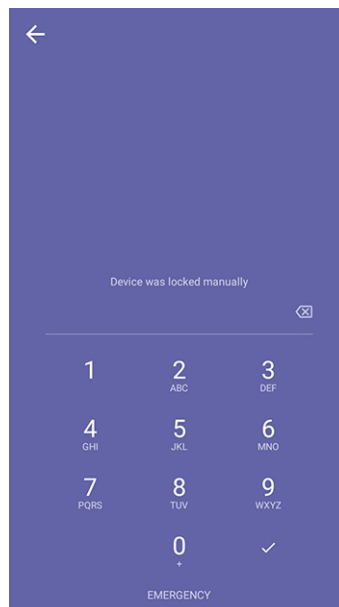

3. When the phone detects the unlock code, it unlocks.

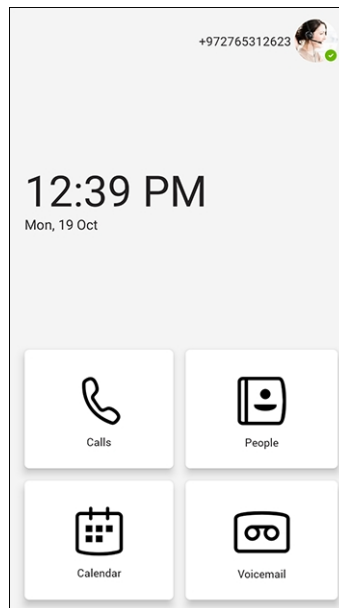

4 Teams Application

The following describes functions related to the phone's Microsoft Teams application.

Signing In



Using TeamsIPPhonePolicy, network administrators can create the following users who can then sign in to the phone:

- UserSignIn: All features are available, i.e., calls, meetings and voicemail
- MeetingSignIn: Only meetings are available
- Common Area Phone (CAP) users who can sign in to the device with a CAP account (as a CAP user) using TeamsIPPhonePolicy as follows:
 - ✓ CAP SignIn (SearchOnCommonAreaPhoneMode=Enabled): The user has calling and searching capability
 - ✓ CAP SignIn (SearchOnCommonAreaPhoneMode=Disabled): The user has calling capability

Before using the phone (after setting it up), you need to sign in for security purposes. You can sign-in with user credentials locally on your IP phone, or remotely with your PC / smart phone.

'Modern Authentication' is also supported.

Before signing in, the network administrator must make sure the phone gets the local time, using either:

- **DHCP Option 42 (NTP).** If DHCP Option 42 (NTP) is opted for, the network administrator must specify the server providing NTP for the network.
- **time.android.com.** NTP server option for Android phones.
- **time.windows.com.** The phones' default NTP server is sometimes not configured in DHCP Option 42. If not, the phones will attempt the Google NTP server. If DHCP Option 42 is not configured and the Google NTP server is blocked (for example), the phones will use this server and if it's unavailable, the server **time.nist.gov**, described next.
- **time.nist.gov.** The phones' default NTP server is sometimes not configured in DHCP Option 42. If not, the phones will attempt the Google NTP server. If DHCP Option 42 is not configured and the Google NTP server is blocked (for example), the phones will use this server (**time.nist.gov**) if the server **time.windows.com** described previously is unavailable.
- Admins can **manually define the NTP server** to comply if necessary with enterprise security requirements, if those requirements preclude using DHCP Option 42.

Manual configuration takes precedence over DHCP Option 42 and the time servers.

Two ways to manually define the NTP server are available:

- in the phone's user interface
- in the phone's .cfg configuration file, using parameter 'date_time/ntp/server_address'


See also under [here](#) for more information.

In most regions, Daylight Saving Time changes the regional time twice a year. DST Validation allows maintaining accurate time. Two options for phones to get the correct time are:

- [Recommended] If the DHCP server offers Timezone Options (100/101), the phone will set the obtained time zone and display the correct time on the screen; the time will be calculated based on an embedded Time Zone database, factoring in DST.
- If the DHCP server offers Time Offset Option only (2) and if the Timezone priority mechanism is determined to be on DHCP and not on GEOLOCATION, the phone will assign the obtained time offset to the first matched region in the list but there is a good chance it won't reflect the actual geographical location, therefore the displayed time might be incorrect in some cases. For example, if the given time offset is GMT-5 and the phone is located in Mexico, the phone will get the time (and the DST setting) from central time and not from Mexico because in GMT-5 there is also Central Daylight Time.

If the internet connectivity check fails, a 'No Internet Access' warning pops up on the phone screen.


Figure 4-1: Internet Connectivity Check - No Internet Access

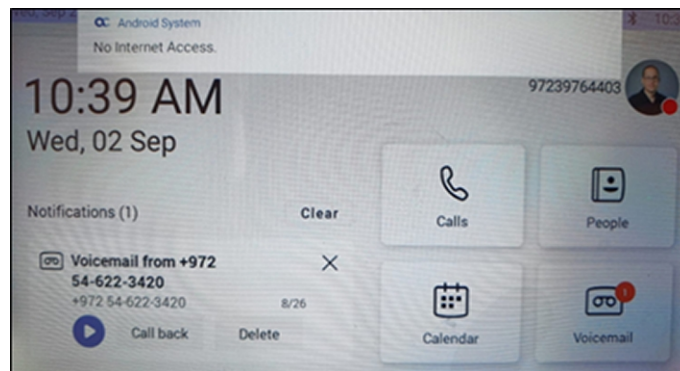


This can point to a problem that is preventing the phone from fully functioning in a Teams environment. The user can ignore the message if the Teams application is fully functioning, or can report a problem if the Teams application is not fully functioning.

➤ **To sign in:**


1. Connect the device to the network; this screen is then displayed:

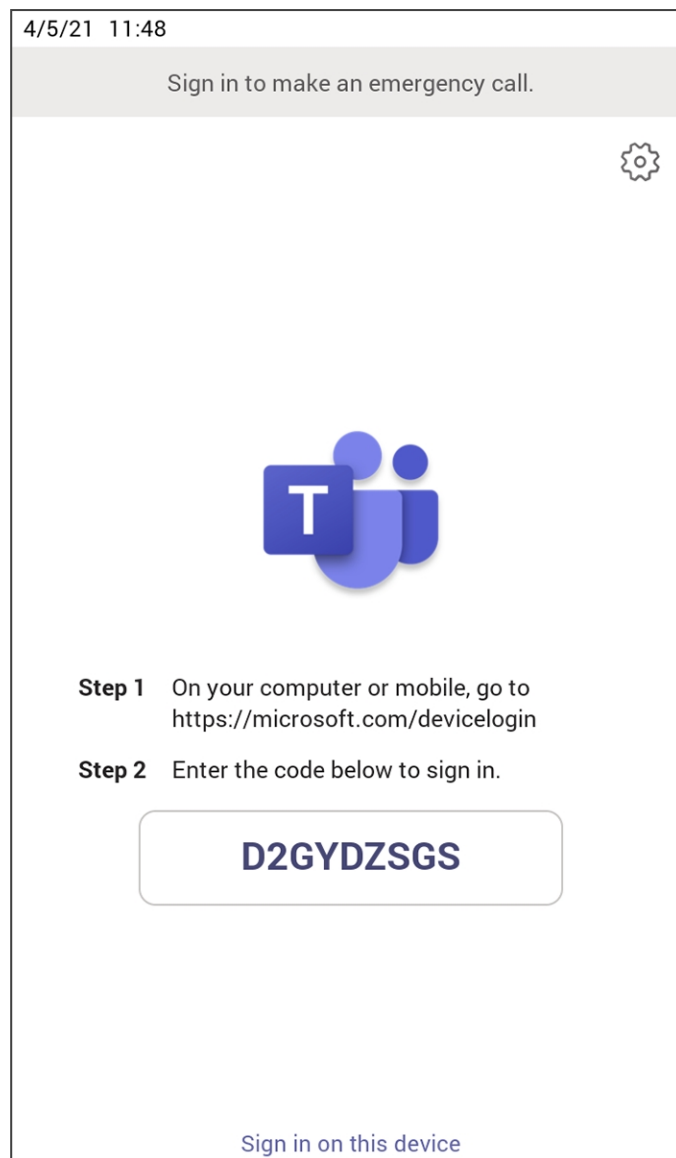


2. Open your browser and point it to **<https://microsoft.com/devicelogin>** as instructed in the preceding screen.

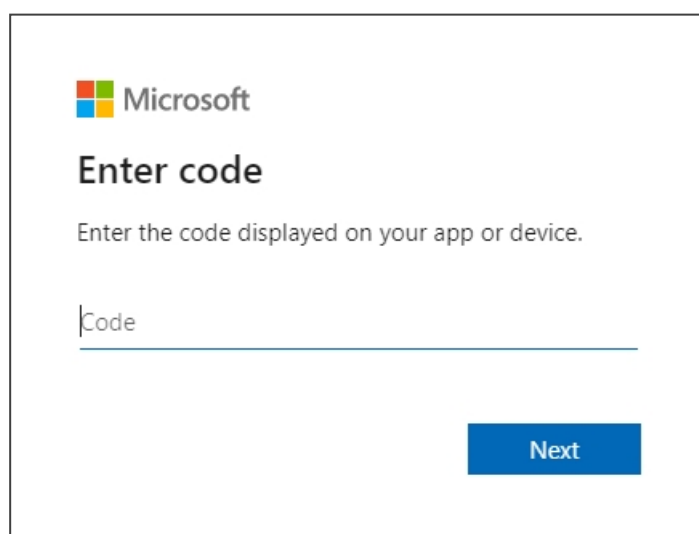

3. Enter the code and then click **Next**.

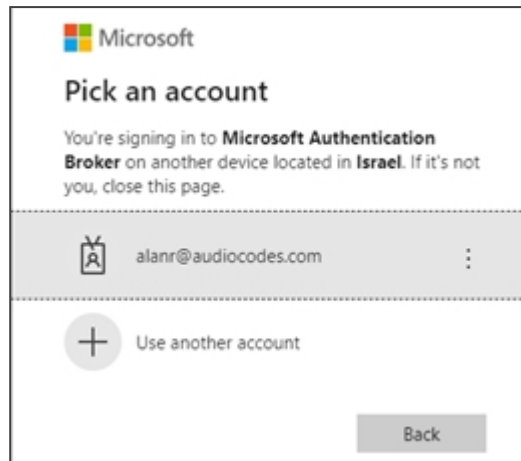


4. Click the account.

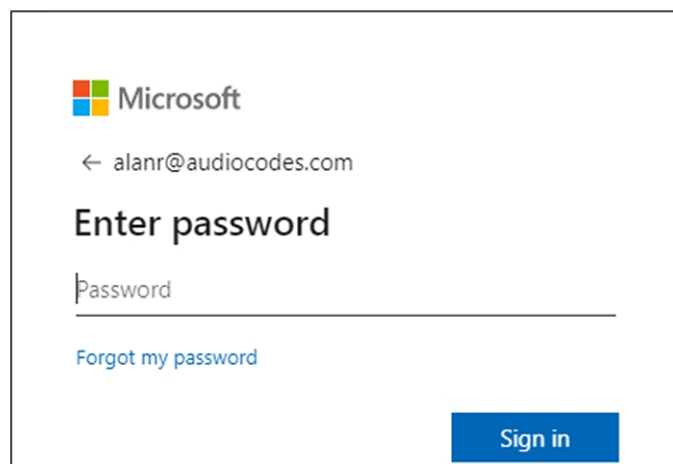

5. Enter your password (it's the same password as the Windows password on your PC) and then click **Sign in**.



6. Close the window shown in the preceding figure.
7. Observe that the phone returns to the initial code screen. In that screen, select **Sign in on this device**.

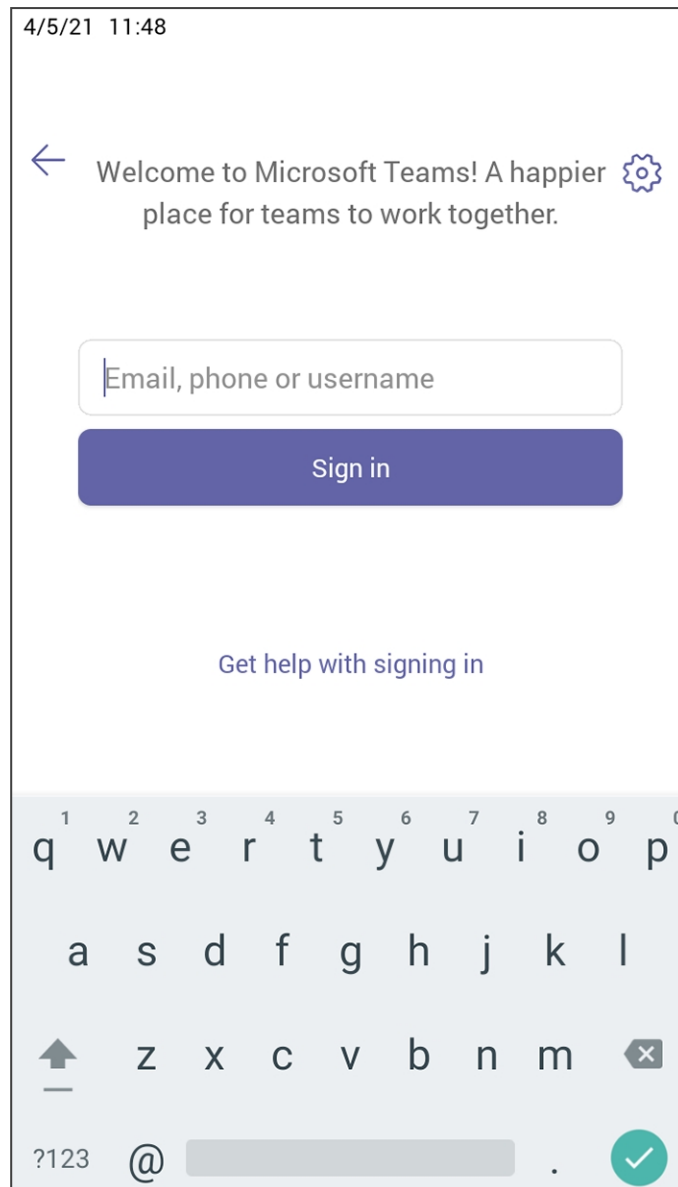


8. Select the 'Email, phone or username' field; a virtual keyboard pops up. Enter one of them and then choose **Sign in**. The 'home' screen opens.
 - If you opt to **Sign in from another device**, complete authentication from your PC or smart phone. This is recommended if you're using Multi Factor Authentication (MFA).



The phone supports a strong password check in order to log in as Administrator. The feature strengthens security. The default password:

- must be changed before accessing the device via SSH
- can be changed per device in the phone screen (the user first enters the default password and is then prompted to modify it to a more complete password) or via bulk configuration of multiple devices using Microsoft's TAC or AudioCodes' Device Manager
- Criteria required for a strong password are provided: The password must:
 - ✓ be greater than or equal to 8 in length
 - ✓ contain one or more uppercase characters
 - ✓ contain one or more lowercase characters
 - ✓ contain one or more numeric values
 - ✓ contain one or more special characters

Figure 4-2: Sign-in from PC / Smart Phone

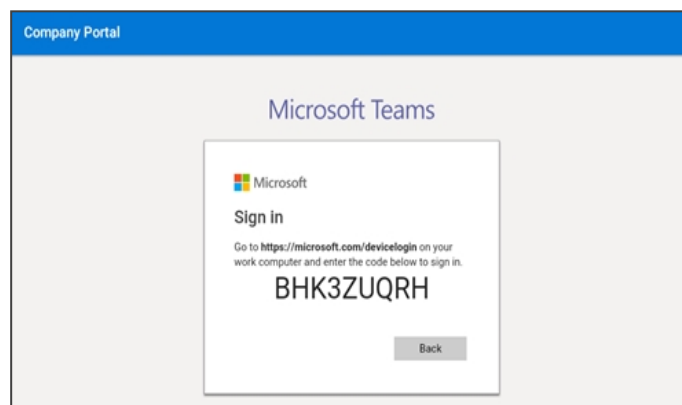


- ◆ In the browser on your PC or smart phone, enter the URL indicated in the preceding screen and then in the phone's Web interface that opens, perform sign-in (as noted previously, this option is recommended if using MFA).



LLDP-MED (Link Layer Discovery Protocol – Media Endpoint Discovery) is a standard link layer protocol used by network devices to advertise their identity, capabilities, and neighbors on a local area network based on IEEE802 technology, principally wired Ethernet. Teams devices connected to the network via Ethernet will dynamically update location information for emergency calling services based on changes to network attributes including chassis ID and port ID.

Multi-Cloud Sign-in

For authentication into specialized clouds, users can choose the 'Settings' gear icon on the sign-in page to see the options that are applicable to their tenant.

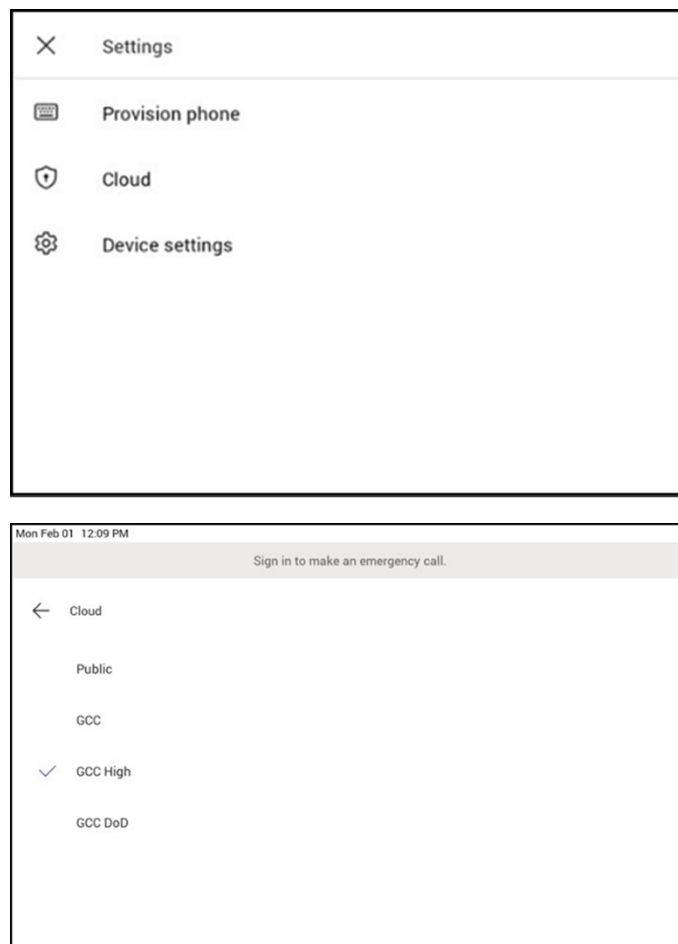


Remote Provisioning and Sign-in from Teams admin center

Network admins can remotely provision and sign in to a Teams device. To provision a device remotely, the admin needs to upload the MAC IDs of the devices being provisioned and create a verification code. The entire process can be completed remotely from the Teams admin center.

➤ Step 1: Add a device MAC address

Provision the device by imprinting a MAC address on it.

1. Sign in to the Teams admin center.
2. Expand **Devices**.
3. Select **Provision new device** from the **Actions** tab.

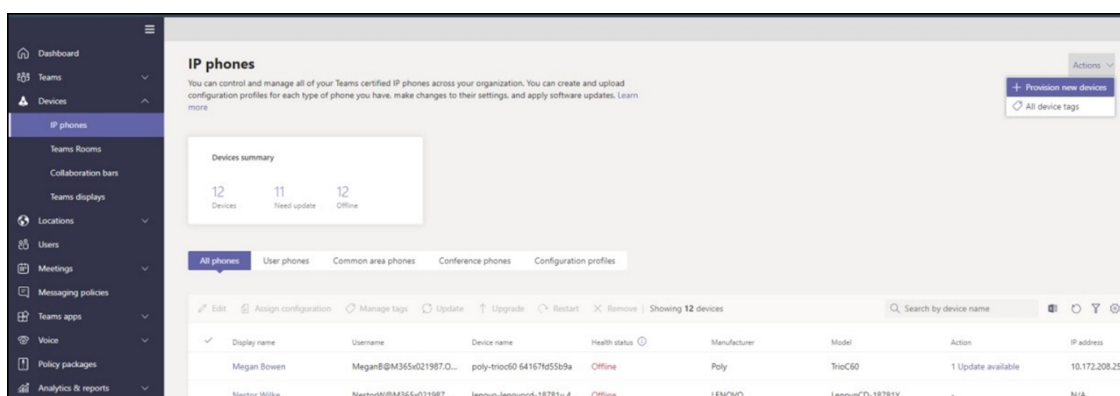

In the 'Provision new devices' window, you can either add the MAC address manually or upload a file.

Manually add a device MAC address

1. From the **Awaiting Activation** tab, select **Add MAC ID**.
2. Enter the MAC ID.
3. Enter a location, which helps technicians identify where to install the devices.
4. Select **Apply** when finished.


Upload a file to add a device MAC address

1. From the **Awaiting Activation** tab, select **Upload MAC IDs**.
2. Download the file template.
3. Enter the MAC ID and location, and then save the file.
4. Select the file, and then select **Upload**.

➤ Step 2: Generate a verification code

You need to generate a verification code for the devices. The verification code is generated in bulk or at the device level and is valid for 24 hours.


From the **Awaiting Activation** tab, select an existing MAC ID. A password is created for the MAC address and is shown in the **Verification Code** column.

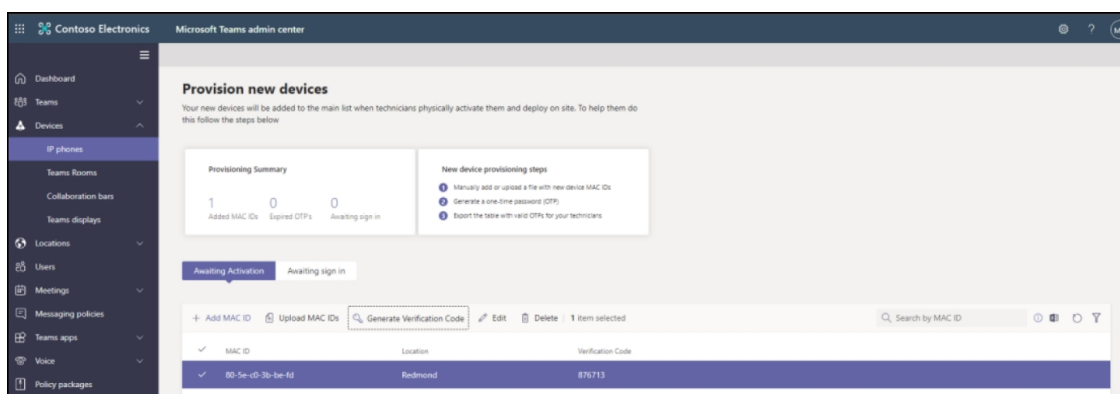


You'll need to provide the list of MAC IDs and verification codes to the field technicians. You can export the detail directly in a file and share the file with the technician who is doing the actual installation work.

➤ **Step 3: Provisioning on the device**

Once the device is powered up and connected to the network, the technician provisions the device by choosing the 'Settings' gear on the top right of the new 'Sign in' page and selecting **Provision phone**.

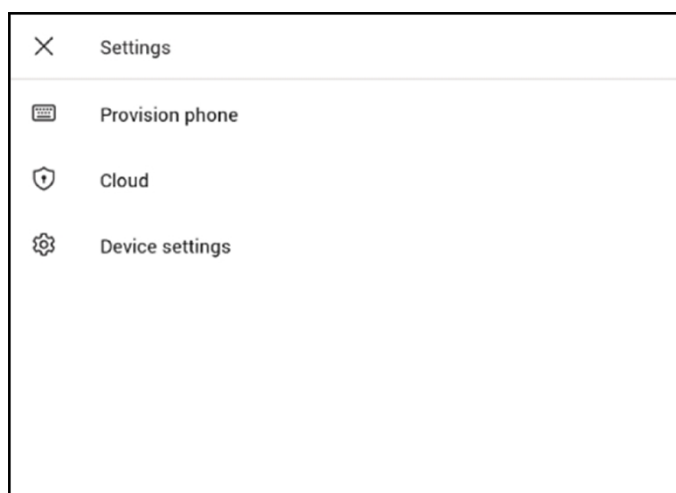

The technician is then expected to enter the device-specific Verification code that was provided in the Teams admin center on the phone's user interface. Once the device is provisioned successfully, the tenant name will be available on the sign in page.

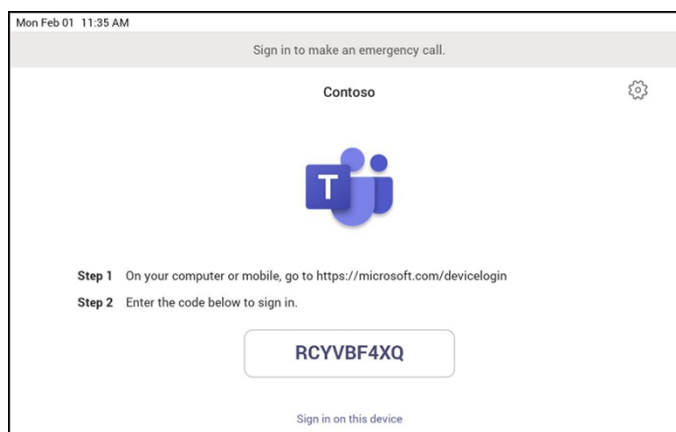

➤ **Step 4: Sign in remotely**

The provisioned device appears in the Awaiting sign in tab. Initiate the remote sign-in process by selecting the individual device.

1. Select a device from the **Awaiting sign in** tab.
2. Follow the instructions in **Sign in a user**, and then select **Close**.

Sign in a user

Selected Phone

Y8

80-5e-c0-3b-be-fd (MAC ID)

Redmond

Most recent signed in user

NW

Nestor Wilke

Redmond



To remotely sign in the user of a device to that selected device, follow the steps below.

1. Open URL
<https://microsoft.com/devicelogin>
2. Paste the code
F9NZYVE3G
3. Select user
As you select a user, we'll remotely sign them in to this device
4. Return to Microsoft Teams Admin Center
You're all set


Note: A signed out device can only be signed in as a shared device, i.e. conference or common devices are IP Phone. Remote sign in doesn't support an employee's personal credentials. All available user accounts can be found in Azure Active Directory.

Close

The tenant admin is expected to complete authentication on the device from any browser or smartphone.

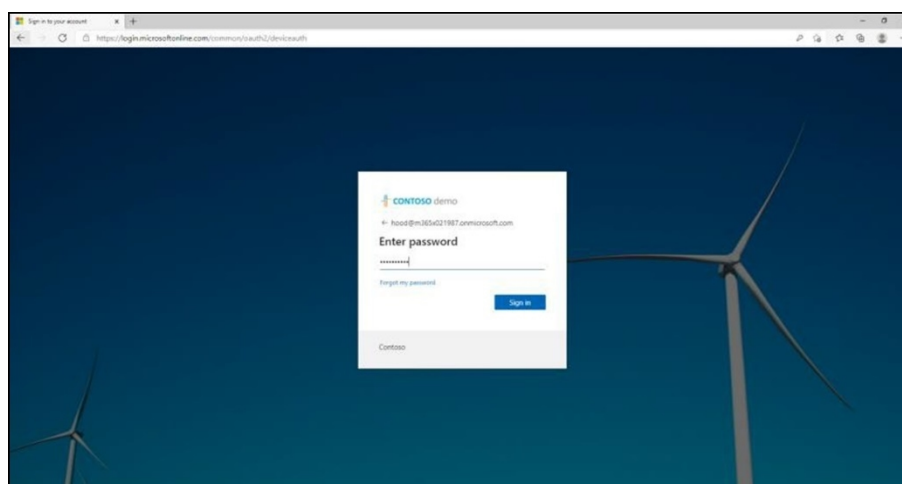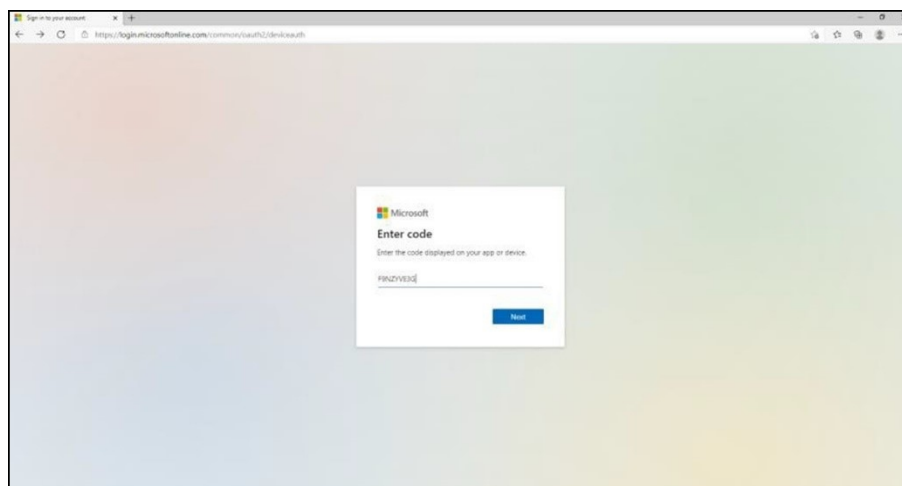


When the tenant admin is signing in from Teams Admin Center, the user interface on the device is blocked to prevent other actions on the phone.

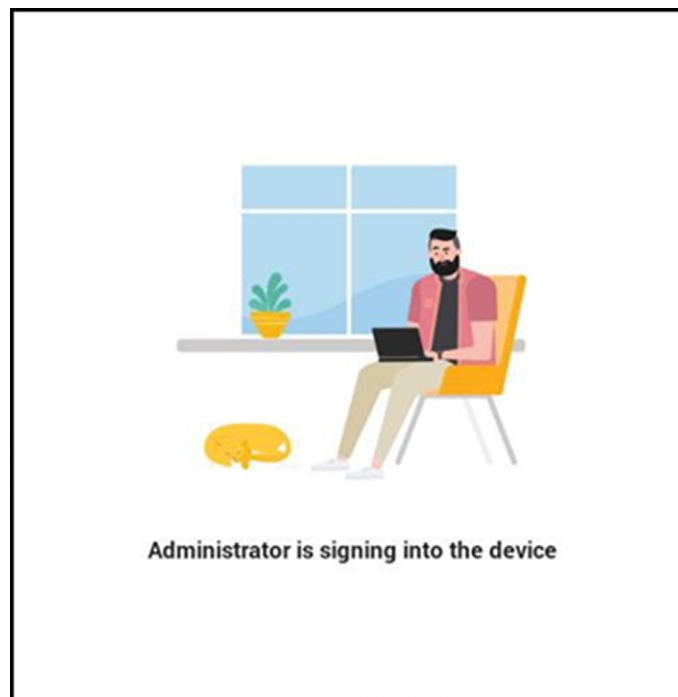


Getting Acquainted with the Phone Screen

The following gets you acquainted with the phone's user interface. The figure below shows the phone's home screen, aka the phone's idle screen.

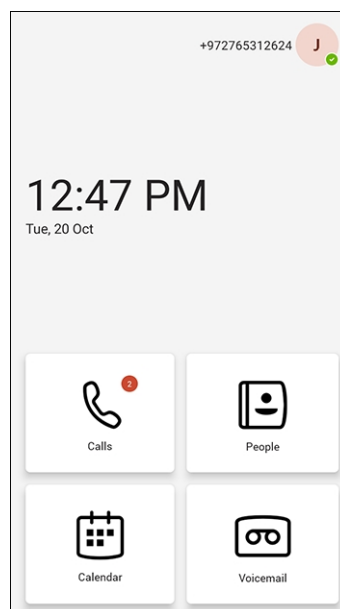


The following figure shows the phone's Calls screen.

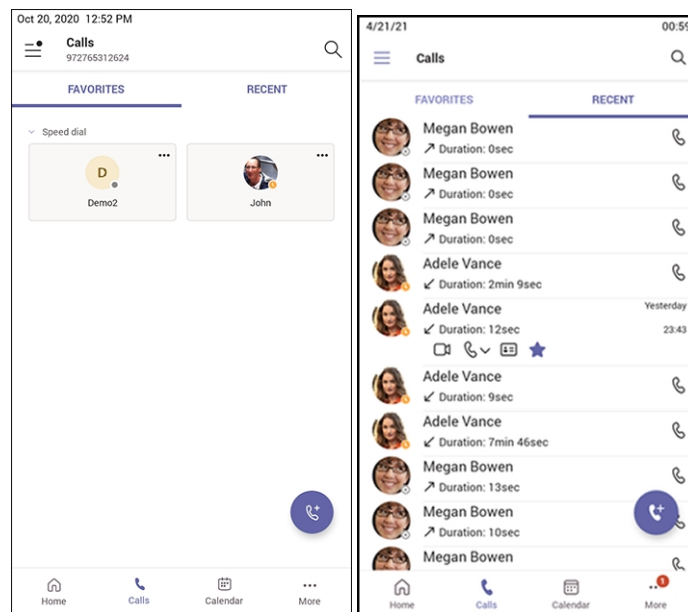

The following table describes the phone's home screen.

Item	Description
	The phone menu. Select it to open the menu shown in the figure following this table.
Calls	Select the tab to open the Calls screen. The screen shown in the figure preceding this table opens.
People	Select the tab to open the People, shown under Using the People Screen on page 81 opens. Allows you to easily connect and collaborate with teammates, colleagues, friends and family. Through this screen, you can see all your contacts and create and manage contact groups to organize your contacts. The screen provides a simple user experience and aligns with the contacts on the Teams desktop client. If a contact has multiple numbers, the phone screen allows the user to select from a drop-down menu the intended contact method.
Calendar	Select to open the Calendar screen, shown under Setting up a Meeting on page 80 opens.
Voicemail	Select the tab to open the Voicemail screen, shown under Accessing Voicemail on page 82 opens.

The following figure shows the user's presence status screen.

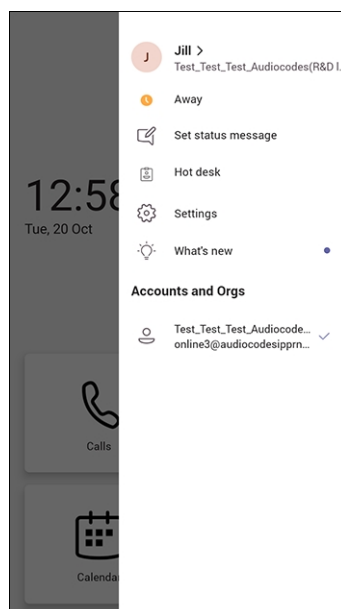

Use this table as reference.

Item	Description
Presence status	See Changing Presence Status on page 74 for more information.

Item	Description
Set status message	See Setting Status on page 72 for more information.
Connect a device	See Connecting a Device for more information.
Hot desk	See Hot Desking on page 73 for more information.
Settings	See Configuring Teams Application Settings on page 77 for more information.
Sign Out	See Signing Out on page 83 for more information.


Enabling Google Talkback

AudioCodes' Native Teams Android devices feature Google TalkBack, an accessibility service that allows blind and low-vision users to interact with their devices by giving them spoken feedback so they can use their devices without looking at the screen.


The feature improves the experience of these users.

➤ To enable the feature:


1. Open the Accessibility screen (**Settings > Device settings > Accessibility**).

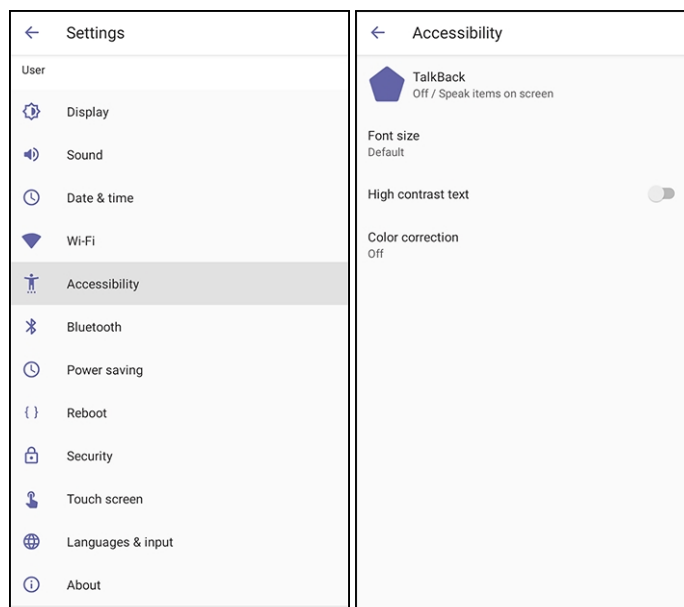

2. Select the **TalkBack** option shown in the preceding figure.

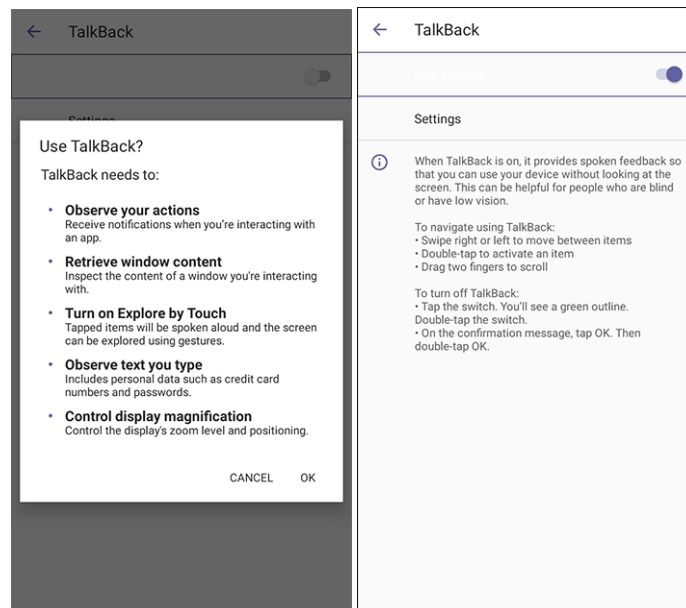


3. Click **OK** to switch the feature on as shown in the preceding figures. Listen to the audio tutorial that begins playing. The tutorial explains how to interact with the device.

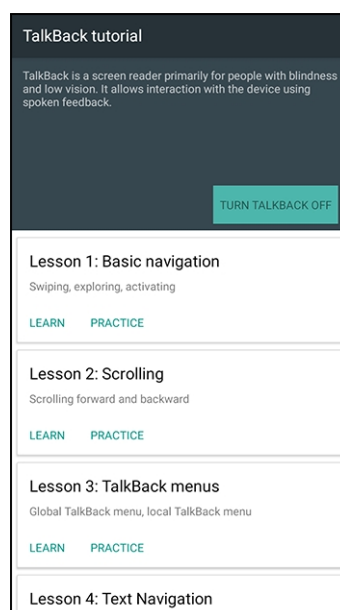




- After TalkBack is switched on, operations are performed by *touching to select* and then *double-touching to activate*.
- To turn up the volume, touch the **+** key on the phone and in the volume pop-up shown in the figure below, touch the slider to select it; audio announces what level you're at. Double-touch the slider at the level you want.

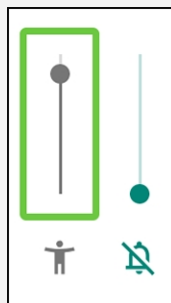


- To switch off TalkBack, re-access the Accessibility screen and then switch the feature off the same way.

4. After the tutorial, from the 'home' screen open (for example) the Calls screen; audio announces what you did; the Calls screen opens.

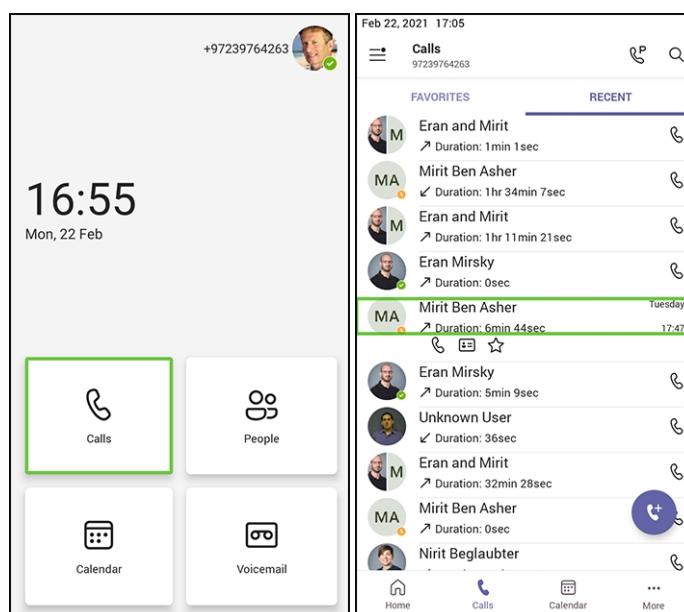

➤ **To interact with the Calls screen:**


1. In the Calls screen shown in the preceding figure, select the **Recent** tab; audio informs you what you selected.
2. Select a listed call as shown in the preceding figure; audio informs you whether the call was outgoing or incoming and to / from whom it was made and the day on which it was made.
3. Double-touch the listed call; three icons below it appear.

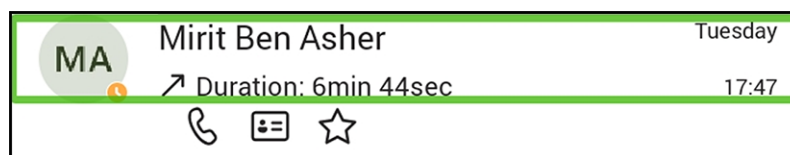

4. Select the phone icon; audio informs you that you can activate the person's profile. Double-touch the icon; the person's profile screen opens displaying their name, position, email, hyperlinked work phone number and hyperlinked mobile phone number.
5. Select the star icon; audio informs you that you can add to Favorites; double-touch to activate it.

Opting in or out of Call Queues

Call queue agents can opt out of call queues or opt in based on settings available on the Teams phones.

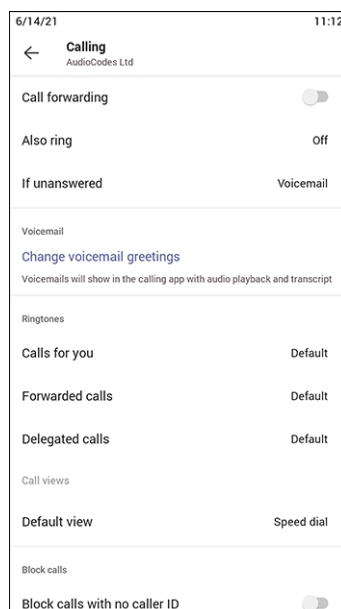


Setting Status


You can set a status message to add more substance to your presence status. For example, a status message such as 'Working from home' adds more substance to the presence status of 'Available'.

➤ To set presence status:

1. In the home screen, select the user (avatar) picture.

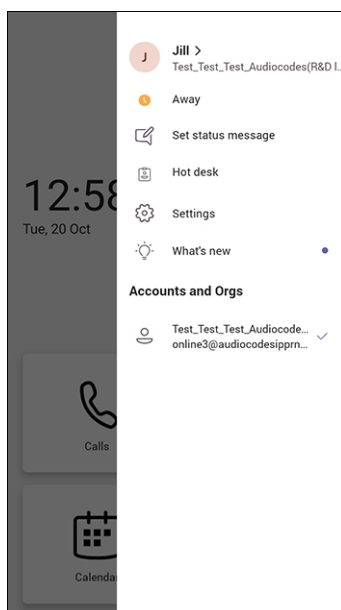

2. Select **Set status message**.

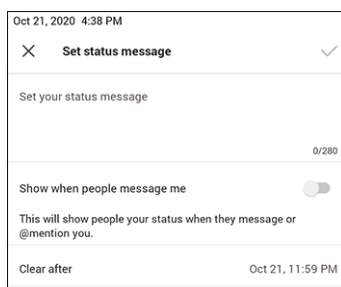

3. Select the field under 'Set status message' and in the Virtual Keypad that pops up, type in the message you want to show other people, for example, 'Working from home'. The text you type in will replace 'Set status message' in the screen shown in the preceding figure.
4. Optionally, switch on 'Show when people message me'. When people message or @mention you, they'll view the status message you set.
5. Select 'Clear after' and choose when you want the message to stop displaying. Options are:
 - Never clear
 - 1 hour
 - 4 hours
 - Today
 - This week
 - Custom (set a date and time in the calendar that pops up)

Hot Desking


The hot desk feature allows a user to sign in to a phone that is already signed in to by another user without signing out the original user to whom the phone was assigned for primary use.

Any phone in the enterprise network that is enabled with this feature allows any user in the enterprise to temporarily sign into it, make calls, attend meetings and access their calendar and call log. After finishing using these phone functions, the user can sign out to end their hot desk session; call logs and history will automatically be removed from the device.

➤ **To set up a phone as a shared device for hot desking:**

1. Select the user's photo or avatar picture, and then from the menu, select the **Hot desk** option. Alternatively, in the Calls screen (or People screen, Calendar screen or Voicemail screen), select the phone menu  and then select **Hot desk**.

Figure 4-3: Hot desk

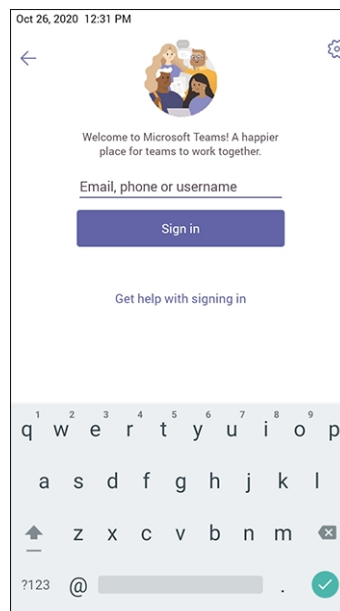

2. Use the Virtual Keyboard to type in your email, phone or user name and then select **Done**; the phone is enabled for hot desk.

Changing Presence Status


You can assign a presence status to control whether you want people to contact you or not. By default, your status is based on your Microsoft Teams server.



- After n minutes (configured in the Teams server by your administrator), presence status automatically changes to 'Inactive'.
- n minutes after this (also configured in the Teams server by your administrator), presence status automatically changes to 'Away'; all calls are then automatically forwarded to the Response Group Service (RGS) if it is configured.

➤ **To change presence status:**

1. In the home screen, select the user (avatar) picture or in the Calls and Calendar screen, select .

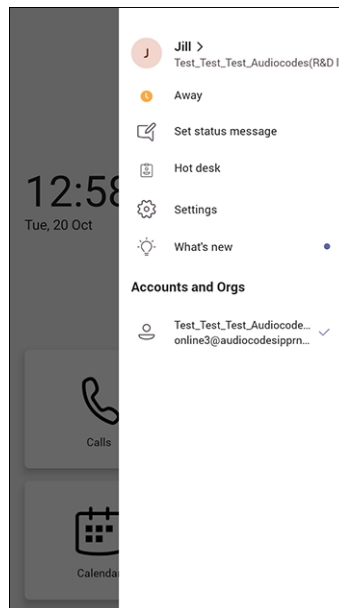

2. Select the current status displayed and from the drop-down list of statuses then displayed, select the status to change to. Use this table as reference.

Table 4-1: Presence Statuses


Icon	Presence Status	Description
	Available	You're online and available for other contacts to call.
	Busy	You're busy and don't want to be interrupted.
	Do not disturb	You don't want to be disturbed. Stops the phone from ringing when others call you. If DnD is activated, callers hear a tone indicating that your phone is busy; the call is blocked and your phone's screen indicates 'Missed Calls'.
	Be Right Back	You'll be away briefly and you'll return shortly.
	Away	You want to hide your status and appear to others you're currently away.
	Offline	You're going on vacation (for example).
	Reset status	Resets the status.

Enabling Power Saving

This feature automatically activates power-saving mode during non-working hours. By default, during off hours, the phone's uppermost-right Message Waiting Indicator (MWI) / Presence LED is switched off and the LCD is dimmed. This conserves energy and minimizes light disturbance, providing a seamless and efficient user experience.

➤ To enable this feature:

- In the phone screen, navigate to **Device Settings > Enable power saving**.

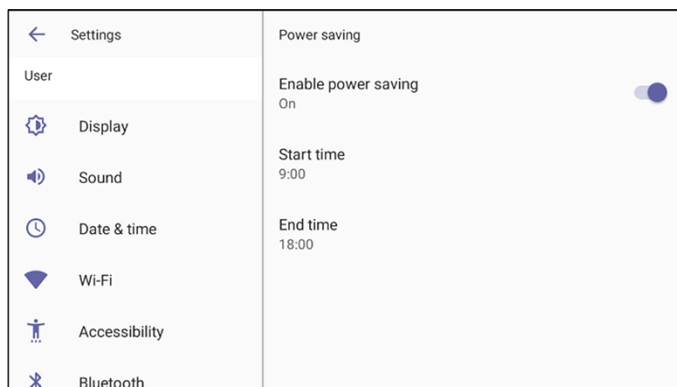

- By default, the feature is enabled.
- The feature is based on off work hours and sleep timeout.

The Configuration File parameters below also support the feature. They can be synchronized with the settings in the phone screen.

- `general/power_saving` (Used to enable or disable power saving) (Default: 1)
- `office_hours/end`
- `office_hours/start`

Enabling Voicemail Support on CAP Users

The instructions here show how to enable voicemail on common area phone users. Voicemail can be enabled from the phone or from the TAC. The **Advanced calling** setting must be enabled.


➤ To enable voicemail from the phone:

1. In the phone screen, select the avatar.
2. Navigate to **Device Settings > Device administration**.
3. Enter the password **1234**.
4. Access 'Teams Admin Settings' and select **Calling**.
5. Enable **Advanced calling**.

6. Restart the Teams app as prompted.

➤ **To enable voicemail from the TAC:**

1. Under 'Teams Devices' in the Microsoft Teams admin center, select **Phones**.
2. Go to **Configuration Profiles**; in the profiles there is an option under 'Calling settings' to enable **Advanced calling**.

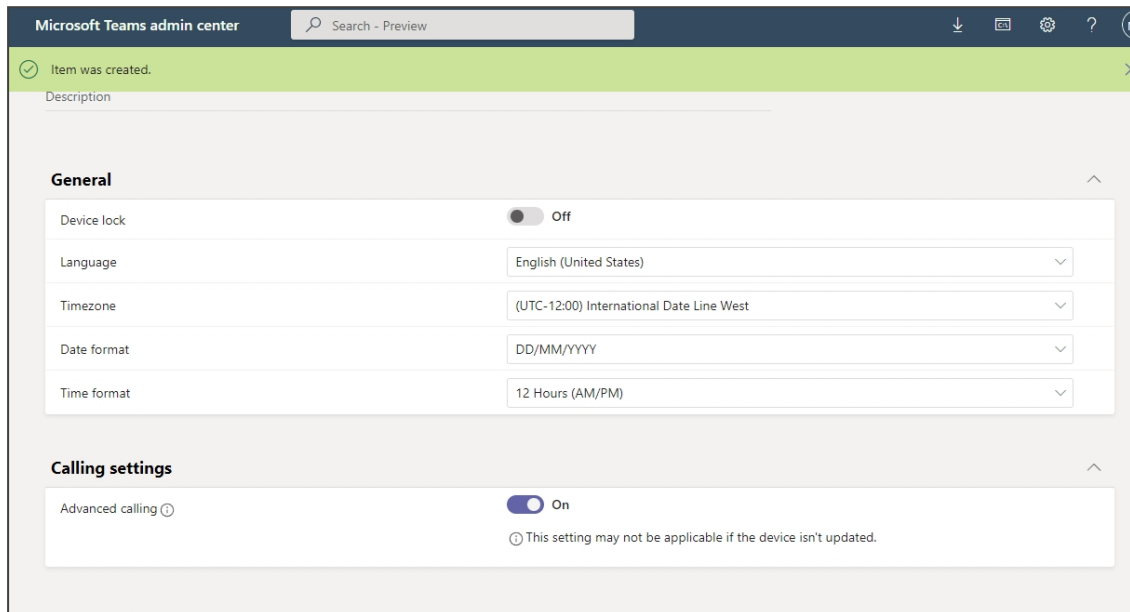



Configuring Teams Application Settings


The following describes the Teams application's settings. In the home screen, select the user picture / avatar. Alternatively, in the Calls screen (or People screen, Calendar screen or Voicemail screen), select the phone menu  and then the **Settings** option.


Use this table as reference:

Table 4-2: Idle Screen Description

Item	Description
Dark Theme	Dark Theme can be enabled to suit user preference. To enable Dark Theme: 1. Drag the 'Dark Theme' setting slider to the 'on' position; the following prompt is displayed: 2. Choose Restart and then verify after the Teams application

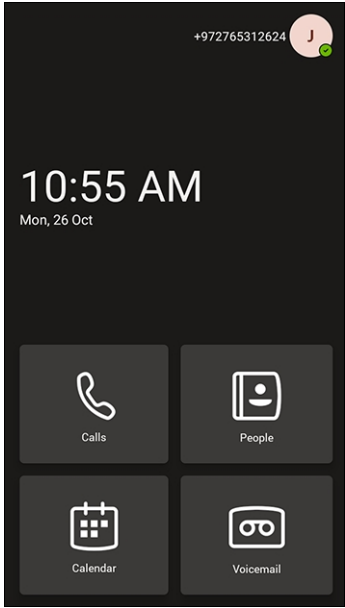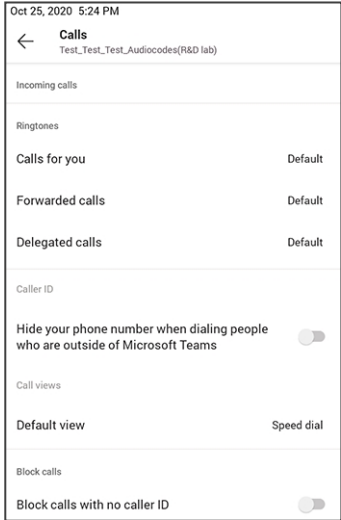
Item	Description
	restarts that all screens (Teams application and Device Settings) are dark themed: 
Profile	Opens the user's email address and photo / avatar picture.
Calling	Opens the Calls screen.  Incoming Calls ■ Call forwarding. Enables automatically redirecting an incoming call to another destination. ■ Forward to. Only displayed if the previous setting is enabled. Defines the destination to which to forward incoming calls. ■ Also ring. Only displayed if 'Call forwarding' is disabled. Select either Off, Contact or number, or Call group.

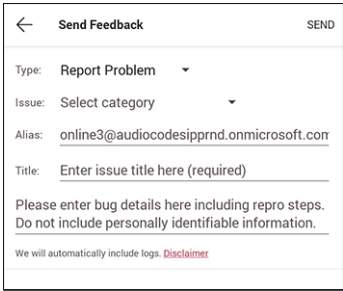Item	Description
	■ If unanswered. Only displayed if 'Call forwarding' is disabled. Defines the destination to which to forward unanswered incoming calls. Select either Off, Voicemail, Contact or number, or Call group. Caller ID ■ Hide your phone number when dialing people who are outside of Microsoft Teams Block Calls Block calls with no caller ID. Enables blocking calls that do not have a Caller ID.
Home screen	Default: On (enabled). Slide left to switch off (disable) and block the home screen from view; the Calendar screen takes its place.
Notifications	Default: On (enabled). Allows notifications to be displayed. Slide left to switch off (disable); notifications will not be displayed.
Report an issue	Microsoft Teams application's 'Report an issue' option opens the Send Feedback screen.  'Report an issue' can alternatively be triggered by simultaneously pressing the Vol up + Vol down keys. This can help the user to report an issue even if the application is stuck and does not allow the user to report the issue via the Application > Settings tab.
About	Opens the About screen.

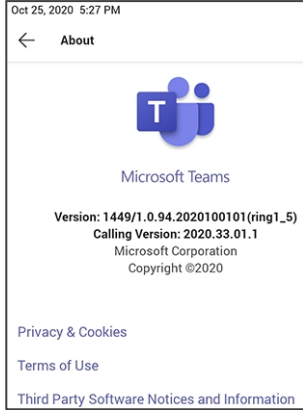Item	Description
	
Sign out	Lets you sign out of the phone application as one user and optionally sign in again as another user. See Signing Out on page 83 for detailed information.
Device Settings	Opens the [Device] Settings screen. See Configuring Device Settings on page 18 for detailed information.

Setting up a Meeting

From the phone's home screen, select **Calendar**.

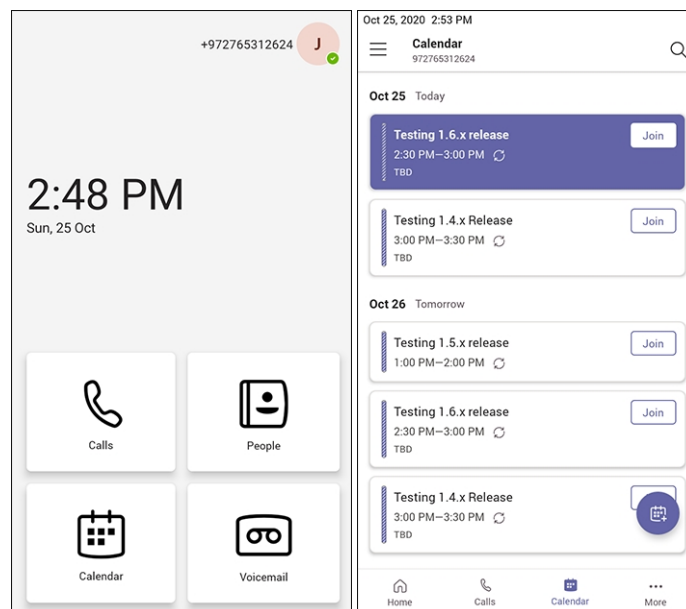

You can join calendered meetings and / or you can select  to add a new event to the calendar.


See [here](#) for a video clip demonstrating how to join a scheduled meeting.

Using the People Screen

The People screen allows users to easily connect and collaborate with teammates, colleagues, friends and family. Through the screen, users can see all their contacts and create and manage contact groups to organize their contacts. The screen provides a simple user experience and aligns with the contacts on the Teams desktop client. In addition to accessing the People screen from the menu, the screen can also be accessed from the hard CONTACTS button on the phone.




If a user creates a contact within Microsoft Outlook, their information appears under the People app on the phone screen. Contacts in Microsoft Outlook are available in read-only mode. While only phone numbers currently appear, users can search on the phone for contacts and easily call the people they may email or meet with, using Outlook.

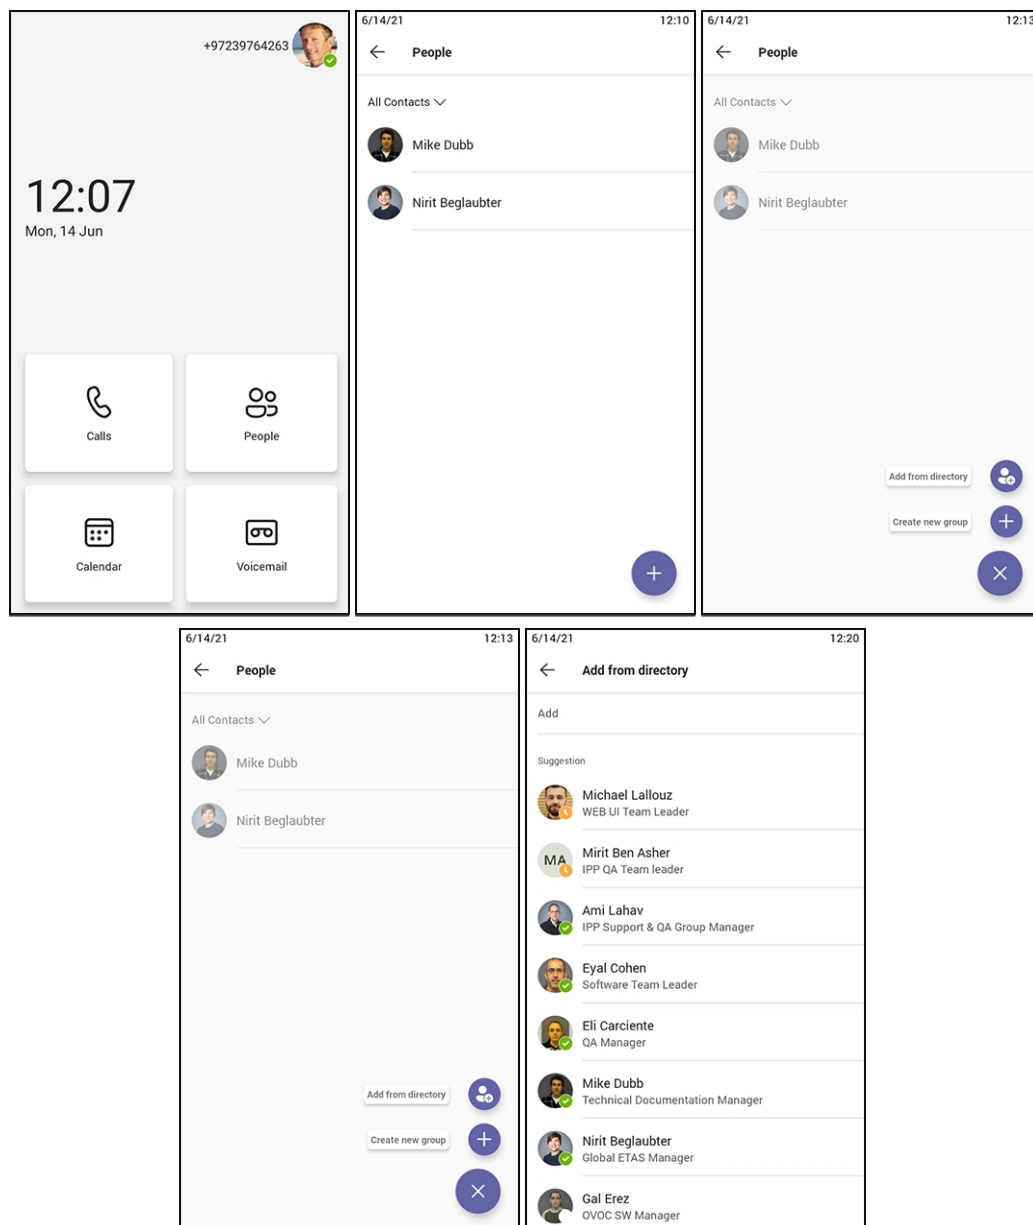

Accessing Voicemail

From the phone's home screen, select the **Voicemail** tab.

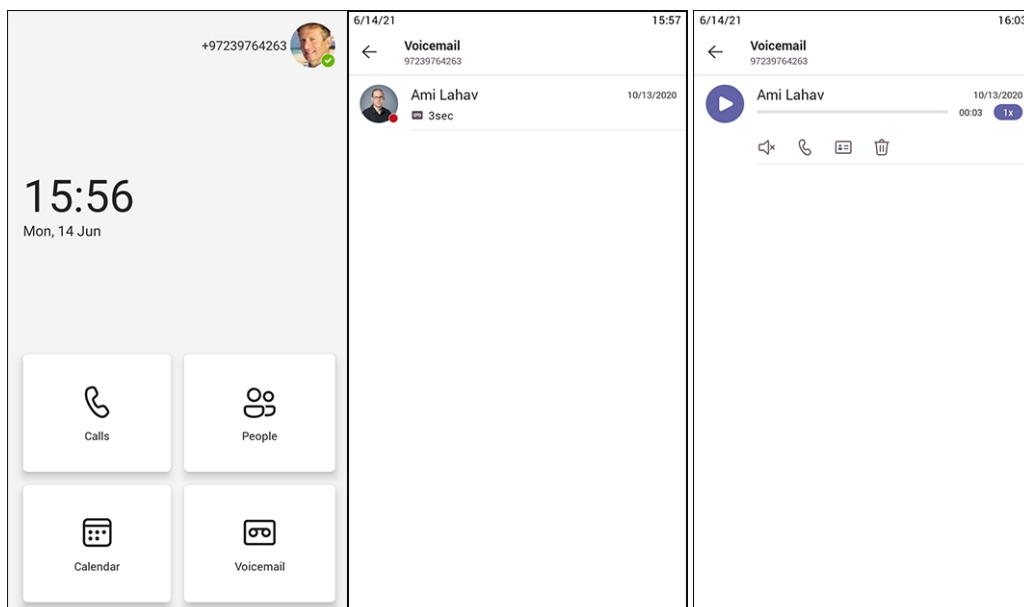

Using Audio Devices

Use one of the following audio devices on the phone for speaking and listening:


- **Handset:** To make a call or answer a call, lift the handset off the cradle.
- **Speaker** (hands-free mode)
 - To activate it, press the speaker key during a call or when making a call.
 - To deactivate it, press the speaker key again.
- **Headset** (hands-free mode). When talking on the phone, you can relay audio to a connected headset.
 - To enable it, press the headset key.
 - To disable it, press it again.

You can easily change audio device during a call.

- **To change from speaker/headset to handset:** Activate speaker/headset and pick up the handset; the speaker/headset is automatically disabled.
- **To change from handset to speaker/headset:** Off-hook the handset and press the speaker/headset key to activate the speaker/headset. Return the handset to the cradle; the speaker/headset remains activated.

Transferring Calls and Meetings across Devices

If a user joins a meeting on their PC, they'll view a prompt suggesting adding their Teams device to split the audio and video, or transferring completely.

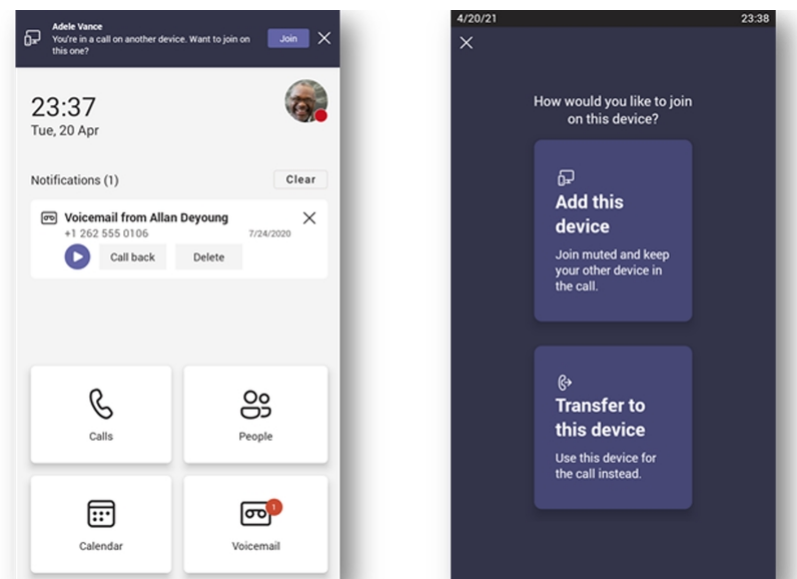

The feature enables the user to move away from their PC while seamlessly staying connected. The phone recognizes the user is in a call on another device and prompts them to transfer or add, letting them start their call from elsewhere and transfer to their desk phone.

Signing Out


You can optionally sign out of the phone application and sign in as another user.

➤ To sign out:


1. Under **Settings**, navigate to and select the **Sign out** option.




Alternatively, in the Calls screen (or People screen, Calendar screen or Voicemail screen), select the phone menu , select the **Settings** option.

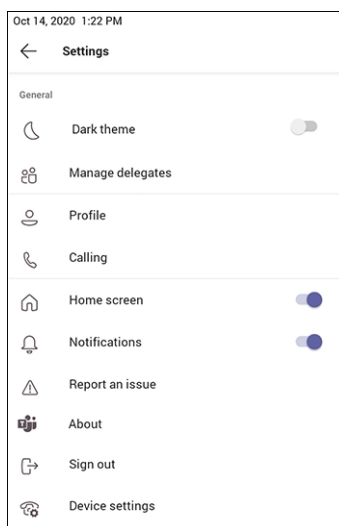

2. After selecting the **Sign out** option, you're prompted 'Are you sure you want to sign out?' Select **OK**; you're signed out and returned to the **Sign in** screen.

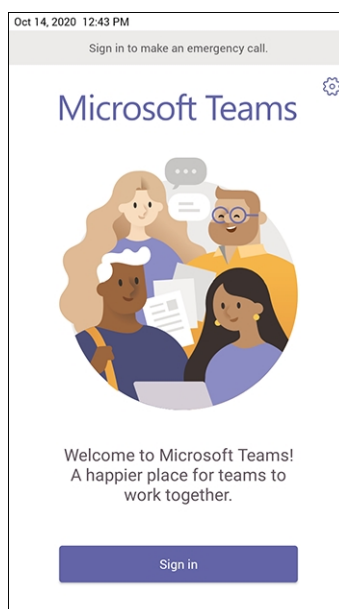

Network administrators can alternatively sign out from devices using Microsoft Teams admin center (TAC). Network administrators can also remotely sign in and provision devices from Microsoft's TAC.

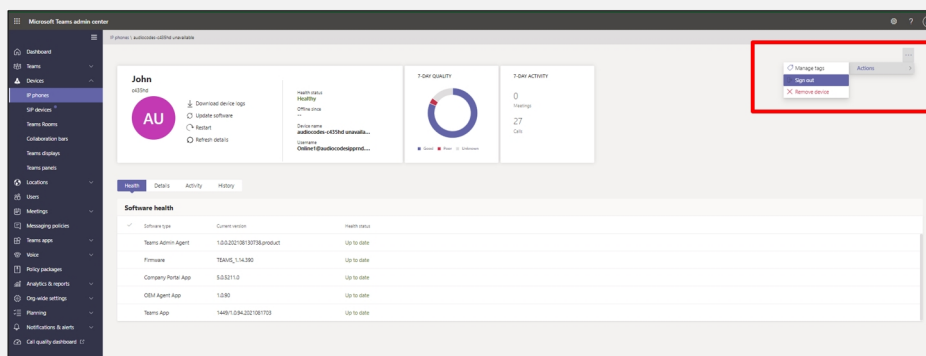


5 Performing Teams Call Operations


The following documentation shows how to perform basic operations with the phone.

Making a Call

Calls can be made in multiple ways. In the phone's home screen, for example, touch **Calls**.

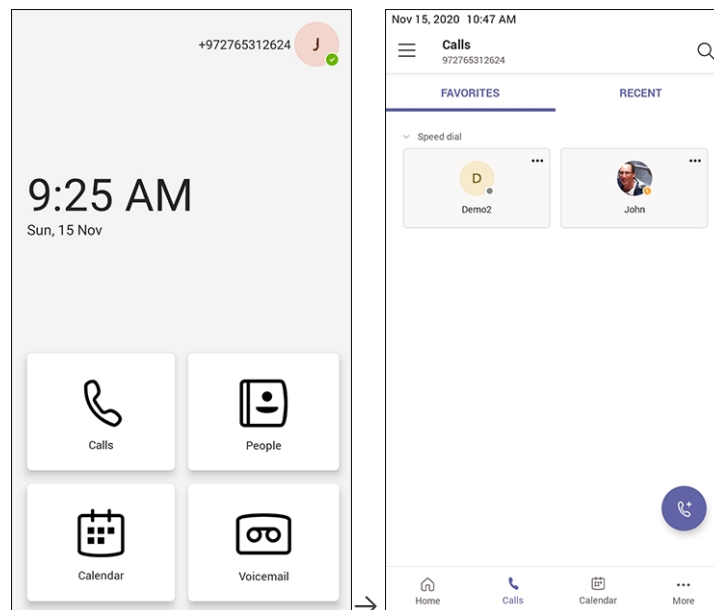

In the Calls screen that opens, touch .

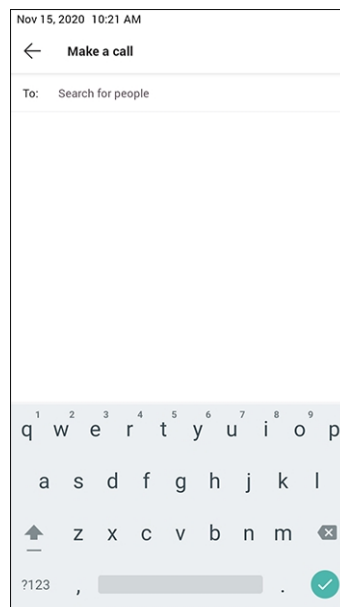

In the 'Make a call' screen, touch the field 'Search for people' and use the virtual keyboard to input the name of person to call -OR- touch **?123** in the lower left corner and input the phone number of the person to call.

After dialing a destination number, the phone displays the Calling screen while playing a ring-back tone.

➤ **To toggle between mute and unmute:**

- Touch  on the phone. Touch it again to revert.

You can mute the phone during a call so that the other party cannot hear you. While the call is muted, you can still hear the other party. Muting can also be performed during conference calls.

➤ **To toggle between device and speaker:**

- Touch  on the phone.

➤ **To end a call before it's answered at the other end:**

- Touch .

➤ **To dial a URL:**

1. Press the speaker key or lift the handset.
2. Use the virtual keyboard to input the URL address. To delete (from right to left), touch the clear key.

Microsoft Lightweight Calling Experience

AudioCodes' phones feature a *simplified look and feel* for incoming and outgoing calls, improving phone performance.




The feature is enabled by default.

➤ **To disable the feature:**

- On the phone, navigate to **Teams Application Settings > Calling > Enable lightweight calling experience** and switch it off.

The figure below shows an incoming call screen when the feature is enabled while the figure below it shows the ongoing call screen when the feature is enabled.

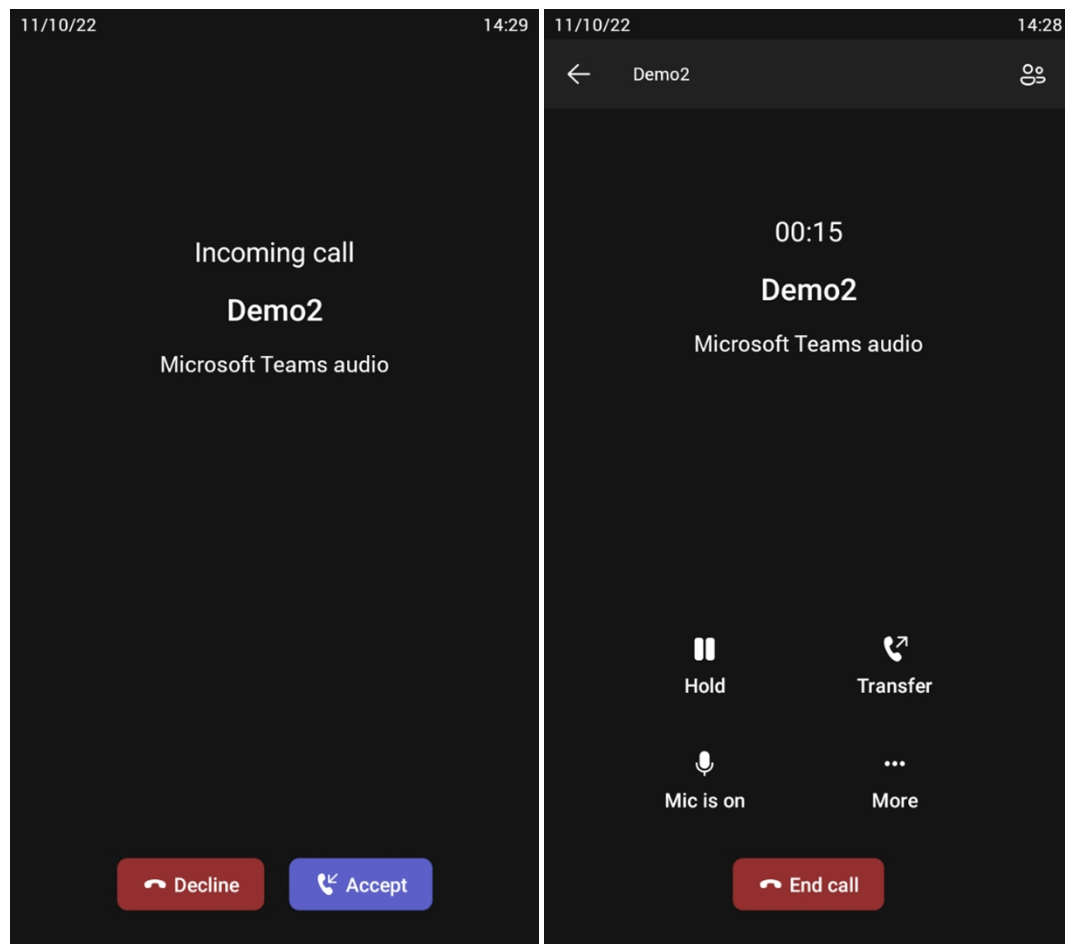

Dialing a Missed Call

The phone logs all missed calls. The screen in idle state displays the number of missed calls adjacent to the Calls softkey.

➤ To dial a missed call:

- Select **Calls** and then in the Calls screen under the **Recent** tab, scroll to the missed call to dial if there is more than one listed.
- Select  adjacent to the missed call.

Select to Dial

All phone numbers that are part of meeting invites or user contact cards can be dialed out directly by selecting them via the phone screen.

Transferring a Call

See [here](#) for a video clip demonstrating how to use the call transfer feature while checking with the intended recipient that they want to take the call. The principle is similar across AudioCodes Teams phones.


See [here](#) for a video clip demonstrating how to immediately transfer a call without verifying with the intended recipient that they want to take the call. The principle is similar across AudioCodes Teams phones.

➤ **To transfer a call received for another person:**

1. When the incoming call arrives, choose whether to transfer it immediately or not; you can transfer it directly right away, or you can decide to consult the intended recipient of the call to verify that they want to receive it.
2. To consult the intended recipient, select **Consult first** and search for the contact you want to transfer the call to. While you consult with the intended recipient about whether they want to take the incoming call, the caller will hear hold music and will not be a party to your discussion.
3. If the recipient decides to take the call, click the phone icon on the top-right of the screen and then confirm the transfer; the call is then transferred smoothly to the intended recipient.

Making an Emergency Call

The phone features an emergency call service. The idle lock screen displays an **Emergency** key.

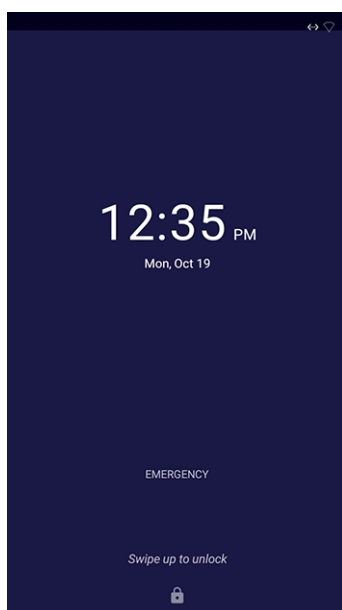

➤ **To dial the service from the locked idle screen either:**


- Select the **EMERGENCY** softkey shown in the preceding figure of the locked idle screen and then enter the emergency number.



-OR-

- Dial from the locked idle screen without needing to use the **EMERGENCY** key:

- a. Dial **911**.

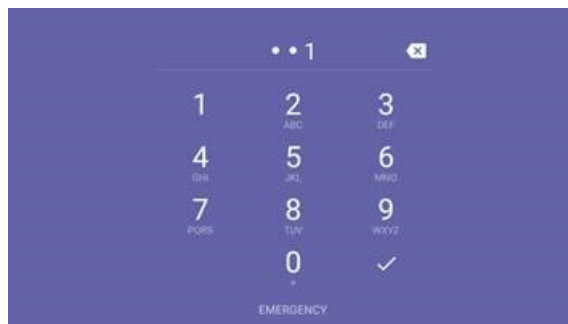

- b. Activate the speaker button on the phone.
- c. View the 'Emergency call' screen displaying the dialed emergency number.



When the phone detects that 911 was requested, it automatically dials that number.

Answering Calls

The phone indicates an incoming call by ringing and displaying **Caller X is calling you**. The LED located in the upper right corner of the phone flashes red, alerting you to the incoming call.

➤ To answer:

- Pick up the handset -OR- activate the headset key on the phone (make sure the headset is connected to the phone) -OR- activate the speaker key on the phone -OR- select the **Accept** softkey (the speaker is automatically activated).

Ending an Established Call

You can end an established call in a few ways.

➤ **To end an established call:**

- Return the handset to the phone cradle if it was used to take the call -or- activate the headset key on the phone -or - activate the speaker key on the phone -or- select the **End** softkey.

Managing Calls

You can view a history of missed, received and dialed calls.



Each device reports every call from | to that user to the server. All devices that a user signs into are synchronized with the server. The Calls screen is synchronized with the server.

➤ **To manage calls:**

1. Select **Calls** and in the Calls screen, select **Recent**.



- Calls are listed from newest to oldest.
- **Missed call** indicates a call that was not answered.
- Incoming and outgoing calls are differentiated by their icon.

2. Select a call in the list and then select  to call someone back.

Paging to a Group of Phones (Multicast)

AudioCodes Android-based phones support multicast paging (including barge-in). The feature allows a call to be paged to a group of phones to notify a team about (for example) the time and place at which a meeting will commence. The paging call is multicast via a designated group IP address, in real time, on all phones in the group.

Barge-in enables paging to interrupt (barge in on) phone conversations that are in progress. The feature is configured in the phone's cfg configuration file. Default: Disabled. When enabled, a paging call overrides an ongoing regular call/meeting due to emergency. When disabled, those who are in regular calls when a paging call comes in are prompted in the phone screen to accept or reject the paging call. If it's accepted, the regular call is put on hold and the paging is heard.

Related paging parameters in the cfg configuration file are:

```
/voip/services/group_paging/enabled
```

```
/voip/services/group_paging/codec
```

```
/voip/services/group_paging/group/*/activated
```

/voip/services/group_paging/group/*/multicast_addr

/voip/services/group_paging/group/*/port

/voip/services/group_paging/allow_barge_in/enabled



- The values of these parameters can be changed on the fly.
- Paging behavior is immediately affected.

Use the following table as reference.


Parameter	Description
voip/services/group_paging/allow_barge_in/enabled=0	Allows disallows the barge-in feature. ■ 0 = disabled ■ 1 = enabled
voip/services/group_paging/codec=PCMU	Defines the codec. Three available options: ■ PCMU (default) ■ PCMA ■ G722
voip/services/group_paging/enabled=0	Enables disables the group paging feature. ■ 0 = disabled ■ 1 = enabled
voip/services/group_paging/group/0-4/activated=0	Activates deactivates a group. ■ 0 = deactivated ■ 1 = activated Five groups labeled 0-4 are available.
voip/services/group_paging/group/0-4/multicast_addr=224.0.1.0	Defines the paging group's multicast IP address. Must be in the range: 224.0.0.0 - 239.255.255.255 Default: 224.0.1.0. Important: For phones to be in a group, all must be configured with the identical multicast address and port. The following three IP addresses (for example) denote three different paging groups: ■ 224.0.1.1:8888

Parameter	Description
	224.0.1.1:2222 233.2.2.2:8888
voip/services/group_paging/group/0-4/port=8888	Defines the port through which paging is received. Must be in range: 1-65535 Default: 8888 Important: For phones to be in a group, all must be configured with the identical multicast address and port. Port 9998 and 9999 should not be used as they are used by the application.




- AudioCodes Android-based phones currently support incoming paging calls (listening).
- Outgoing paging calls (broadcasting) will be supported in the future.

- When an incoming call is received on a phone that is in idle, the phone *immediately automatically* answers it, irrespective of whether barge-in is enabled or not:

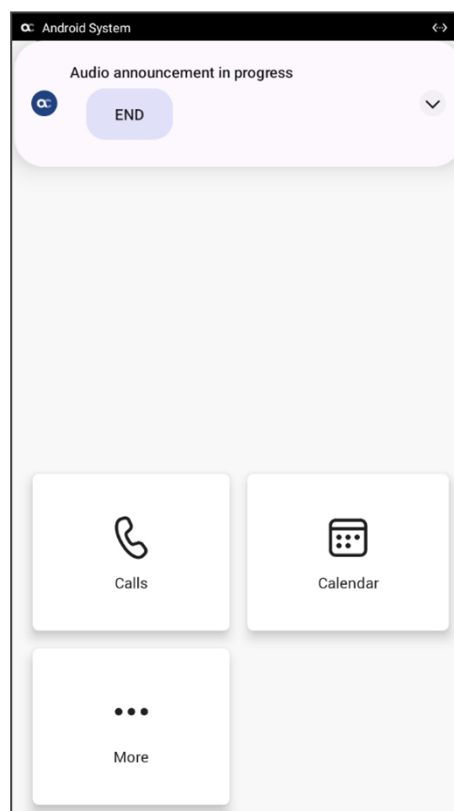


- When the phone is in a Teams call/meeting (active or on-hold):

- If barge-in is enabled, i.e., if the new cfg configuration file parameter `voip/services/group_paging/allow_barge_in/enabled=1`, then the phone will *automatically immediately* display the **Audio announcement in progress** screen with an option to END the announcement.

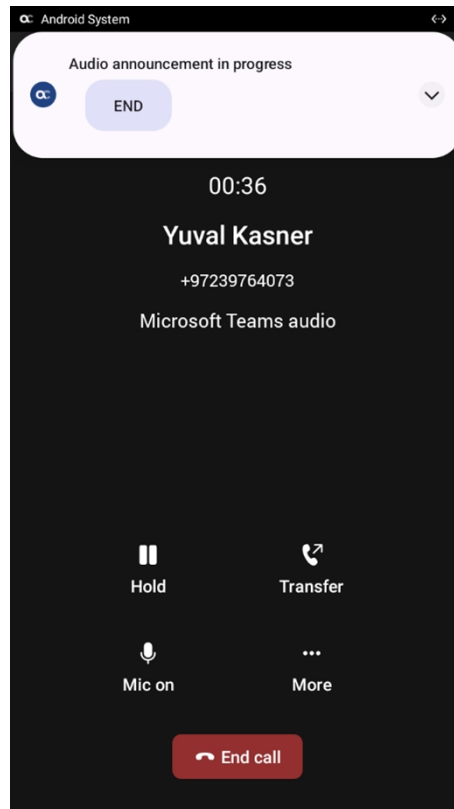

- If barge-in is *disabled*, i.e., if the new cfg configuration file parameter `voip/services/group_paging/allow_barge_in/enabled=0`, then the phone will display the **Incoming audio announcement** screen with an option to ACCEPT or DECLINE it:

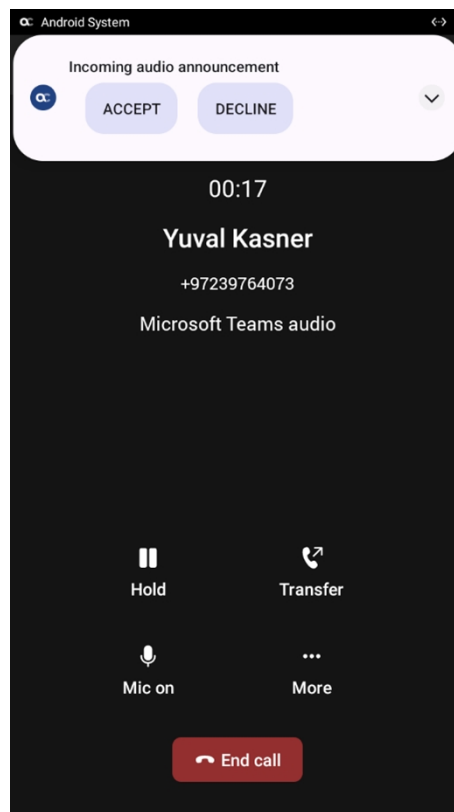

Using Boss-Admin

Bosses can share their phone line with their assistants|delegates to make and receive calls on their behalf.

See [here](#) a video clip showing how to set up the feature. The principle is the same across all Teams phone models.

A boss can:


- View and join active calls handled by delegates as a boss
- Grant delegates permission to join active calls and resume calls

A delegate can:

- View shared call history per boss' line
- Switch between different lines easily
- View other delegates managing a boss

➤ To set up the feature:

- Use the screenshots below as reference.

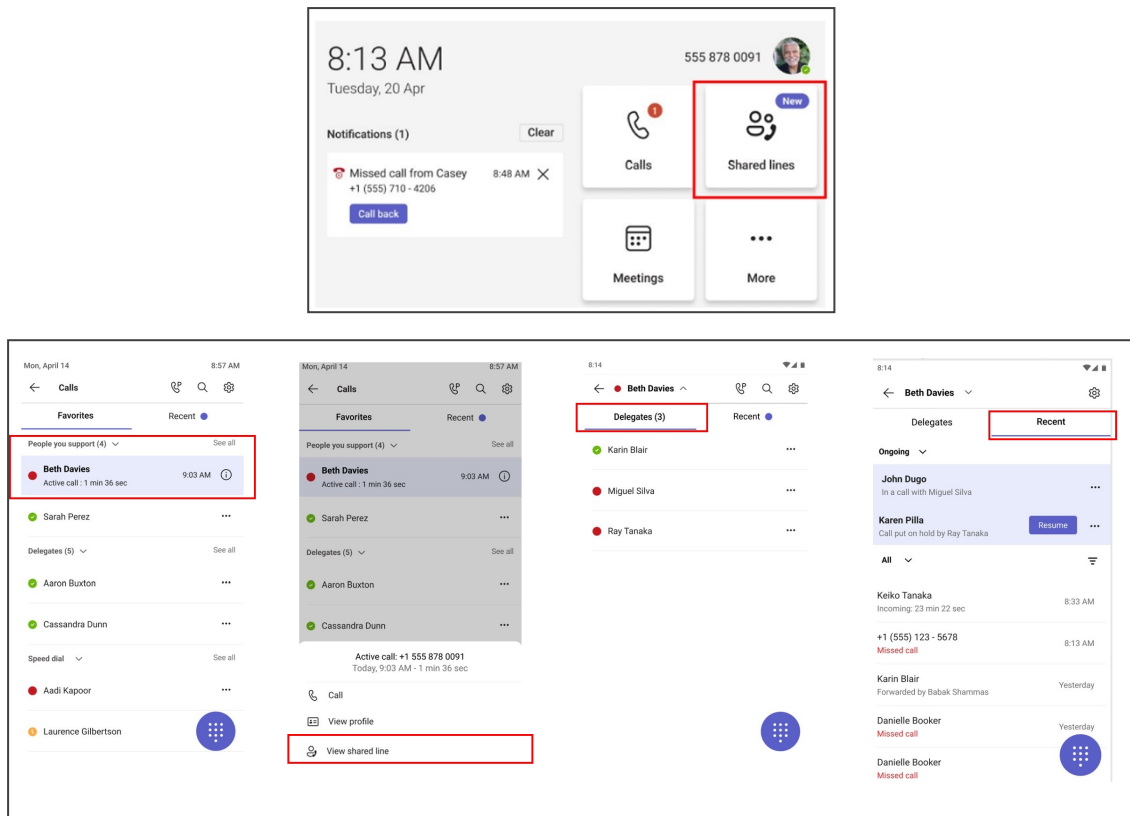


Parking a Call

The phone allows a user to park a call, i.e., transfer a call to a "parking lot" for it to be picked up on any other phone in the enterprise by a party who must enter a code to retrieve it.

➤ To park a call:

1. Put the call on hold and park it; you'll receive a unique code from the Teams application.
2. Communicate the code to another user who can then pick up the call on their device. The user on the other device selects the call park icon  displayed in their device's Calls screen.

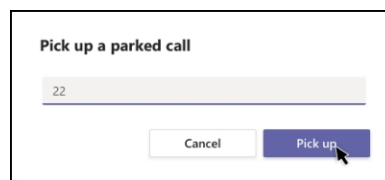


3. The user on the other device enters the code communicated to them and then selects the **Pick up** button to pick up the call.

Managing Teams Meetings


Multi-party conference meetings based on the Teams server (remote conference) can be calendered and initiated from the phone.

➤ **To manage conference meetings:**


1. In the phone's home screen, select **Calendar**.

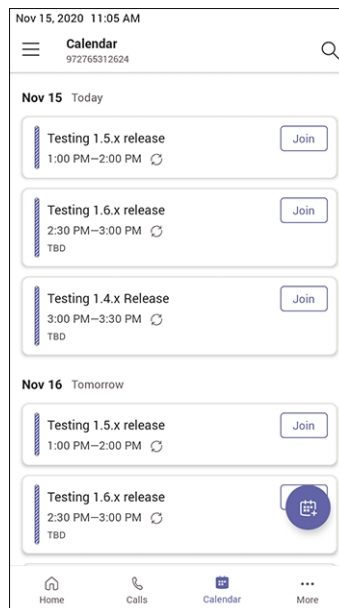


2. Touch the  icon.

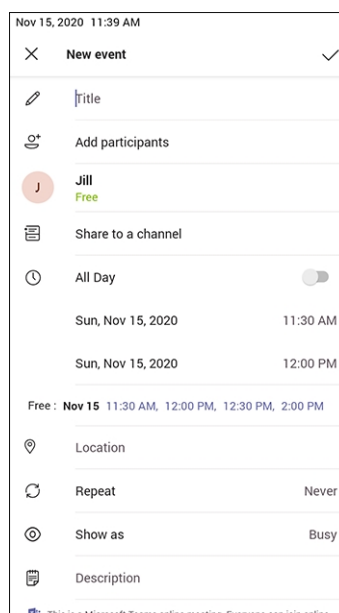

3. In the 'New event' screen, touch the 'Title' field and then use the virtual keyboard that launches to enter a title for the meeting.
4. Touch the 'Add participants' field.

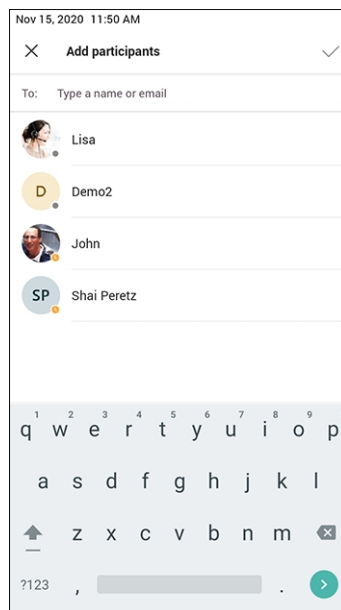

5. In the 'Add participants' field, touch the 'To:' field and input the first digit in the name of a participant to add; the names of the employees listed in the Corporate Directory is displayed.

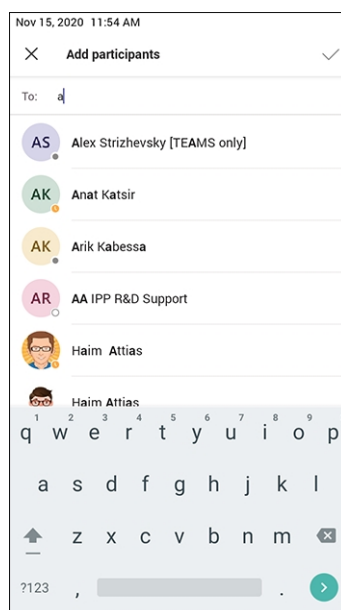


6. Touch an entry in the list and then touch ; the participant is added to the meeting.
7. Define 'Share to a channel', date, date and time, 'Location', 'Show as' and provide a 'Description' of the meeting to facilitate effective management later.
8. Touch the  icon; the meeting is calendarized.

Using Live Captions

The phone can detect what's said in a meeting, group call or 1:1 call, and presents the text on the screen in real-time (live) captions.



- Captions are currently only available in English (US).
- Captions are currently unavailable for phones within government clouds.

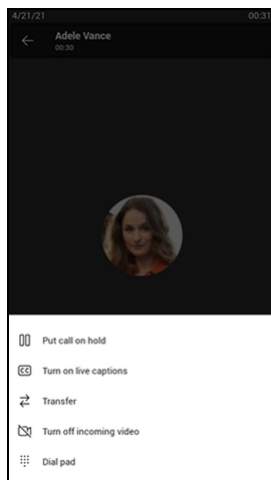

For more information, see [here](#).

Raising a Hand During a Meeting

During a meeting, you can raise a virtual hand from your phone to let people know you want to contribute without interrupting the conversation. Everyone in the meeting will see that you've got your hand up.


For more information, see [here](#).

Hiding Names and Meeting Titles for Individual Devices

Names and meeting titles can be hidden for individual devices.

➤ To hide names and meeting titles per device:


1. Access the Meetings screen (**More > Settings > Meetings**) (the figure is for illustrative purposes only).

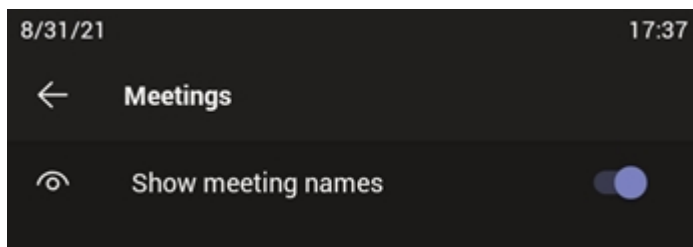

2. Switch off the **Show meeting names** option.

Reacting During a Meeting

To include silent participants in meetings, *participant reactions* during meetings are supported.

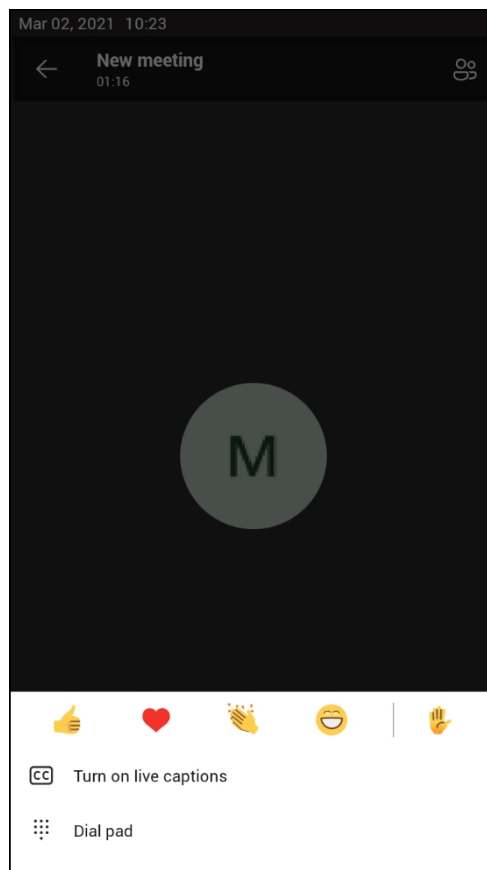

Users can convey their sentiments without hesitation or interruption to participate in the meeting, or they can raise their hands.

Transferring a Call to Frequent Contacts

To transfer your calls efficiently to frequent contacts, the phone presents frequent contacts in the transfer screen for a single operation transfer. Contacts not shown in the list can be searched for using the search bar.

Transferring a Call to Work Voicemail

Users can directly transfer a call into someone's work voicemail without needing to ring the far-end user. This allows them to discreetly leave voicemails for users without interrupting them.


Viewing and Playing Voicemail Messages

If you hear a stutter dial tone when you pick up the handset, new messages are in your voicemail box. The phone also provides a visual indication of voicemail messages.


See [here](#) for a video clip demonstrating how to view and play voicemail messages.

➤ To view a list of your voicemail messages:

1. In the phone's home screen, select the **Voicemail** icon .

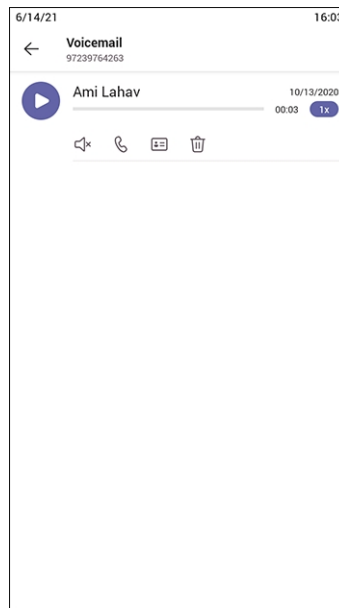

2. Scroll down to select from the list of messages (if there are voicemail messages in your box) which message to **Play**, **Call** or **Delete**.
3. You'll view the following screen if you don't yet have any voicemail messages:

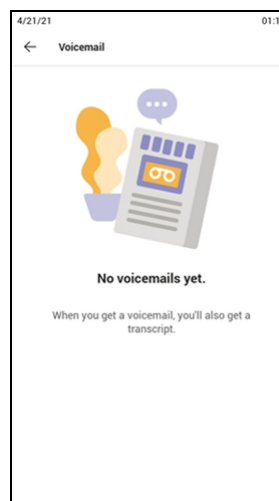

For more information, see [here](#).

Rejecting an Incoming Call, Sending it Directly to Voicemail

You can send an incoming call directly to voicemail if time constraints (for example) prevent you from answering it. The caller hears a busy tone from your phone.

➤ To send an incoming call directly to voicemail:

- When the phone rings to alert to a call, select ; if you have voicemail, the call will go into voicemail; the Microsoft Teams server performs this functionality.

Adjusting Volume

The phone allows

- [Adjusting Ring Volume](#) below
- [Adjusting Tones Volume](#) below (e.g., dial tone)
- [Adjusting Handset Volume](#) below
- [Adjusting Speaker Volume](#) on the next page
- [Adjusting Headset Volume](#) on the next page

For more information about sound and volume, see [here](#).

Adjusting Ring Volume

The volume of the phone's ring alerting you to an incoming call can be adjusted to suit personal preference.

➤ **To adjust ring volume:**

1. When the phone is in idle state, tap + or - on the phone.
2. After adjusting, the volume bar disappears from the screen.

Adjusting Tones Volume

The phone's tones, including dial tone, ring-back tone and all other call progress tones, can be adjusted to suit personal preference.

➤ **To adjust tones volume:**

1. Off-hook the phone (using handset, speaker or headset).
2. Touch + or - on the phone.
3. After adjusting, the volume bar disappears from the screen.

Adjusting Handset Volume

Handset volume can be adjusted to suit personal preference. The adjustment is performed during a call or when making a call. The newly adjusted level applies to all subsequent handset use.

➤ **To adjust handset volume:**

1. During a call or when making a call, make sure the handset is off the cradle.
2. Touch + or - on the phone; the volume bar is displayed on the screen. After adjusting, the volume bar disappears from the screen.

Adjusting Speaker Volume

The volume of the speaker can be adjusted to suit personal preference. It can only be adjusted *during a call*.

➤ **To adjust the speaker volume:**

1. During a call, activate the speaker key on the phone.
2. Touch + or -; the volume bar is displayed on the screen. After adjusting the volume, the volume bar disappears from the screen.

Adjusting Headset Volume

Headset volume can be adjusted *during a call* to suit personal preference.

➤ **To adjust the headset volume:**

1. During a call, activate the headset key on the phone.
2. Touch + or - on the phone; the volume bar is displayed on the screen.

Playing Incoming Call Ringing through USB Headset

The phone features the capability to ring via a USB headset in addition to via the phone speaker.

Click [here](#) to view a video clip demonstrating how to connect a USB headset to the phone.

➤ **To play the ringing of incoming calls via the USB headset:**

- Configure the following parameter:

audio/stream/ringer/0/audio_device=**BOTH** (default), **BUILTIN_SPEAKER** or **TYPE_USB**

- **BOTH**: Incoming calls play through both the USB headset and the phone's speaker.
- **BUILTIN_SPEAKER**: Incoming calls play through the phone's speaker.
- **TYPE_USB**: Incoming calls play through the USB headset.

Using the Phone as a USB Speaker


The Device Duo feature enables the phone to be configured as a paired audio device. The feature allows users to use their phone not only as a standalone desk phone but also as a smart audio device for all kinds of UC applications running on the PC. From the Teams app perspective, the phone is like any USB speaker with all controls available in the Teams app on the USB speaker interface.



For more information, see the *Device Duo Application Note*.


Viewing and Joining Meetings

Scheduled meetings can be viewed and joined by selecting the **Calendar** icon in the phone's home screen.

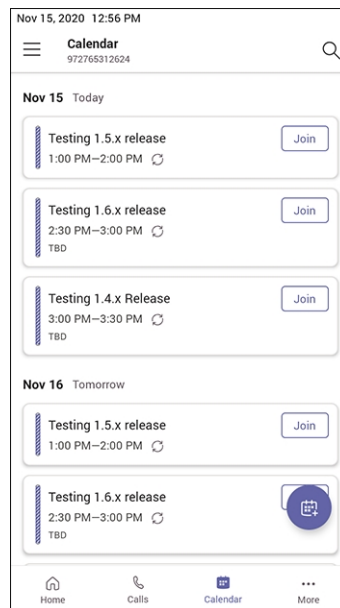

➤ To view the details of a meeting:


1. Scroll down if necessary to the meeting whose details you want to view and select it.

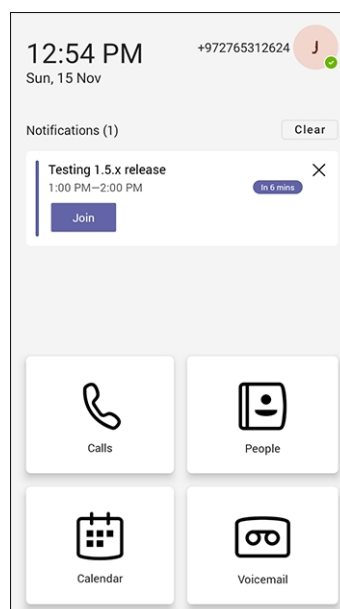

2. View the details of the meeting under 'Notifications'.

➤ To join a meeting:

- In the details of the meeting you want to join, select **Join**.

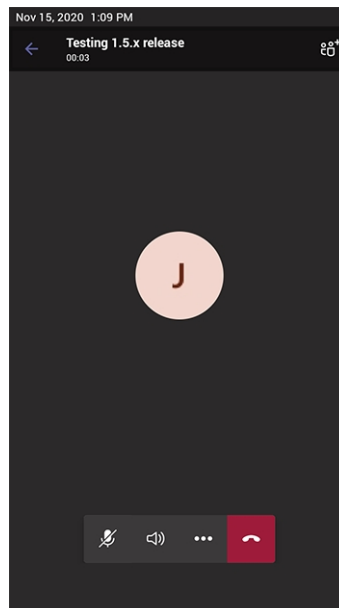


Better Together over Bluetooth

Read here about how to configure Better Together over Bluetooth with support for:


- Pairing with the Teams PC Client
- Lock/unlock synchronization
- [As a feature in preview] Use of the phone as the Teams audio device for calls / meetings

➤ To set up Bluetooth on the PC side:

1. Enable Bluetooth on your PC.

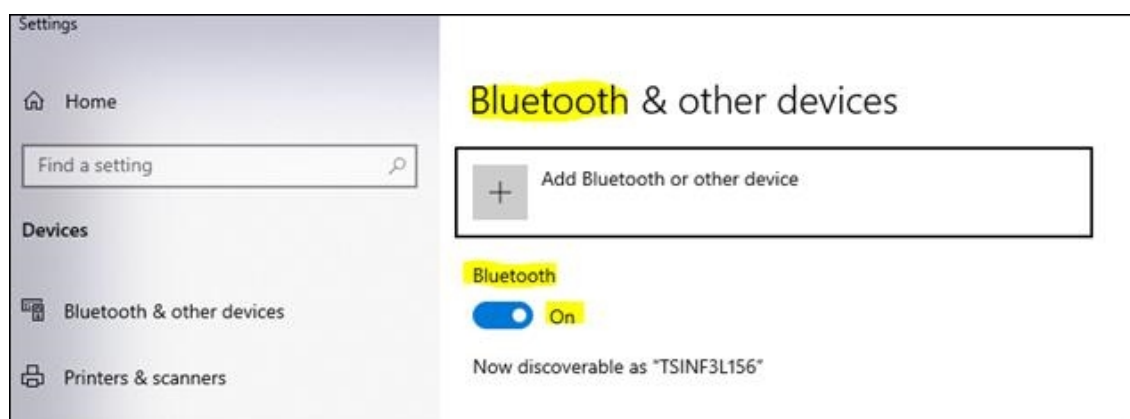


2. Install Teams PC Client on the PC.
3. Sign in to the Teams PC Client with your account (it's necessary to sign in with the same accounts to both the Teams PC Client and to the device).

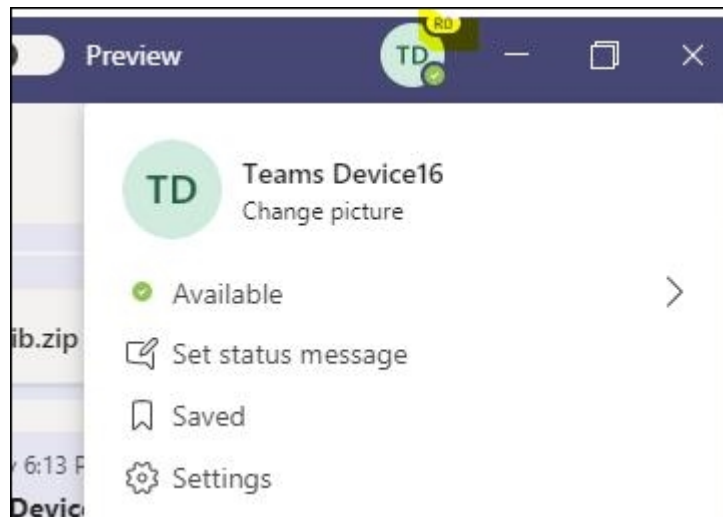


➤ **To set up Bluetooth on the device side:**


1. Sign in to the Teams application with your account (it's necessary to sign in with the same accounts to both the Teams PC Client and to the device).
2. Touch the avatar and then touch **Connect a device**.

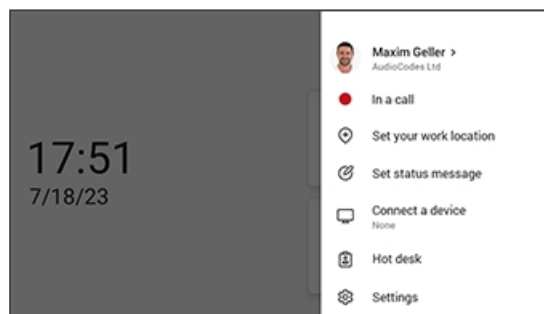

3. View the displayed available device to connect to.

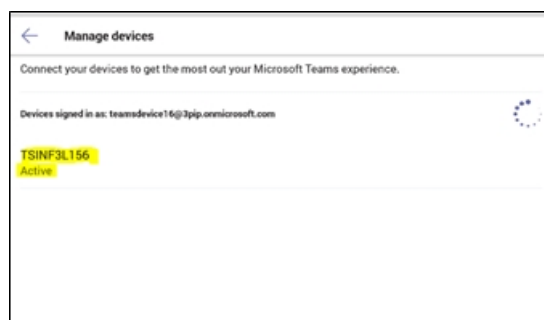


4. Pair the device with your PC.

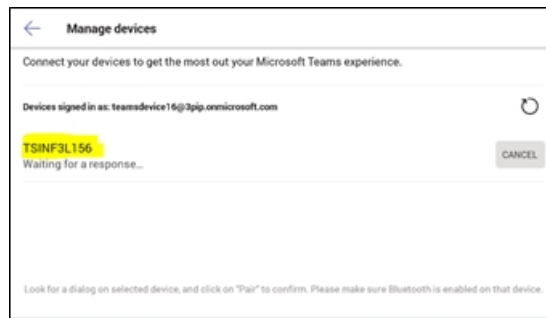


5. View on your PC a notification it gets to accept the connection:




6. Accept the notification from PC.
7. Check the device and make sure pairing was successful:

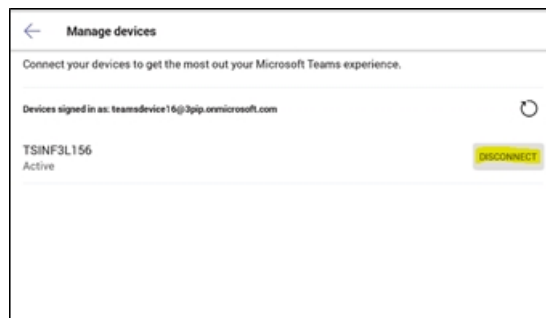

8. When pairing the phone with the PC Client, the PC Client presents the following request for approval:

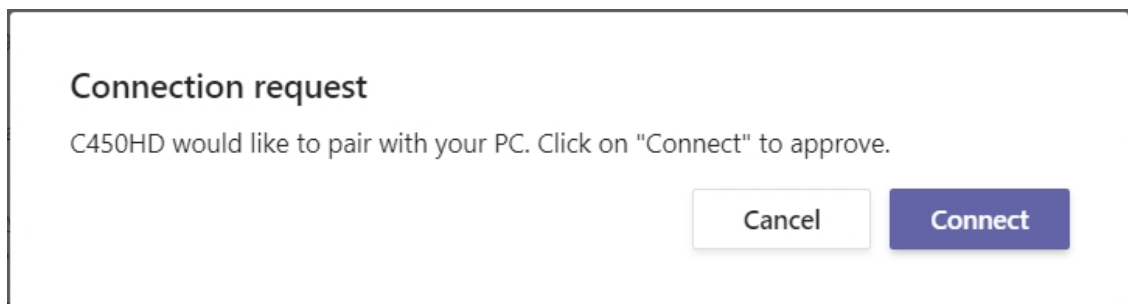

Once connected, the phone will be presented as a default Teams PC Client Audio device:

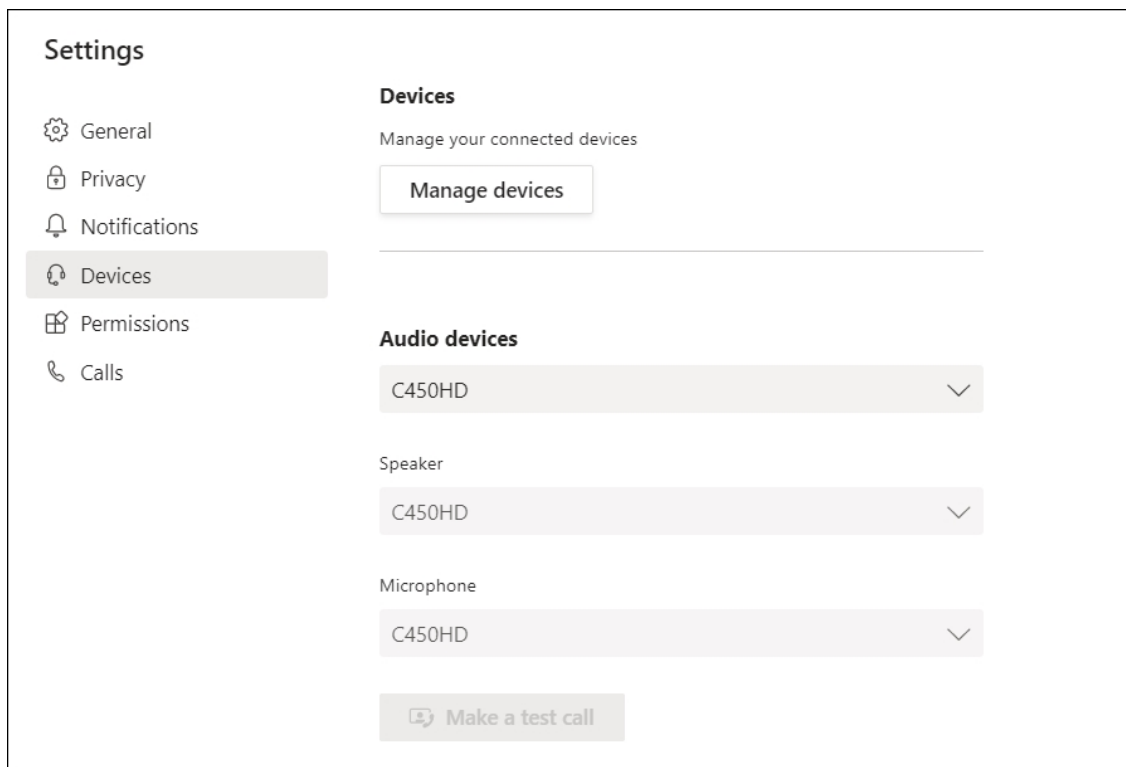

Adding a Speed Dial




- The feature expands the phone's functional capabilities.
- Users can configure speed dials in the sidecar's BLFs to speed dial frequently-used contacts with the press of a button, determine contacts' presence status from BLF button LEDs, and manage contacts quickly.
- The feature also allows the user to easily transfer a call to a speed dial contact.
- The feature increases user productivity in the workplace.

➤ To add a speed dial:




- Add it from the Teams PC client; adding a speed dial from the PC client will be reflected on the sidecar as well.


-OR-

- Add it from the phone using one of the following options:
 - a. Via the **Calls > Recent** tab. Select a user and then select the 'star' icon to add them to the speed dial list:

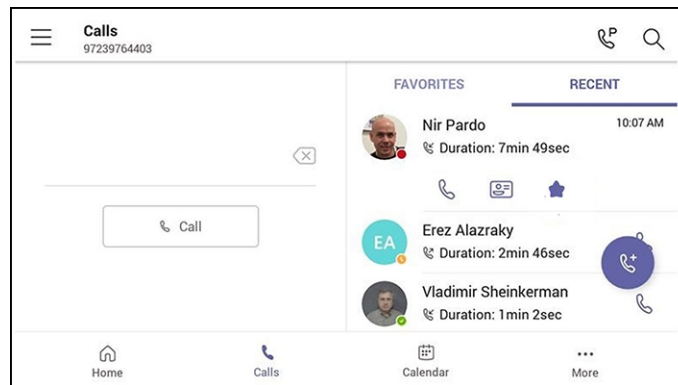

- b. Via the **People** tab using **+ > Add from Directory** and then add the users to the speed dial.

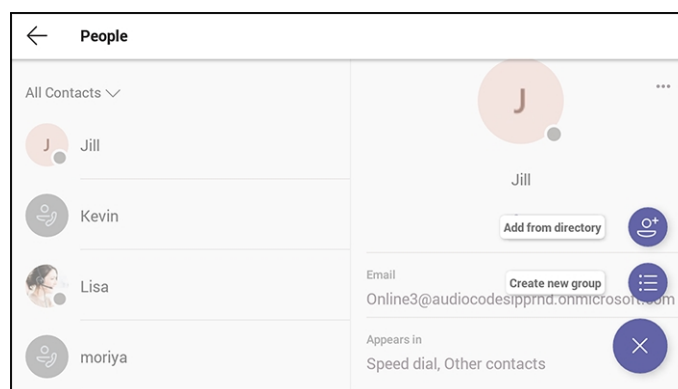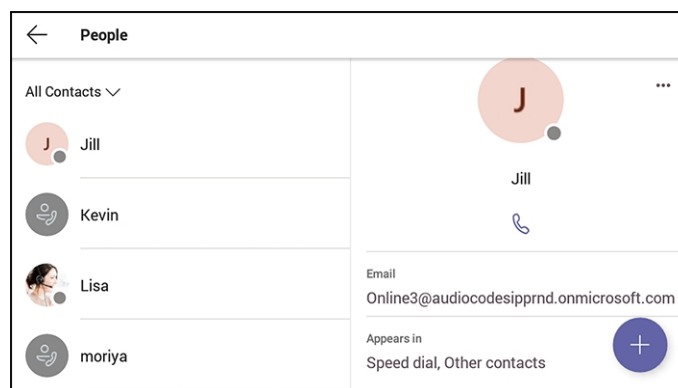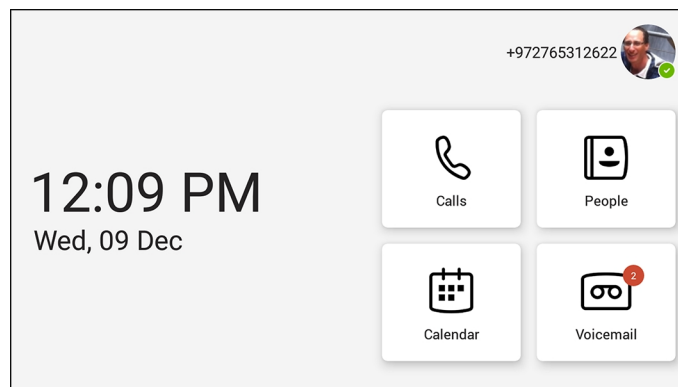

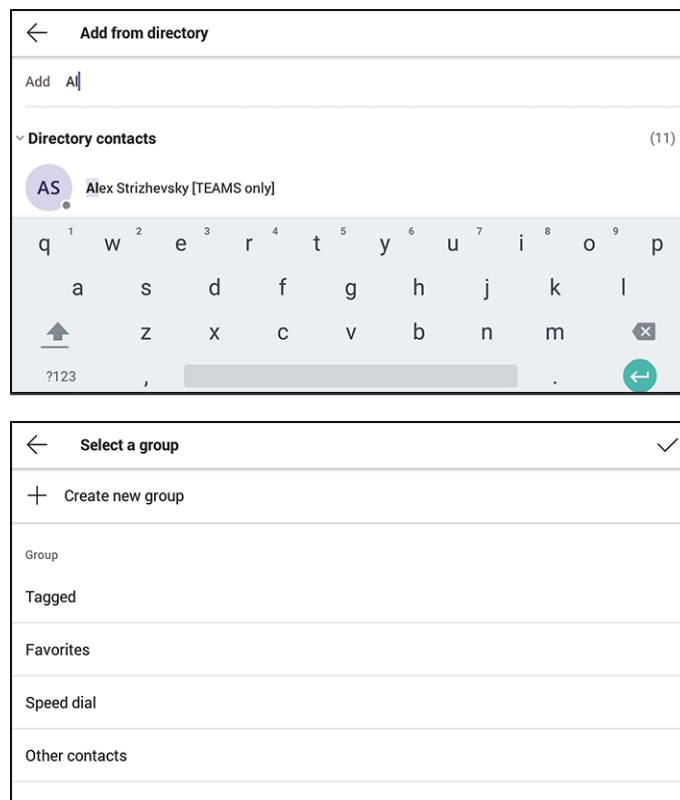

The sidecar displays the user's speed dial list. The list is synchronized on all devices under the same user account. The order on the sidecar corresponds to the order of the speed dial list.

Adding a Speed Dial Group

Admins can create a speed dial group and add contacts to the new group.

See [here](#) for a video clip demonstrating how to create a speed dial group.

➤ To create a speed dial group:

1. Click **People**.
2. From the list, select the contact you want to add to your new group.
3. Select **Add to group**.
4. In the 'Select a group to edit' screen, choose **Speed dial**.
5. After adding the new contact, view them displayed.

6 Performing Administrator-Related Operations

Network administrators can:

Update phone firmware manually (see [Updating Phone Firmware Manually](#) on page 116)

Manually perform recovery operations (see [Manually Performing Recovery Operations](#) on page 124)

Remove devices from Intune management (see [Removing Devices from Intune admin center](#) on page 126)

Update Microsoft Teams devices remotely (see [Updating Microsoft Teams Devices Remotely](#) on page 129)

Manage phones with the Device Manager (see [Managing Phones with the Device Manager](#) on page 132)

Setting up Automatic Provisioning

Phones can be directed to a provisioning server using DHCP Option 160 or AudioCodes' HTTPS Redirect Server, to automatically load configuration (cfg) and firmware (img) files.

After the phone is powered up and network connectivity established, it automatically requests provisioning information; if it doesn't get via DHCP Option 160 provisioning method, it sends an HTTPS Request to the Redirect Server which responds with an HTTPS Redirect Response containing the URL of the provisioning server where the firmware and configuration files are located. When the phone successfully connects to the provisioning server's URL, an Automatic Update mechanism begins.

➤ To set up DHCP Option 160, use this syntax:

- <protocol>://<server IP address or host name>/<firmware file name>;<configuration file name>
- <protocol>://<server IP address or host name>
- <protocol>://<server IP address or host name>/<firmware file name>
- <protocol>://<server IP address or host name>/<configuration file name>

Where <protocol> can be "ftp", "tftp", "http" or "https"

➤ To set up AudioCodes' HTTPS Redirect Server, use this syntax:

- <protocol>://<server IP address or host name>
- <protocol>://<server IP address or host name>/<firmware file name>
- <protocol>://<server IP address or host name>/<firmware file name>;<configuration file name>
- <protocol>://<server IP address or host name>/<configuration file name>



The Redirect Server's default URL is:
provisioning/redirect_server_url=https://redirect.audiocodes.com
 It can be reconfigured if required.

Setting up an E911 Emergency Location using TAC

An E911 emergency location can be set up using the Microsoft Teams admin center.

➤ To set up an E911 emergency location:

1. In the TAC, go to **Locations** and in the 'Emergency addresses' page, set a new location by clicking **+ Add**.

Emergency addresses

An emergency location is a physical street address for your organization. To specify buildings, floors, or offices at a location, you can add places [Learn more](#)

+ Add [Edit](#) [Delete](#)

✓	Description	Country or region	Address	Phone numbers	Voice use
	AudioCodes	United Kingdom	44 1252 759150 Alexandra Road, Farnborough, Ferneberga H...	0	0
	AudioCodes Inc.	United States	27 WORLDS FAIR DR, FRANKLIN TWP NJ 08873, US,	138	162
	AudioCodes - France & Benelux	France	104 Avenue Albert 1er - Les Passerelles, Rueil-Malmaison 925...	0	0
	AI-Logix Europe	Netherlands	57 Geerweg, TER AAR 2461 TT, NL,	0	0
✓	test1105	United States	1 Little Albany Street, New Brunswick NJ 08901, US,	1	3
	test2906	United States	30 Worlds Fair Drive, Franklin NJ 08873, US,	1	1
	test0307	United States	32 Worlds Fair Drive, Franklin NJ 08873, US,	0	0
	Test Oleg	United States	11 Worlds Fair Drive, Franklin NJ 08873, US,	0	0
	test0407	United States	13 Worlds Fair Drive, Franklin NJ 08873, US,	0	1

2. Enter a name for the location, enable **insert address manually**, make sure that all data is filled in correctly and then click **Save**.

Microsoft Teams admin center

Emergency addresses \ New emergency address

test_0816

Country or region
United States

Input address manually
☒ On

Street number: 2079
Street name: Brentwood Drive

City: Austin
State: Texas
Zip code: 78756

Latitude: 30.398167
Longitude: -97.819504

Organization name: Test_Test_Test_Audiocodes(R&D lab)
ELIN (optional): ELIN (optional)

Save Cancel

- After the location has been set, click on the location and add a place (building, etc.). Make sure to maintain the hierarchy. Click **Apply** and verify the place has been set.

Microsoft Teams admin center

Emergency addresses \ test_0816

test_0816

2079 Brentwood Drive, Austin TX 78756, US

Validated
Location ID: eda40017-5a66-4c18-95a7-73dd013089d2
Organization name: Test_Test_Test_Audiocodes(R&D lab)

Places: 0
Voice users: 0
Phone numbers: 0

Location network summary
Subnets: 0
Wi-Fi access points: 0
Switches: 0
Ports: 0

Places
+ Add Edit Delete

Name: Building A
Voice users: 0
Subnets: 0
Wi-Fi access points: 0
Switches: 0

Emergency Location Identification Number (ELIN)

Apply Cancel

- Enter the place you've set and define how to determine the emergency location. It can be determined by these values:

- Port ID
- Switch (Chassis) ID
- BSSID (Wi-Fi access points)
- Subnet
- User predefined location (see below for more details).



The hierarchy of displaying a location is determined in the same order as above.

Emergency addresses \ test_0816 \ Building A

test_0816
↳ Building A

2079 Brentwood Drive, Austin TX 78756, US, Building A

Validated
Location ID: d4e9fb00-1d70-11ed-8943-ddfc123f0549
Organization name: Test_Test_Audiocodes(R&D lab)

Voice users: 0
Phone numbers: 0

Place network summary
Subnets: 0
Wi-Fi access points: 0
Switches: 0
Ports: 0

Phone numbers Subnets Wi-Fi access points Switches Ports

Edit

✓ Number

- Enter a location defined by a specific port ID. Make sure to enter the port description correctly, as delivered from your switch (* the switch must allow LLDP transmit and receive and provide LLDP information).

Microsoft Teams admin center

Emergency addresses \ test_0816 \ Building A

test_0816
↳ Building A

2079 Brentwood Drive, Austin TX 78756, US, Building A

Validated
Location ID: d4e9fb00-1d70-11ed-8943-ddfc123f0549
Organization name: Test_Test_Audiocodes(R&D lab)

Voice users: 0
Phone numbers: 0

Place network summary
Subnets: 0
Wi-Fi access points: 0
Switches: 0
Ports: 0

Phone numbers Subnets Wi-Fi access points Switches Ports

+ Add + Upload Edit Delete 0 item

Port Description Chassis ID Emergency location

Add port
Port: Gi 1/0/19
Chassis ID: B4-14-89-BE-C0-00
Description: Room 123

Emergency location
An emergency location is a physical address with an optional place. Learn more
If your organization has more than one physical location, it's likely that you'll need more than one emergency location. Add a new emergency location.

test_0816
2079 Brentwood Drive, Austin TX 78756, US

Apply Cancel

- Define a location defined by switch (Chassis) ID. The location can be the same since a room defined in the previous step can reflect a room in a building using the same switch).

Microsoft Teams admin center

Emergency addresses \ test_0816 \ Building A

test_0816
→ Building A
2079 Brentwood Drive, Austin TX 78756, US, Building A
Validated
Location ID: d4e9b00-1d70-11ed-8943-df1c123f0549
Organization name: Test_Test_Audiocodes(R&D lab)

Voice users: 0
Phone numbers: 0

Place network summary
Subnets: 0
Wi-Fi access points: 0
Switches: 0
Ports: 0

Add network switch
Chassis ID: B4-14-B9-BE-C0-00
Description: Add a description so you know why it was created
Emergency location: test_0816 → Building A, 2079 Brentwood Drive, Austin TX 78756, US, Building A
Apply Cancel

- Define a location by subnet. The location can be defined like switch ID (if in charge of several buildings, since it reflects a perimeter or an area).

Microsoft Teams admin center

Emergency addresses \ test_0816 \ Building A

test_0816
→ Building A
2079 Brentwood Drive, Austin TX 78756, US, Building A
Validated
Location ID: d4e9b00-1d70-11ed-8943-df1c123f0549
Organization name: Test_Test_Audiocodes(R&D lab)

Voice users: 0
Phone numbers: 0

Place network summary
Subnets: 0
Wi-Fi access points: 0
Switches: 1
Ports: 0

Add subnet
IP version: IPv4
Subnet: 192.168.202.0
Description: Add a description so you know why it was created
Emergency location: test_0816 → Building A, 2079 Brentwood Drive, Austin TX 78756, US, Building A
Apply Cancel

- Verify all settings have been implemented correctly, under the **Networks & locations** tab.

Networks & locations

Subnets

Wi-Fi access points

Switches

Ports

Each subnet must be associated with a specific network site. A client's location is determined based on the network subnet and the associated network site. You can associate multiple subnets with the same network site but you can't associate multiple sites with the same subnet. [Learn more](#)

Subnets summary

3

Subnets

3

Emergency locations

+ Add

+ Upload

Edit

Delete

3 items

✓	Subnet ⓘ	Description	Emergency location ⓘ
	192.168.202.0		test_0816
	192.168.1.0	Oleg's Wifi	test1105
✓	172.17.178.0	Lucky	test0407

Subnets

Wi-Fi access points

Switches

Ports

A network switch is a device that connects multiple local area network (LAN) devices, like desktops running the Teams app, using Ethernet connections. The devices use this connection to receive and transfer data to each other. Each network switch is stamped with a chassis ID, which identifies the switch on the network. [Learn more](#)

Switches summary

3

Switches

2

Emergency locations

+ Add

+ Upload

Edit

Delete

3 items

✓	Chassis ID ⓘ	Description	Emergency location ⓘ
✓	B4-14-89-BE-C0-00		test_0816

9. Verify all settings have been implemented correctly, under the **Networks & locations** tab.

Subnets Wi-Fi access points Switches **Ports**

A network port is a physical Ethernet connection that connects multiple LAN (local area network) devices like a desktop computer that is running the Teams app. For each port, you need to enter the chassis ID of the network switch that connects the port to a switch in Teams. [Learn more](#)

Ports summary

1 Port **1** Emergency location

+ Add + Upload Edit Delete 1 item

✓	Port ⓘ	Description	Chassis ID ⓘ	Emergency location ⓘ
✓	Gi 1/0/19		B4-14-89-BE-C0-00	test_0816



After a location has been defined, make sure that:

- AudioCodes' phone runs the latest firmware released.
- AudioCodes' phone runs the Teams app issued June 2022 and later (U3-A and higher).
- E911 information is displayed on the phone screen 30-120 minutes after the location is set (time estimated under laboratory conditions).
- To trigger information to be shown before that time period, dial a 933-test call and check if the location has been accepted, displayed and vocalized by the announcer.

Updating Phone Firmware Manually

AudioCodes' Android Device Utility allows network administrators to manually update a phone's firmware.




- Firmware downgrade is blocked as of version 2.3.453 to prevent a possible race condition between Microsoft TAC and AudioCodes' OVOC | Device Manager.
- After an upgrade is completed and the popup of 'Reboot now or Later' appears, wait for about 30 seconds before pressing the **Reboot** button.

➤ To manually update a phone's firmware:


1. From the PC's **Start** menu, select the app icon or click the application's exe file in the folder in which you saved it.

2. In the 'Android Phone Address' field, enter the IP address of the device (get it by touching the user's picture | avatar in the home screen > **Settings** > **Device Settings** > **About phone** > **Status** > **IP Address**).
3. Click **SSH Connect**; a connection with the device is established.

4. Under the 'Single Operations' section of the screen next to the field 'Firmware file', click the **Browse** button and navigate to and select the candidate image file.
5. Click the **Submit** button; a firmware upgrade process starts; the phone is automatically rebooted; a notification pops up when the process finishes. The phone notifies you that it's being updated and rebooted.

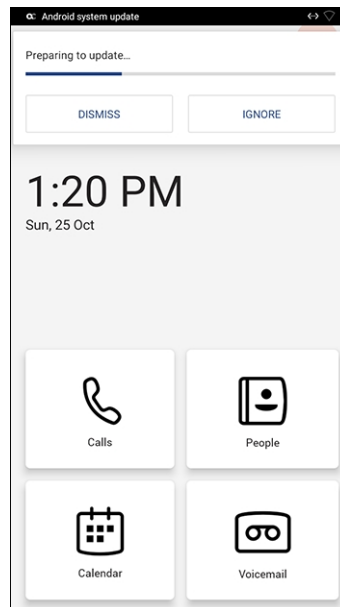


6. Swipe down twice in rapid succession to present the **Manage notifications** option.

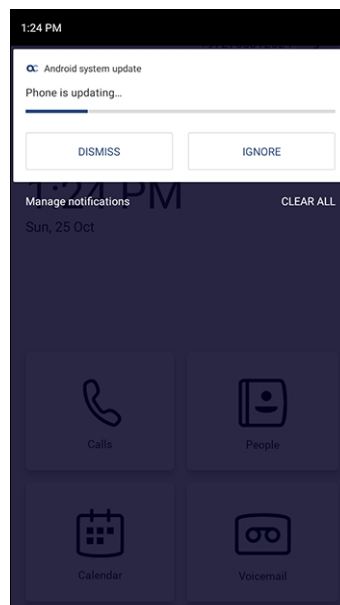

7. Touch **Manage notifications**; the screen that is then displayed allows viewing notifications such as:
 - Upgrade state (Preparing, updating, etc.)
 - Internet access issues

8. After the update is completed, the phone reboots.

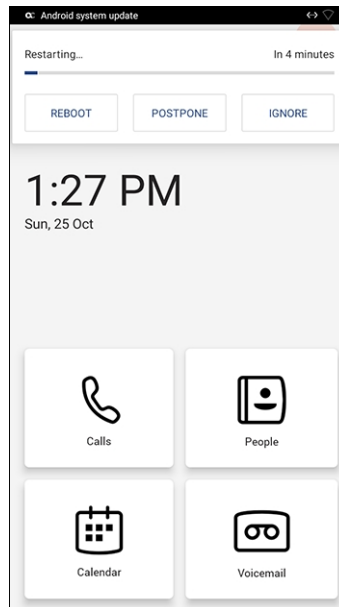

The above is also displayed when the phone is upgraded remotely from Microsoft Admin Portal or from AudioCodes' Device Manager.

Loading Certificates to Phones

The following shows how to load user certificates to a single device and to multiple devices. Before loading certificates, put the certificate files in a designated folder.

Certificates can be downloaded using:

- Device Manager (see the *Device Manager Administrator's Manual*)
- Android Device Utility as shown here:

Device Cert (*.cert)		Browse
Device Cert Key (*.key)		Browse
Device pfx (*.pfx)	PWD	Browse
CA Cert (*.cert)		Browse



- The extension of the device certificate file must be **.crt**
- The extension of the private key must be **.key**
- Device certificates can be provisioned in **.pfx** file format (combining **.crt** and **.key**). The following parameter values can be configured in the devices' Configuration File:
 - ✓ /security/device_certificate_url = <url>/certificate.pfx
 - ✓ /security/device_private_key_url = NULL
 - ✓ security/device_certificate/password=<pfx password>
- The extension of the CA certificate file must be **.crt**. It's possible to load up to 5 CA certificates to the phone using the placement selector (0-4) (Default: 0).
- The IP address of the PC on which the certificate files are stored must be entered as shown here:

PC IP Address:	10.13.2.147
Syslog UDP port:	514
PC folder	D:/Flare/IPP/Content/Resources/Images/C450HC Browse

- The loaded certificate's file name must be without spaces. Spaces between words can be created using an underscore _



- The CA certificate (ca_cert) can also be loaded to devices using AudioCodes' Device Manager, in the 'Template' screen.
- Certificate loading is performed using HTTP. Prior to version 1.19, it was performed using SCP. The HTTP port is 8000. Make sure the port is not blocked by the organization's firewall.

AudioCodes Android Device Utility

Certificates can be loaded to a phone or to multiple phones using AudioCodes' Android Device Utility.

➤ To load certificates to a single device:

1. In the Android Device Utility (see [Android Device Utility](#) on page 141 for detailed information about the application), enter the phone's IP address and click **SSH Connect** shown in the next figure.

Android Phone Utility V1.1.22

Single-Operations

Android Phone Address: 10.59.200.176 SSH Connect SSH Disconnect

Username: admin

PWD: 1234

2. Click the **Browse** button next to the field 'Device Cert' shown in the next figure and then navigate to and select the certificate file to download.



The loaded certificate's file name must be without spaces. Spaces between words can be created using an underscore _

3. Click the **Load Certificates** button shown in the next figure, to add the certificate.

4. After a short period, view in the results pane 'Cert Successfully Installed'.

➤ **To load certificates to multiple devices:**

1. In the Android Device Utility (see [Android Device Utility](#) on page 141 for more information), enter the phone's IP address and click **SSH Connect**.




The loaded certificate's file name must be without spaces. Spaces between words can be created using an underscore _

2. Click the **Browse** button next to the field 'Device Cert' under Multi Operations and then navigate to and select the certificate file to download.

3. Adjacent to the field 'Phones IP list' under 'Multi Operations', click the **Browse** button and then navigate to and select the txt file listing the IP addresses of the phones to which to

download the certificates. The IP addresses are listed one under the other. Each occupies its own line. No notation between them is required.

4. Click the now activated **Load Certificates** button shown in the next figure, to add the certificates to the phones.

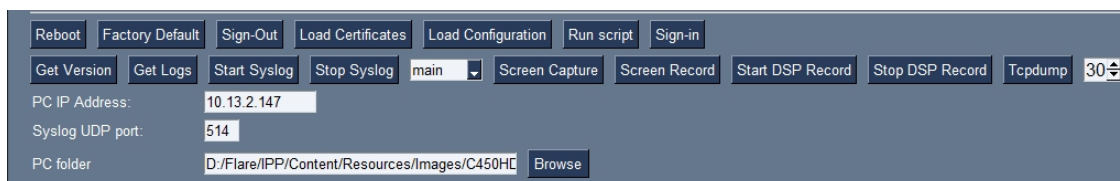

5. After a short period, view in the results pane 'Certs Successfully Installed'.

Certificate Enrollment using SCEP

[Available from version 1.19] The device supports certificate enrollment using Simple Certificate Enrollment Protocol (SCEP) using Microsoft's Network Device Enrollment Service (NDES) server, thereby allowing device certificates and CA certificate provisioning to be scaled to multiple devices.

After devices are provisioned with a SCEP-related configuration, they receive a CA certificate from the NDES, issue a Certificate Signing Request (CSR) to the NDES and receive a device certificate signed by the CA certificate (the one that the device received from NDES).

Configure the following three parameters:

- security/SCEPEnroll/ca_fingerprint
- security/SCEPEnroll/password_challenge
- security/SCEPServerURL

The next table shows the descriptions of the SCEP parameters.

Parameter	Description
security/SCEPEnroll/ca_fingerprint	Define the thumbprint (hash value) for the CA certificate. Default value: NULL. Network admins must set its value to (for example): 3EBE50003ABF1DF5E6B5A3230B02B856
security/SCEPEnroll/password_challenge	Define the enrollment challenge password. Default value: NULL. Network admins must set its value to (for example): 7A7F9FC4BB7625F0935E67EA6D6322ED
security/SCEPServerURL	Define the SCEP server URL. Default: NULL. If you use Microsoft NDES server, use:

Parameter	Description
	https://<NDES server IP address/Hostname>/certsrv/mscep/mscep.dll/pkiclient.exe
security/SCEPEnroll/renewal/advance threshold	Define the renewal advance threshold of the device certificate. Configure between 50 and 100 (in units of percentage) Default: 80 This indicates that a renewal of the certificate (device.crt) will be initiated when 80 percent of its validity is reached.
security/SCEPEnroll/rollover/advance threshold	Specify the threshold of the CA Root certificate's validity at which to initiate a renewal. Configure between 50 and 100 (in units of percentage). Default: 90 This indicates a renewal of the certificate (CAROOT.crt.) will be initiated when 90 percent of its validity is reached.
security/CSR/CommonName	Define a value according to the following 'wild-card' format: {mac} – the device's MAC address {IP} - the device's IP address {model} - the device model
security/CSR/Country	Define the name of the country used to generate the certificate signing request (CSR). Note: The ISO (International Organization for Standardization) code of the country / region in which the organization is located.
security/CSR/Email	Optionally, define the email address used to generate the CSR.
security/CSR/Organization	Optionally, define the legal name of the organization used to generate the CSR.
security/CSR/State	Optionally, define the name of the state / province used to generate the CSR.


Manually Performing Recovery Operations



Besides manual recovery options, the Android phones also feature an independent, automatic problem detection and recovery attempt capability that can culminate in recovery mode or in switching image slots. Android phones also feature a 'hardware watchdog'. This feature resets the phone if Android is stacked and doesn't respond (though Android stacking is unlikely); there's no recovery process; the phone is only reset.

All AudioCodes devices have a reset key or a combination of keys on the keypad to reset it.

The following figure shows the reset key located on the base of the C470HD.

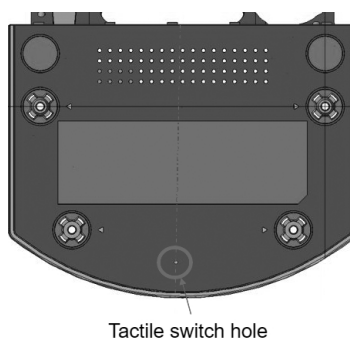

While a device is powering up, you can perform recovery operations by long-pressing the device's reset key.

When long-pressing the reset key, the device's main LED changes color after every *n* seconds; each color is aligned with a recovery operation option.

When?	Action	Press for how long?	LED flashes 3x after release
Start pressing immediately after power up (on U-Boot / Universal Boot Loader)	Recovery mode (you can restore defaults from there)	~ 4 seconds	Red
	Switch slots A / B	~ 10 seconds	Green
	Loader	~ 15 seconds	Blue / Yellow
	Restore defaults	~25 seconds	Green + blue / Green + yellow
When successfully booted (on Android)	Reboot	From the 'Admin' menu	-

When?	Action	Press for how long?	LED flashes 3x after release
	Restore defaults	Long-press Hold key for ~15 seconds	Flashes yellow once after release

Enrolling a Device with Intune Policies

Two ways to enroll an AudioCodes Teams Android-based device in Intune:

- Create a dynamic group - see [here](#)
- Create an exclusion group - see [here](#)

Creating a Dynamic Group


See [here](#) how to create dynamic groups in Intune for enrolling AudioCodes Android-based Teams devices.

Creating an Exclusion Group

The information presented here shows how to *exclude* AudioCodes Android-based Teams devices from the organization's Intune policies.

➤ To exclude devices from the organization's Intune policies:

- Remove all conditions that were previous configured:
 - Access Microsoft Azure Government Portal Home > Conditional Access Policies > Require Hybrid Joined or Intune to Access Cloud Resources Conditional Access policy as shown in the figure below.
 - Exclude the device from Intune policies and replace **displayName -contains "C4xxHD"** where "C4xxHD" is the name of the device model (**device.model**).

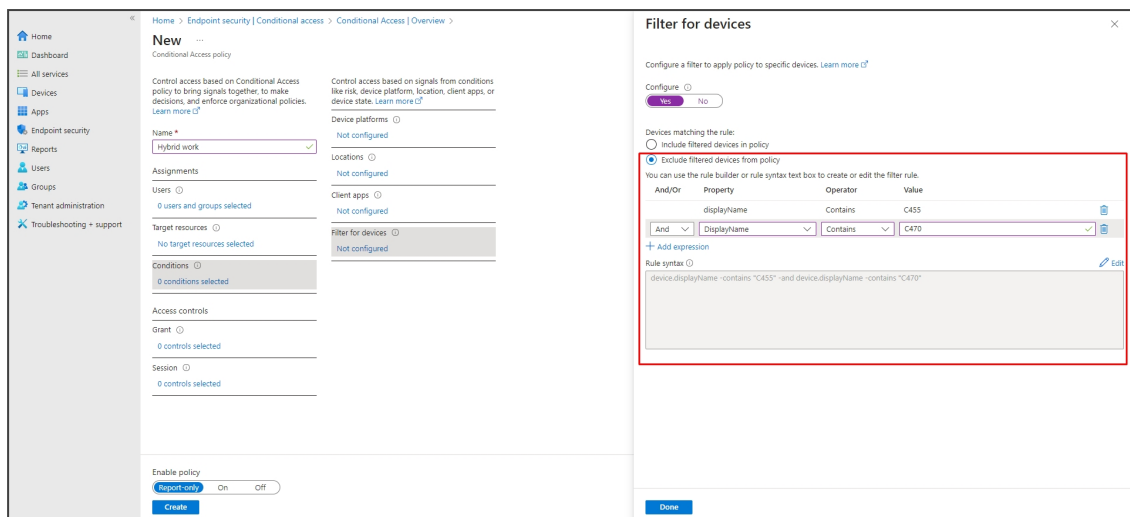


Removing Devices from Intune admin center

You can remove devices from Intune admin center when the maximum capacity of signed-in devices is reached.

➤ To remove devices from Intune admin center:

1. Go to Microsoft 365 admin center [portal.office.com] and log in with an Administration account.
2. Navigate to **Devices > Android devices**.

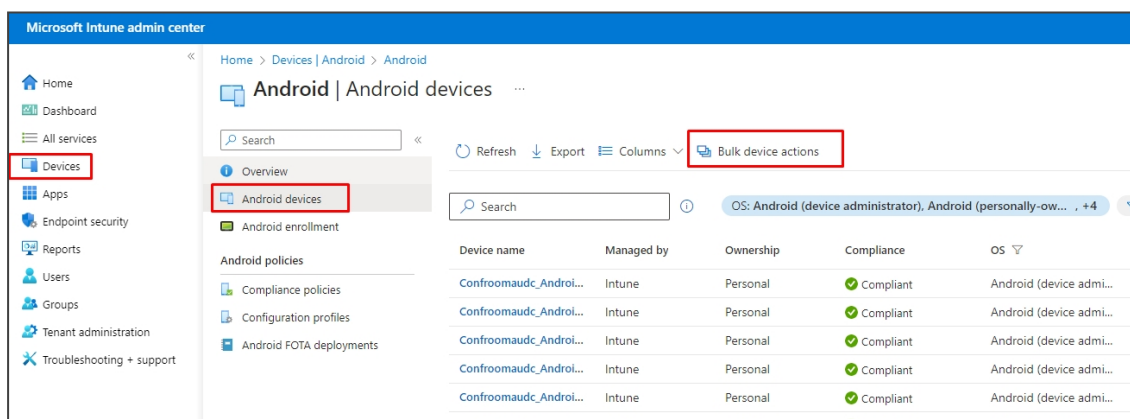

The Intune admin center service is licensed according to the terms of individual licenses so not all network admins will be able to navigate to it. Check if the license you're using includes the service or not.

3. Click **Bulk device actions**.

Home > Devices | Android > Android | Android devices >



Bulk device action ...

1 Basics 2 Devices 3 Review + create


OS *  Android (device administrator) ▼

Device action *  Delete ▼


 If you delete this device, you will no longer be able to view or manage the device from the Intune portal. The device will no longer be allowed to access your company's corporate resources. Company data may be wiped from the device if the device tries to check-in after it is deleted.


4. From the 'OS' drop-down under the **1 Basics** tab, select **Android (device administrator)**. From the 'Device action' drop-down, select **Delete**. Click **Next**.

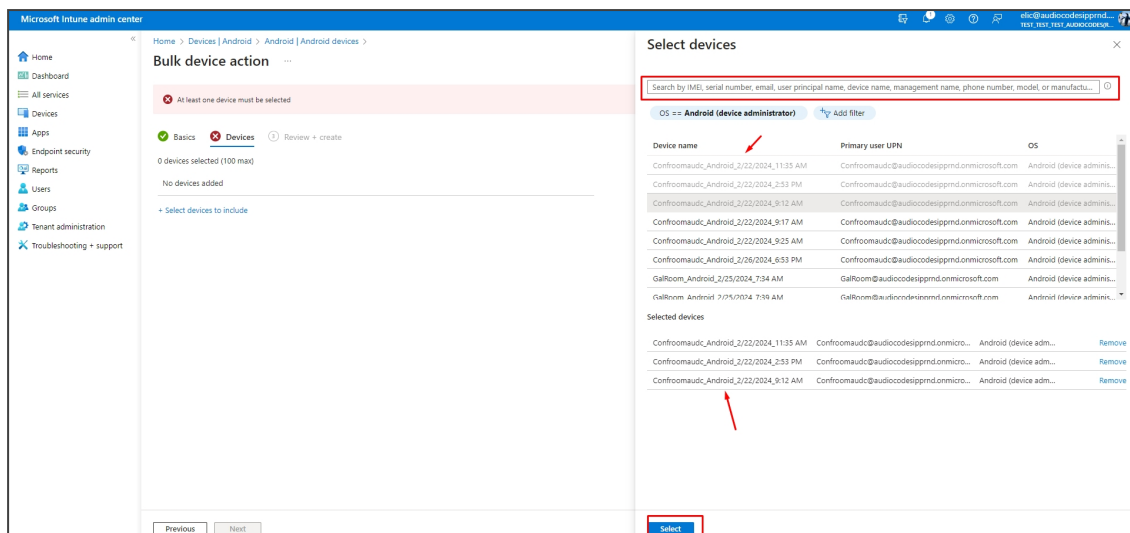

5. Select the devices to delete (i.e., to remove from Intune admin center), and then click **Select**.

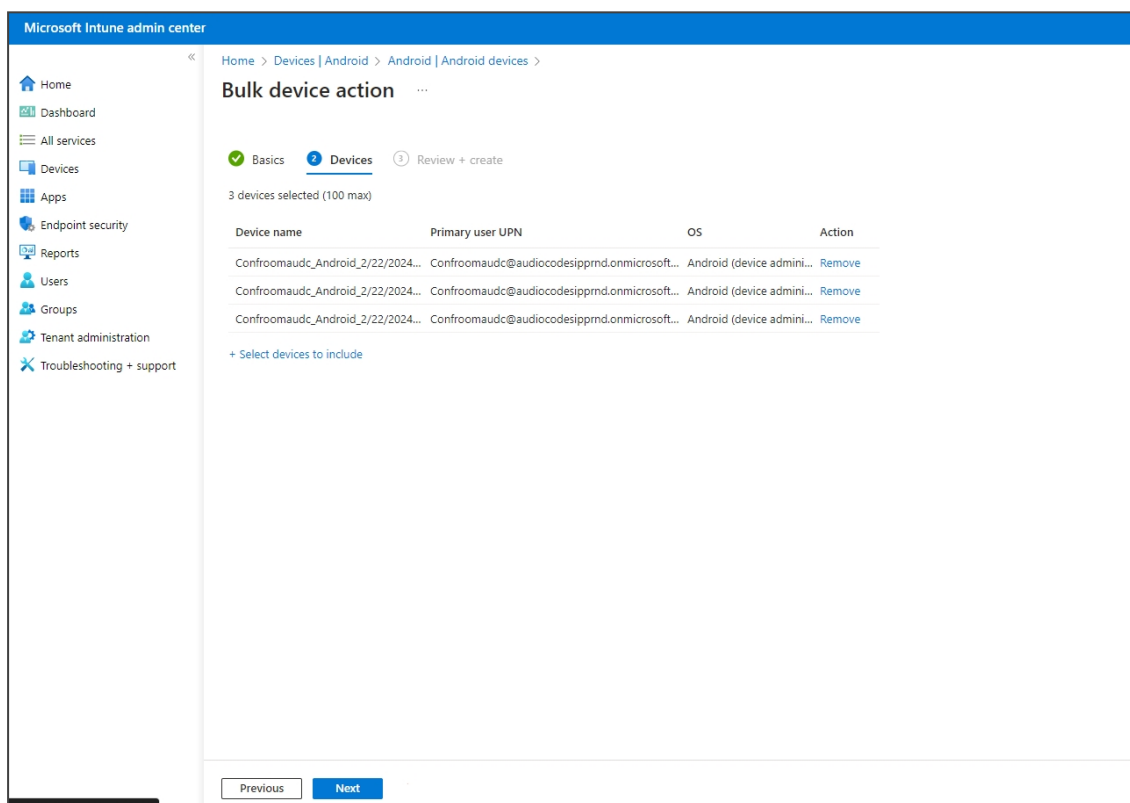

6. Under the **2** Devices tab, click **Next**.

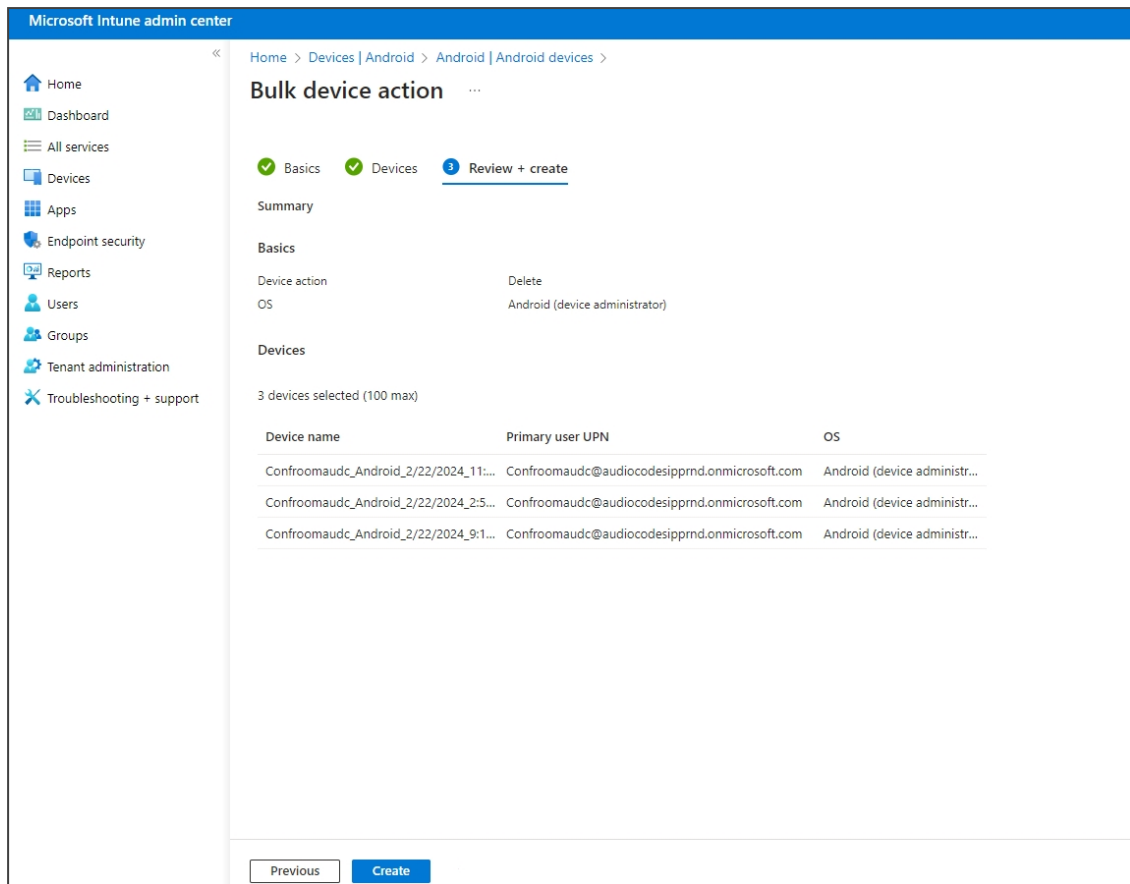

- Under the **3 Review + Create** tab, make sure your definitions are correct and then click **Create**; admin receives a notification that a delete action from Intune was successfully initiated on all devices and that *n* devices were removed.



It may take some time to completely sync the devices with the account so after deleting the devices wait for 30 minutes before signing in.

Updating Microsoft Teams Devices Remotely

For instructions on how to update Microsoft Teams devices remotely, see [here](#).

Defining Password Complexity

Admin-defined password complexity is designed mainly for non-touch screen phones but it can also be applied to touch-screen phones. The feature provides admin with the capability to finely adjust password complexity, ensuring that customers using low-cost phones (LCPs) can easily input passwords using the phone's hard keys.

Admin can set password complexity using the cfg configuration file parameter 'system/admin_password/strength'.

- When updating LCPs to the current version, the parameter is by default set to COMPLEXITY_MEDIUM. Password complexity rule: At least six characters and/or digits must be used.

- When updating non-LCP touch-screen phones to the current version, the parameter default is COMPLEXITY_HIGH. Password complexity rules are as follows:



- If a phone was configured with a *complex* password in earlier versions, it *preserves* that password.
- Admin can optionally change it to a *non-complex* password.

Disabling a Device's USB Port



Applies to all AudioCodes' Teams phones.

This functionality complies with the physical security requirements of some customers, specifically, customers who are in the government space.

Customer admins can disable a phone's USB port with the following parameter available in the phone's .cfg configuration file:

```
admin/usb_enabled=1  
admin/usb_enabled=0
```

The parameter can be configured via the AudioCodes One Voice Operations Center (OVOC) Device Manager module used to manage AudioCodes' Teams phones, as well as via SSH command.

The parameter is also available in the template which can be applied to multiple phones via the Device Manager.




- After setting the parameter to 0, the phone cannot under any circumstances detect a plugged-in USB device.
- Additionally, all USB-related settings are removed from the phone's user interface.

Enabling a Phone to be used as an Audio Device

USB host mode is supported, i.e., the phone can be connected to a PC via a USB-A Male – USB-A Male cable, allowing it to be used as the PC's audio device such as an external speaker. Click [here](#) to view a video clip demonstrating how to use the phone in Audio Device Mode. The principle is the same across all AudioCodes Teams phone models.

➤ To set up the feature:


1. In the phone's Device Settings > USB, enable **Audio Device Mode**.

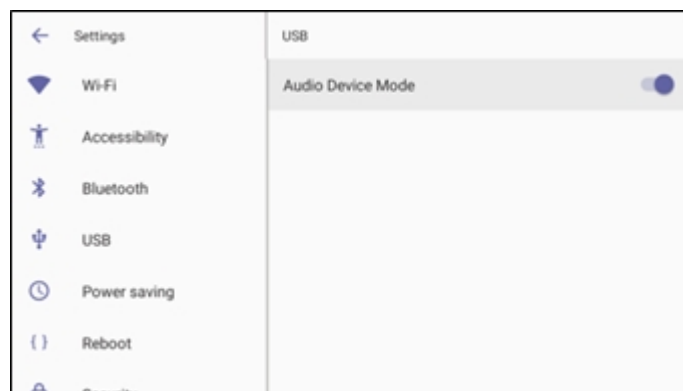

2. Connect the the USB-A - USB-A cable from the phone to the PC.



- It is important to set the feature up *in this order* (i.e., first enable USB mode and then connect the USB cable).
- If the cable is connected before enabling the mode, you'll get this message:

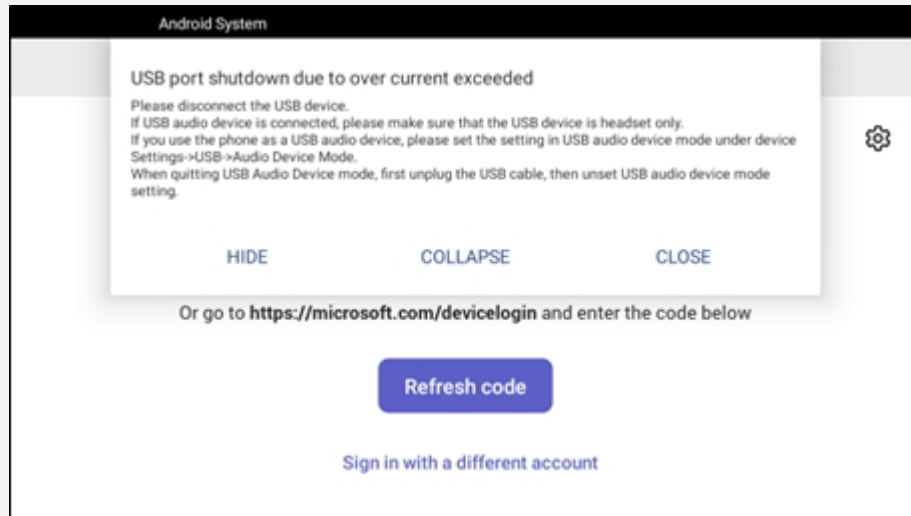

3. On a PC running Windows OS, navigate to **Settings > Devices > Audio** and make sure the phone is set to be the PC's default audio device.
4. Play media such as YouTube and Windows Media Player via the phone speaker.

Managing Phones with the Device Manager

AudioCodes' Device Manager manages Android-based Teams phones in a similar way to UC-type phones. Teams phones' configuration parameters are in the same format as UC phones. A .cfg configuration file is defined for each device. Device Manager version 7.8.2000 and later supports Android-based Teams devices.

Zero Touch Provisioning is supported in a non-tenant aware manner; each local DHCP Option 160 must be configured with a fully-specified URL pointing to **dhcption160.cfg** as shown here:

Table 6-1: DHCP Option 160 URL

DHCP Options Configuration	
DHCP option 160 URL ('dhcption160.cfg')	
SYSTEM URLS	
OVOC accesses phones directly:	https://ppdm.audiocodes.com/firmwarefiles/pp/dhcption160.cfg
OVOC accesses phones via SBC HTTP Proxy:	https://SBC_PROXY_IP:SBC_PROXY_PORT/firmwarefiles/pp/httpproxy/
Edit Dhcption160.Cfg Template Download Dhcption160.Cfg Template Upload Dhcption160.Cfg Template	
Generate 'Dhcption160.Cfg'	
Advanced: DHCP Option 160 With Tenant Configuration	

This URL is displayed in the Device Manager page under **Setup > DHCP Options Configuration**. After devices are added to the Device Manager, they're allocated to tenants by selecting

Change Tenant in the 'Actions' menu. Unless already used, it's recommended to leave the default tenant as a 'lobby' for the new devices. The above URL can also be configured in AudioCodes' Redirect Server. Android-based Teams devices currently support:

- Provisioning of configuration
- Provisioning of firmware
- Switching to UC / Teams
- Monitoring (based on periodic Keep-Alive messages sent from devices)
- Resetting the device

The Device Manager's 'internal' functions (which don't involve devices) are:

- Change tenant
- Change template
- Show info
- Generate Configuration
- Delete device status
- Nickname

Actions that go beyond the devices' periodic provisioning cycle will be supported in next releases. The **Check Status** option is irrelevant for Android-based Teams devices therefore it's omitted from the 'Actions' menu.



- To change a device's configuration, see the *Device Manager Administrator's Manual*. Changing a device's configuration using the Device Manager is the same for Android-based Teams devices as for UC devices.
- To commit a change made at the template/tenant/site/group/user level, perform **Generate Configuration**. The change can be validated in the device's .cfg file. The Android-based endpoint pulls the updated configuration when the next periodic provisioning cycle occurs.

Configuring a Periodic Provisioning Cycle

Network administrators can configure how often periodic provisioning cycles will occur, to suit enterprise management preference.

➤ To configure how often periodic provisioning cycles will occur:

- Use the following table as reference.

Table 6-2: Periodic Provisioning Cycle

Parameter	Description
provisioning/period/type	Defines the frequency of the periodic provisioning cycle. Valid

Parameter	Description
	values are: ■ HOURLY ■ DAILY (default) ■ WEEKLY ■ POWERUP ■ EVERY5MIN ■ EVERY15MIN Each value type is accompanied by additional parameters (see Supported Parameters on the next page) that further defines the selected frequency.

Configuring TimeZone and Daylight Savings

Network admin can configure TimeZone and Daylight Savings to suit enterprise requirements.



AudioCodes' Teams phones feature a **Automatic Time Zone Detection** mechanism that allows the device to automatically detect the time zone via geographical location. If time zone is not configured, this feature is implemented.

➤ To configure TimeZone and Daylight Savings:

- Use the following table as reference.

Table 6-3: TimeZone And Daylight Savings

Parameter	Description
date_time/-time_dst	[Boolean parameter]. Configuring ENABLED adds one hour to the configured time. Valid values are: ■ 1 ■ 0

For example, to configure Central European Summer Time (CEST) you can either configure:

date_time/timezone=+01:00

date_time/time_dst=1

-OR-

date_time/timezone=+02:00

date_time/time_dst=0

Managing Devices with HTTPS

Android-based Teams devices support an HTTPS connection.

➤ To establish an HTTPS connection:

- The server certificate must be signed by a well-known Certificate Authority
- OR-
- A root/intermediate CA certificate must be loaded to the device's trust store via Configuration File parameter '/security/ca_certificate/[0-4]/uri'

➤ To maintain backward compatibility with devices previously running UC versions:

- Configure parameter '/security/SSLCertificateErrorsMode' to **Ignore**

Supported Parameters

Listed here are the Configuration File parameters currently supported by Android-based Teams devices. They're in AudioCodes' UC version format. The parameters are comprised of Microsoft configuration profile settings and AudioCodes' device-specific parameters.

- general/silent_mode = 0 (default)/1
- general/power_saving = 0 (default)/1
- phone_lock/enabled = 0 (default)/1
- phone_lock/timeout = 900 (default) (in units of seconds)
- phone_lock/lock_pin = 123456
- display/language = English (default)
- display/screensaver_enabled = 0/1
- display/screensaver_timeout = 1800 (seconds)
- display/backlight = 80 (0-100)
- display/high_contrast = 0 (default) /1
- date_time/timezone = +02:00
- date_time/time_dst = 0 (default) /1
- date_time/time_format = 12 (default) / 24
- network/dhcp_enabled = 0/1
- network/ip_address =
- network/subnet_mask =
- network/default_gateway =

- network/primary_dns =
- network/secondary_dns =
- network/pc_port = 0/1
- office_hours/start = 08:00
- office_hours/end = 17:00
- logging/enabled = 0/1
- logging/levels = VERBOSE, DEBUG, INFO, WARN, ERROR, ASSERT, SILENT
- admin/default_password = 1234
- admin/ssh_enabled=0/1 (default)
- security/SSLCertificateErrorsMode = IGNORE, NOTIFICATION, DISALLOW (default)
- security/ca_certificate/[0-4]/uri
- provisioning/period/daily/time
- provisioning/period/hourly/hours_interval
- provisioning/period/type = HOURLY, DAILY (default), WEEKLY, POWERUP, EVERY5MIN, EVERY15MIN
- provisioning/period/weekly/day
- provisioning/period/weekly/time
- provisioning/random_provisioning_time

Configuring QoS on PC Port

QoS settings for the PC port are supported (VLAN for PC port). Admin can configure PC port QoS via the device's cfg configuration file which can be loaded to the device via (for example) AudioCodes' Device Manager. The following three cfg configuration file parameters are available configuring the feature:

Parameter	Description
network/lan/vlan/pc_port_tagging/enabled=0	Defines the PC port VLAN as enabled / disabled. ■ 0 = PC port VLAN disabled ■ 1 = PC port VLAN enabled Default: 0
network/lan/vlan/pc_port_id=0	Defines the PC port VLAN ID. Range: 0-4096 Default: 0

Parameter	Description
network/lan/vlan/pc_port_priority=0	Defines PC port VLAN priority. Range: 0-7 Default: 0

The feature provides PC port QoS for AudioCodes' Android-based phones which feature settings for VLAN *and* VLAN Priority (802.1p) for the PC port.

Configuring Admin Login Timeout

Admin login can be configured to time out. The timeout's value can be configured using a newly added cfg configuration file parameter:

settings/admin_logout_timeout,values=3

- Default value: 3 (minutes)
- Valid values: 1-10 (minutes)



- The cfg file can be loaded to the device using Device Manager.
- Timing begins when exiting the 'Device Settings' menu.
- When the timeout expires, the device logs out automatically.
- The functionality works for both registered and unregistered devices.

Monitoring Phone Process Statuses

Admin can monitor process statuses in the phone's System State screen.

If initial provisioning is unsuccessful or if admin encounters an issue related to the network / connection to Device Manager, this feature gives admin an indication as to why. The feature enables debugging via the phone screen without requiring external systems. Admin can check connectivity independently of external apps.

The figure below shows the System State screen (**Settings > Debugging > System State**).

← System State LLDP CDP Ran with fail result, The device did not receive any CDP/LLDP information from the switch IEEE 802.1x Didn't run Network Ran with success result DHCP Option Ran with success result, IP : 10.100.102.12 DNS Ran once with success result, Server: [10.100.102.1] NTP Ran with success result, Server: time.android.com/216.239.35.8 Switch To Voice Vlan Didn't run Proxy Configuration Didn't run Connect To Device Manager Running, connected to https://ippdm.audiocodes.com:443/	← System State Get Certificate By SCEP Didn't run Get Certificate By HTTP Ran once with fail result, Reject response. Return code: 600 Firmware Update Ran with success result, Firmware file C470HD_AN_2.3.387_test.zip is the same version currently running on your device Configuration Update Ran with success result, Configuration file 00908fc8b2b0.cfg is identical to the existing file Redirect Didn't run Apps Update Ran, might be OK, The file is currently unavailable; the URL pointing to it has already been used or is empty. It was therefore not downloaded. Peripheral Devices Firmware Update Ran, might be OK, The file is currently unavailable; the URL pointing to it has already been used or is empty. It was therefore not downloaded. Pairing BLE Discovery Didn't run
--	--

7 Troubleshooting


The information presented here shows how to troubleshoot AudioCodes devices.

DSCP

The phone's Teams application supports DS (Differentiated Services) containing a differentiated Services Code Point (DSCP) value and an ECN (Explicit Congestion Notification) value, for monitoring Quality of Service (QoS).

DSCP is part of the IP header that defines the type of routing service to tag outgoing voice packets originated from the phone. It informs routers that this packet must receive a specific QoS. Values can be set in decimal (e.g., 184) or hexadecimal (e.g., 0xb8). The default value is **0xb8** (184).

Figure 7-1: DS Field, DSCP

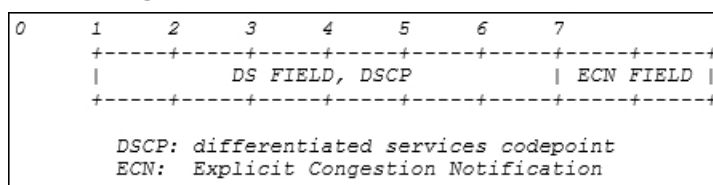

The DSCP value for audio is **0x46**.

See also [Microsoft's website](#) for more information.



The DSCP value can be adjusted *on the server*; it cannot be adjusted on the client. See the figures below for recommended values.

Figure 7-2: Recommended Values

Table 1. Recommended initial port ranges

Media traffic type	Client source port range	Protocol	DSCP value	DSCP class
Audio	50,000–50,019	TCP/UDP	46	Expedited Forwarding (EF)
Video	50,020–50,039	TCP/UDP	34	Assured Forwarding (AF41)
Application/Screen Sharing	50,040–50,059	TCP/UDP	18	Assured Forwarding (AF21)

Figure 7-3: Audio

2057	47.390455	192.168.2.104	172.17.178.203	UDP	84 50006 → 50012 Len=42
2058	47.390541	192.168.2.104	172.17.178.203	UDP	228 50006 → 50012 Len=186
2059	47.393899	192.168.2.104	172.17.178.203	UDP	151 50006 → 50012 Len=109
2060	47.395193	172.17.178.203	192.168.2.104	UDP	114 50012 → 50006 Len=72
2061	47.395209	172.17.178.203	192.168.2.104	UDP	114 50012 → 50006 Len=72


```

> Frame 2057: 84 bytes on wire (672 bits), 84 bytes captured (672 bits) on interface \Device\NPF_{296D2E63-3934-488A-8FAB-666A48797EE2}, id 0
> Ethernet II, Src: AudioCod_9c:1a:38 (00:90:8f:9c:1a:38), Dst: VMware_ff:63:15 (00:0c:29:ff:63:15)
> Internet Protocol Version 4, Src: 192.168.2.104, Dst: 172.17.178.203
  0100 .... = Version: 4
  .... 0101 = Header Length: 20 bytes (5)
  > Differentiated Services Field: 0xb8 (DSCP: EF PHB, ECN: Not-ECT)
    1011 10.. = Differentiated Services Codepoint: Expedited Forwarding (46)
      .... ..00 = Explicit Congestion Notification: Not ECN-Capable Transport (0)
  Total Length: 70
  Identification: 0xd3ba (54202)
  > Flags: 0x4000, Don't fragment
  Fragment offset: 0
  Time to live: 64
  Protocol: UDP (17)
  Header checksum: 0x4447 [validation disabled]
  [Header checksum status: Unverified]
  Source: 192.168.2.104
  Destination: 172.17.178.203
> User Datagram Protocol, Src Port: 50006, Dst Port: 50012

```

Users

Read the following if an issue with your phone occurs. Contact your network admin if necessary. Network admins can also use this documentation as reference.

Table 7-1: Troubleshooting

Symptom	Problem	Corrective Procedure
Phone is off (no screen displays and LEDs)	Phone is not receiving power	■ Make sure the AC/DC power adapter is attached firmly to the DC input on the rear of the phone. ■ Make sure the AC/DC power adapter is plugged into the electrical outlet. ■ Make sure the electrical outlet is functional. ■ If using Power over Ethernet (PoE), contact your network administrator to check that the switch is powering the phone.
Phone is not ringing	Ring volume is set too low	■ Increase the volume (see Adjusting Ring Volume on page 101)
Screen display is poor	Screen settings	■ Adjust the phone's screen brightness
Headset has no audio	Headset not connected properly	■ Make sure your headset is securely plugged into the headset port located on the side of the phone. ■ Make sure the headset volume level is adjusted adequately (see Adjusting Headset Volume on page 102).

Exporting Logs to USB when Phone is in Recovery Mode

This feature empowers users to seamlessly save logs while their phone is in recovery mode. In Android recovery mode, the system automatically mounts a partition, enabling users to connect a USB stick. By simply clicking the 'Export logs to USB disk' option, all logs are efficiently copied to the USB stick, providing a convenient and reliable method for log management during recovery procedures.

Network Administrators

Network admins can troubleshoot telephony issues in their IP networks using the following as reference.

Android Device Utility

AudioCodes' IP phone is by default accessed via Secure Shell (SSH) cryptographic network protocol after admin signs in.



SSH is by default disabled and can be enabled with Administrator permissions in the phone screen (**Device Administration > Debugging > SSH**).

AudioCodes provides admins with an SSH-based Android Device Utility.

➤ To sign in to the utility:


- Enter your username and password; **admin** and **1234** are the defaults.

The application gives network administrators the following debugging capabilities:


- [Capturing the Phone Screen](#) on page 143
- [Running Tcpdump](#) on page 144
- [Getting Information about Phones](#) on page 145
- [Remote Logging \(Syslog\)](#) on page 146
- [Getting Diagnostics](#) on page 149
- [Getting Logs](#) on page 150
- [Activating DSP Recording](#) on page 151
- [Deactivating DSP Recording](#) on page 152
- [Getting Information about Phones](#) on page 145

➤ To open the utility:

1. From the PC's **Start** menu, select the app icon or click the application's exe file in the folder in which you saved it.

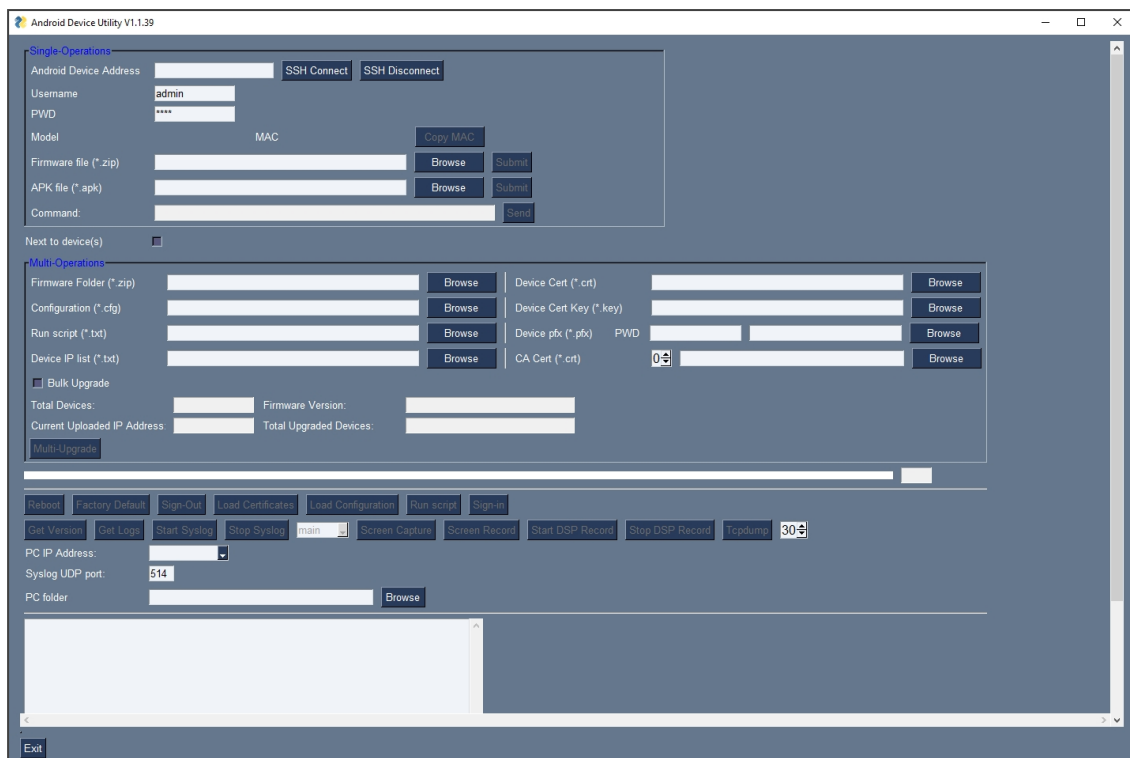

2. In the 'Android Phone Address' field, enter the IP address of the device (get it by touching the user's picture | avatar in the home screen > **Settings** > **Device Settings** > **About phone** > **Status** > **IP Address**).
3. Click **SSH Connect**; a connection with the device is established.

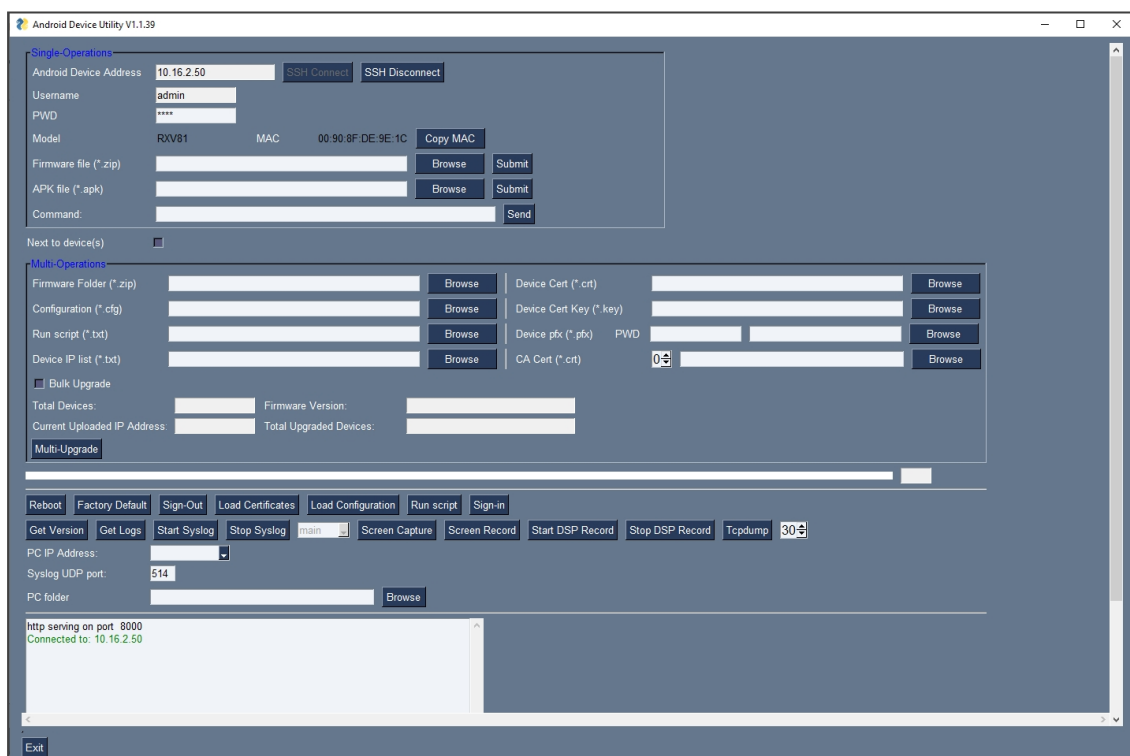


- Next to the field 'PC folder', click the **Browse** button and navigate to and select the folder to which to send data to use for debugging.

Capturing the Phone Screen

AudioCodes' Android Device Utility allows network administrators to effectively collaborate and debug issues using the screen-capturing feature. The feature enables capturing the phone's main screen.

➤ To capture the phone screen:

- Open the Android Device Utility: From the PC's **Start** menu, select the app icon or click the application's exe file in the folder in which you saved it.
- In the 'Android Phone Address' field, enter the IP address of the device (get it by touching the user's picture | avatar in the home screen > **Settings** > **Device Settings** > **About phone** > **Status** > **IP Address**).
- Click **SSH Connect**; a connection with the device is established.
- Next to the field 'PC folder', click the **Browse** button and navigate to and select the folder to which to send the screen captures.
- Make sure that the drop-down menu next to the **Screen Capture** button shows **main**.
- Click the **Screen Capture** button; the phone's screen is captured and the screenshot is saved and sent to the folder.

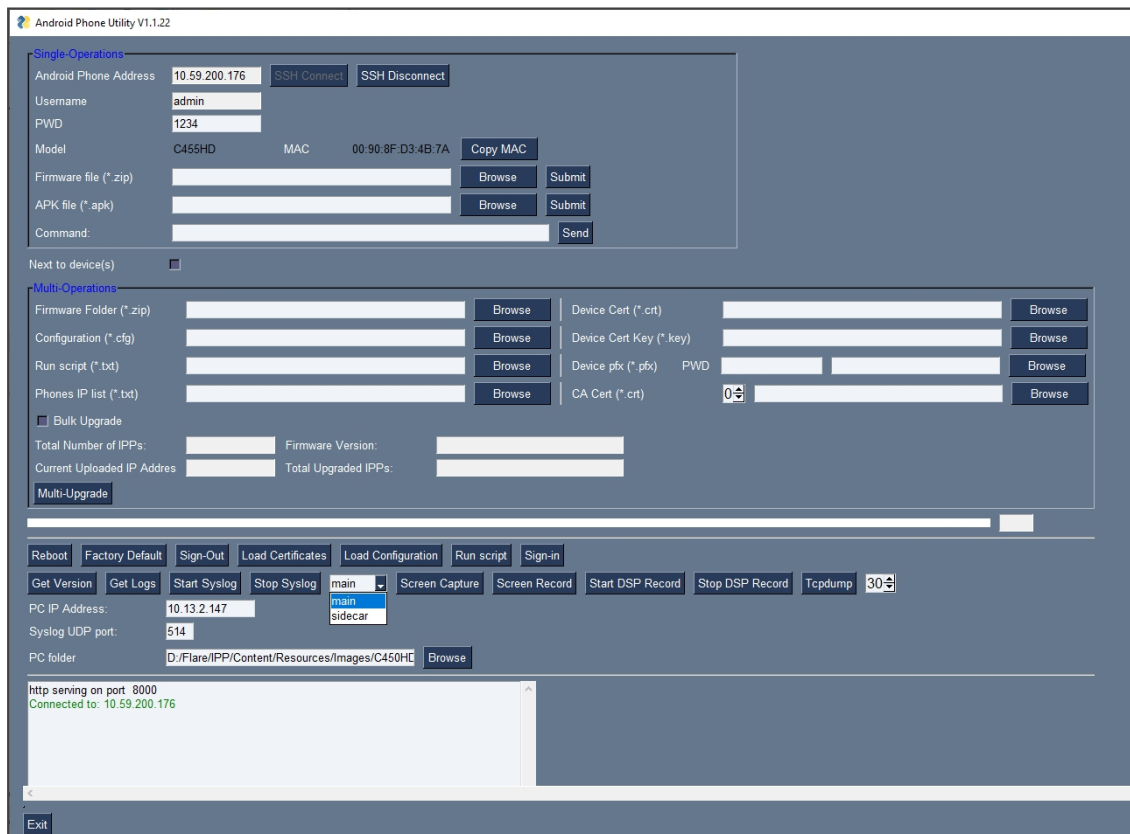


7. On your PC, navigate to the folder and retrieve the screenshot. Default file name: **screencap.png**. Rename it to a name related to the screen you captured. If you don't rename it, it will be overwritten the next time you take a screenshot.

Running Tcpdump

Tcpdump is a common packet analyzer that allows network administrators to display TCP/IP and other packets transmitted or received over the IP telephony network, for debugging purposes.

➤ To run Tcpdump:

1. In the Android Device Utility (see [Android Device Utility](#) on page 141 for more information about the application), enter the phone's IP address, click **SSH Connect** and browse to a folder on the PC to which to send the information.
2. Next to the **Tcpdump** button, set the time period or leave it at the default. Default: **30** seconds.
3. Click the **Tcpdump** button and then after the progress indicator reaches the end you'll view in the results pane a 'Finished' indication.

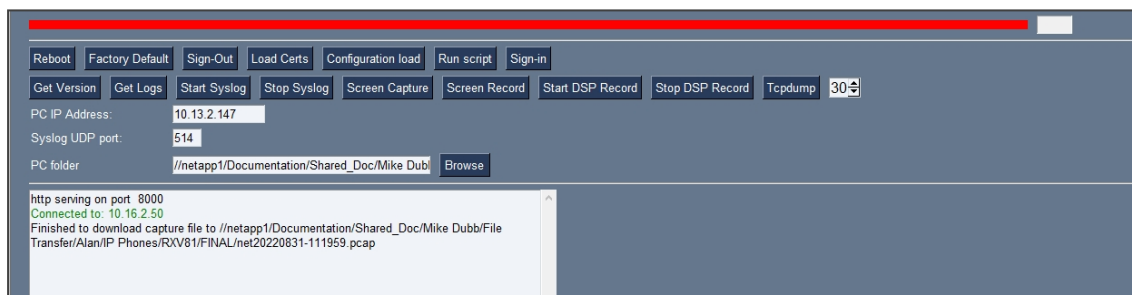

4. Open the folder on the PC to which you commanded the application to send the information and locate and open the file 'net.pcap'.

Alternatively, run Tcpdump *without* the utility.

➤ To run tcpdump without the utility:

1. Access the phone via SSH and run the following commands:

```
setprop ac.ac_tcpdump.timeout <seconds>
```

2. After defining the capturing time as shown in the preceding command, start the capture:

```
setprop ac.ac_tcpdump 1
```

3. Tcpdump capture file will appear in this location:

```
/sdcard/recording/net.pcap
```

4. After running Tcpcmdump, reproduce the issue.
5. Execute the following command from your PC command prompt (cmd):


```
scp -r admin@%deviceIp%:/sdcard/recording/ %FolderOnPc%
```

Getting Information about Phones

Network administrators can get information about phones using AudioCodes' SSH protocol based Android Device Utility.

➤ To get information about the phone:

1. Open the Android Device Utility (see [Android Device Utility](#) on page 141 for more information about the application), enter the phone's IP address, click the adjacent **SSH Connect** button and browse to a folder on the PC to which to send the information.
2. Click the **Get Version** button.

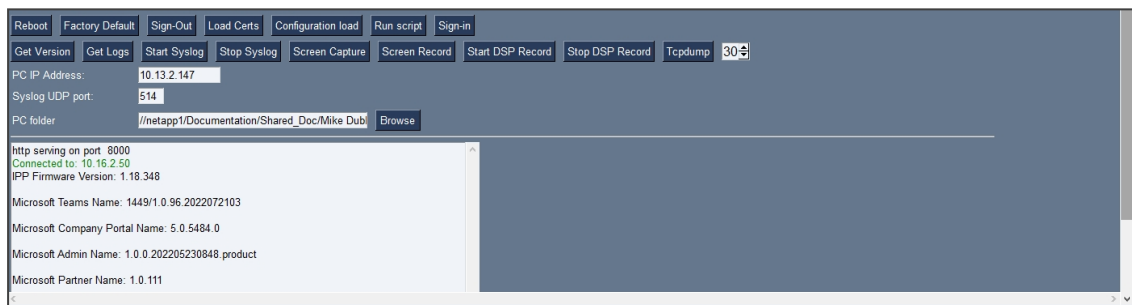

3. View the information in the pane.
4. Alternatively:
 - To get *firmware information*, in the 'Command' field enter the following and then click **Send**:

```
getprop ro.build.id
```

- To get *Bootloader information* using SSH protocol, in the utility's 'Command' field enter the following and then click **Send**:

```
getprop ro.bootloader
```

- To get *DSP information* using SSH protocol, in the utility's 'Command' field enter the following and then click **Send**:

```
getprop ro.ac.dsp_version
```

- To get the *Microsoft Teams version* using SSH protocol, in the utility's 'Command' field enter the following and then click **Send**:

```
getprop ro.teams.version
```

- To get the *Microsoft Company Portal version* using SSH protocol, in the utility's 'Command' field enter the following and then click **Send**:

```
getprop ro.portal.version
```

- To get the *Microsoft Admin version* using SSH protocol, in the utility's 'Command' field enter the following and then click **Send**:

```
getprop ro.agent.version
```

Remote Logging (Syslog)

Remote Logging via Syslog provides the same log level as Device Diagnostics (performed via the Microsoft Teams Admin Center) with some additional information that may be relevant to device issues (not Teams application issues). Device Diagnostics via the Microsoft Admin Center are saved to the device sdcard and collected after the event. When performing Remote Logging via Syslog, the logs are collected in real time.

Remote Logging via Syslog can be enabled from the

- [Android Device Utility](#) on page 141
- on the next page

➤ To enable Remote Logging via Syslog from the utility:

1. In the Android Device Utility (see [Android Device Utility](#) on page 141 for more information), enter the phone's IP address, click **SSH Connect** and browse to a folder on the PC to which to send the information.
2. In the 'PC IP Address' field, enter the IP address of the PC on which the utility is installed and then click the **Start Syslog** button.

The screenshot shows the 'Syslog' configuration window in the Android Device Utility. It has a dark blue header and a light blue body. The configuration fields are as follows:

PC IP Address:	10.13.2.147
Syslog UDP port:	514
DSP Record port:	50000
PC folder	D:/Flare/IPP/Content/Resources/Images/C450HC Browse

Below the configuration fields, there is a status bar with the following text:

```
Connected to: 10.22.13.103
Syslog started
Syslog stopped
```

3. Open the folder on the PC to which you commanded the application to send the information, and then locate the Syslog file.
4. To view Syslog, you can optionally download the Syslog Viewer available in AudioCodes' website.


audiocodes		AudioCodes Utilities				
Utility Name	Latest Version	Windows	MacOS	Linux	Other	Win32
Syslog Viewer	1.78	Download	Download	Download		Download
INI Viewer & Editor	1.13	Download	Download	Download		
SBC Configuration Wizard	2.28	Download				
-- Templates Pack (*)	2.55				Download	
Configuration Builder	1.1	Download				
Stack Manager	2.7.1			Download		
PII Log Scrubber	1.5	Download	Download	Download		Download

Notes:
 (*) Templates Pack is part of the SBC Configuration Wizard. Latest version of the Template Pack is automatically downloaded during Wizard startup, therefore there is typically no need to download it manually.

➤ **To enable Remote Logging via Syslog from the phone:**

1. Log in to the phone as Administrator and go back.
2. In the 'Device administration' screen, select **Debugging**.
3. Select **Remote logging**.

☰	Debugging
	Log settings
	Remote Logging
	Diagnostic Data
	Reset configuration
	Restart Teams app
	Company portal login

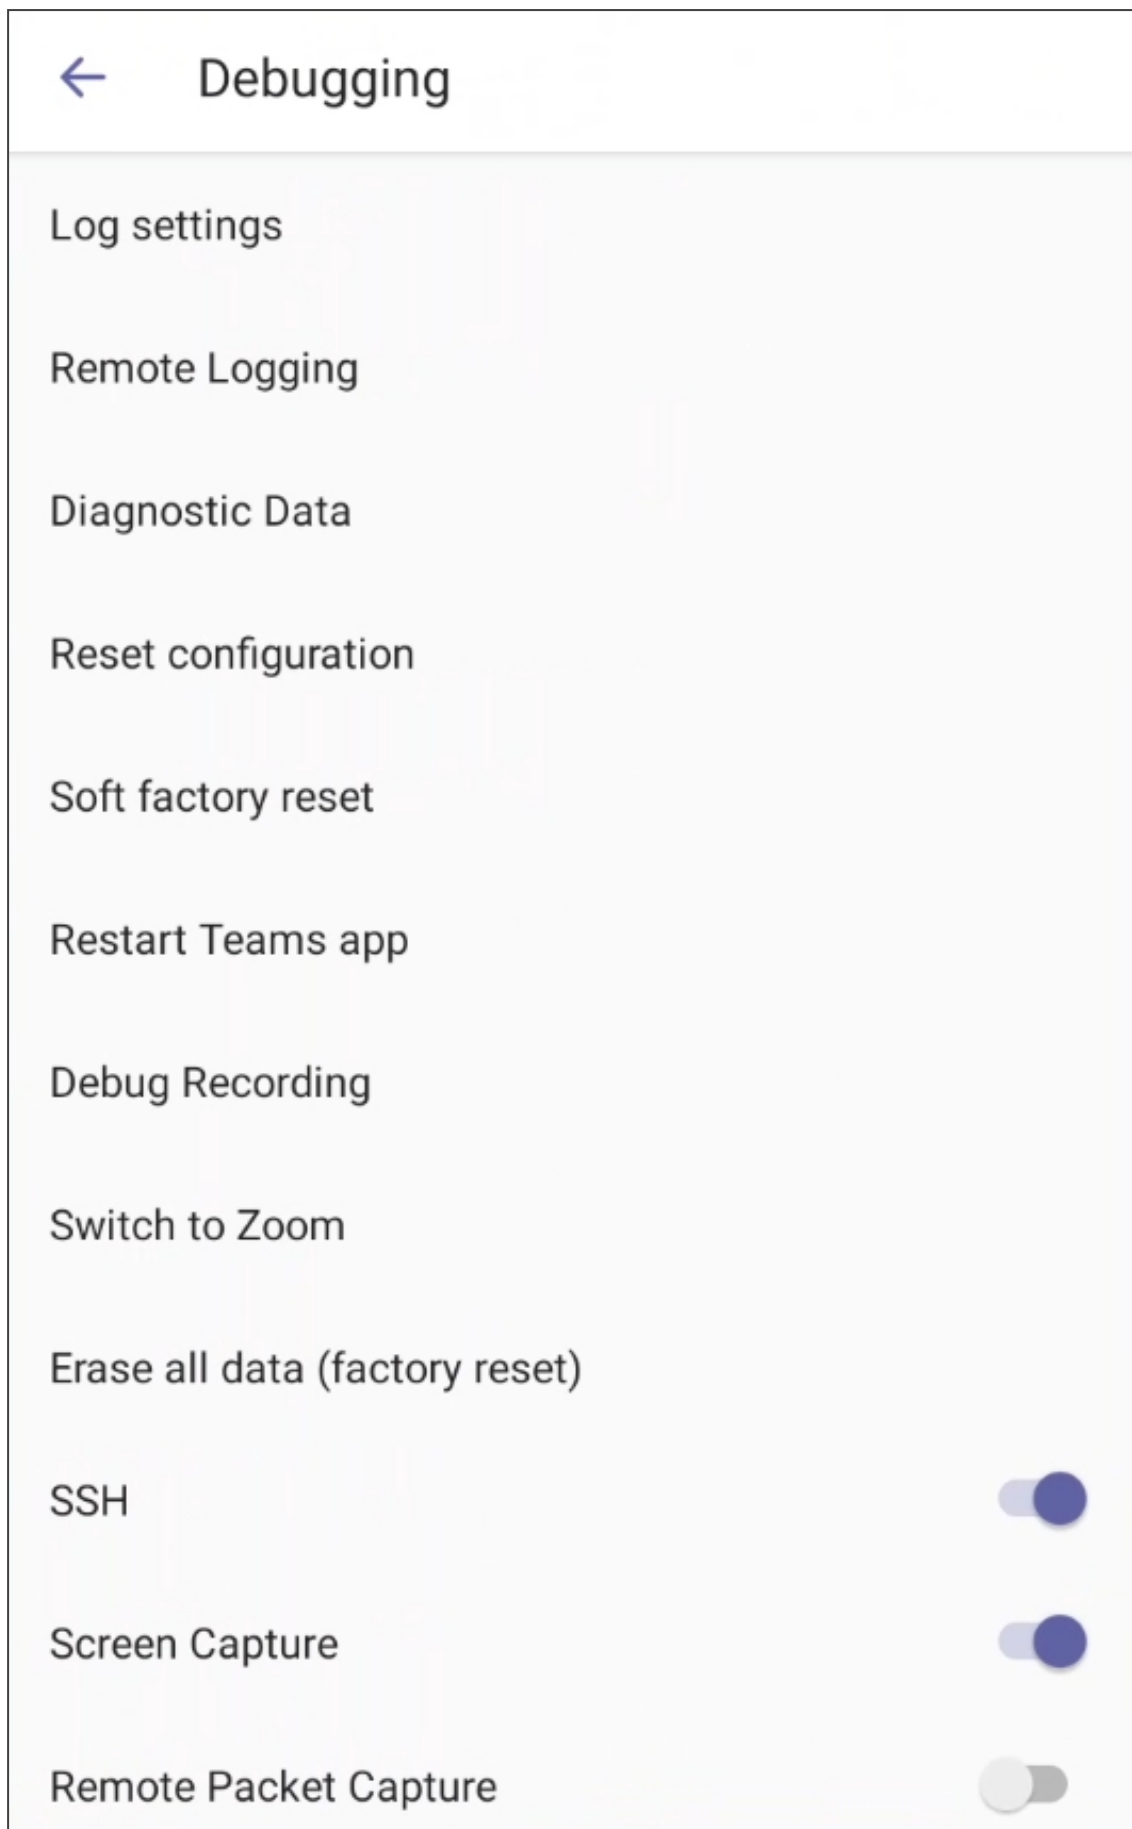

4. Configure the 'Remote IP address' and 'Remote port' and enable 'Remote Logging'; the device starts sending logs to the Syslog server.



Network administrators can also enable Syslog using Secure Shell (SSH) protocol.

- To enable Syslog using SSH protocol, type the following command at the shell prompt:

```
setprop persist.ac.rl_address <syslog_server_ip>:<port>.
```

- To disable Syslog using SSH, type the following command at the shell prompt:

```
setprop persist.ac.rl_address ""
```

Getting Diagnostics


Network administrators can get diagnostics information to facilitate debugging.



Network administrators who need to get diagnostics info from the device can dump the logs to the phone's Secure Digital (SD) Card and then later collect them using Secure Copy Protocol (SCP) based on Secure Shell (SSH) protocol. Whenever an issue occurs, the administrator can dump the logs into the SD Card.

- To get diagnostics info:


1. Log in to the phone as an Admin user
2. Open the Debugging screen (**Device Administration > Debugging**).

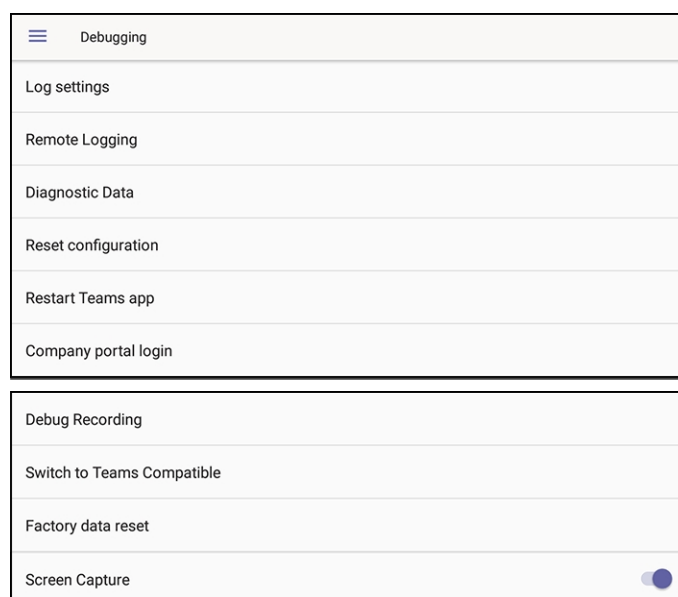

3. Select the **Diagnostic Data** option.



4. Select **OK** to confirm.

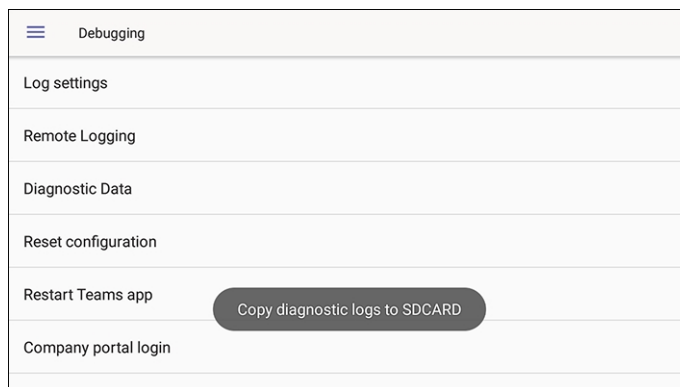

5. Wait until the screen shown in the preceding figure disappears; the phone creates all necessary logs and copies them to the its SD Card / Logs folder.
6. Get the logs using SCP notation as follows:

```
scp -r admin@host_IP:/sdcard/logs/ .
```



The following diagnostics files are then received from the phone:


- dmesg.log
- dumpstate-c470hd-1.18.117_58793-41-undated-dumpstate_log-3458.txt
- dumpstate-c470hd-1.18.117_58793-41-undated.txt
- dumpstate-stats.txt
- logcat.log

Getting Logs


Network administrators can get bug report logs, including a logcat file and a configuration file, to expedite debugging.

➤ To get logs:

1. In the AudioCodes Android Device Utility (see [Android Device Utility](#) on page 141 for more information about the application), enter the phone's IP address, click **SSH Connect** and browse to a folder on the PC to which to send the information.

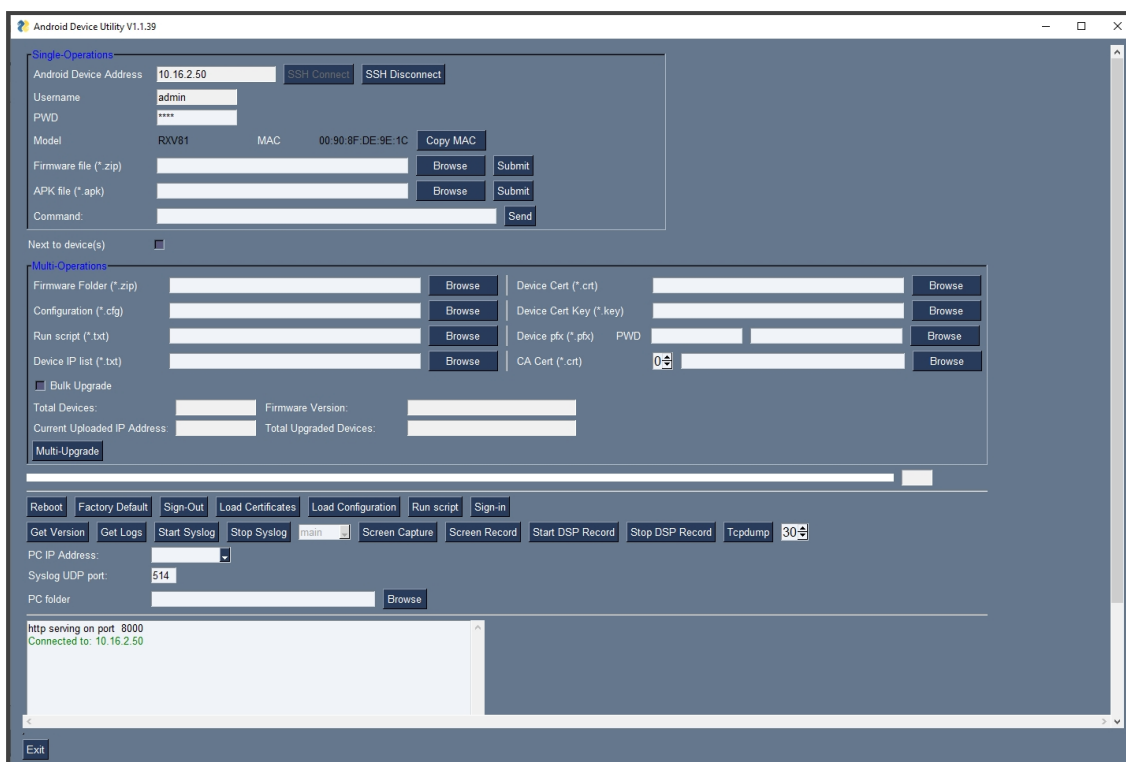

- Click **Get Logs**; after a short period, view a 'Finished' indication in the results pane.

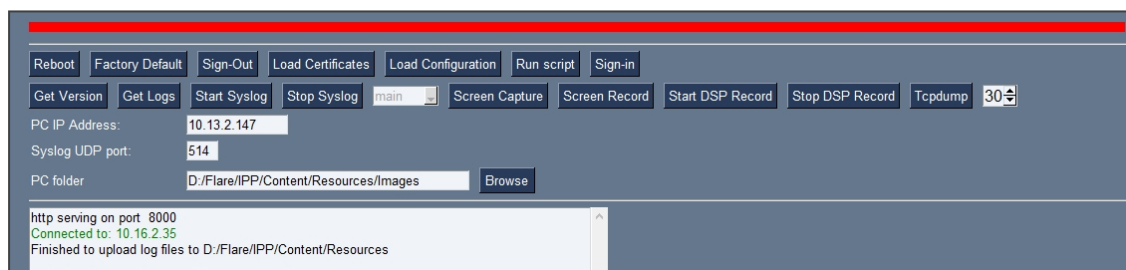

- Open the folder on the PC to which you commanded the application to send the information.

Name	Date modified	Type	Size
bugreport-TEAMS_1.10.142-2021-06-23-17-50-43.zip	6/23/2021 5:51 PM	WinRAR ZIP archive	941 KB
bugreport-TEAMS_1.10.142-2021-06-28-10-38-50.zip	6/28/2021 10:39 AM	WinRAR ZIP archive	1,024 KB
dumpstate_log-2021-06-23-17-50-43-13194.txt	6/23/2021 5:51 PM	Text Document	26 KB
dumpstate_log-2021-06-28-10-38-50-1788.txt	6/28/2021 10:39 AM	Text Document	26 KB


- Unzip the zipped files and open the txt files to view the report.

Activating DSP Recording

Network administrators can activate DSP recording using AudioCodes' SSH protocol based Android Device Utility.

➤ **To activate DSP Recording:**

1. In the AudioCodes Android Device Utility (see [Android Device Utility](#) on page 141 for more information about the application), enter the phone's IP address, click **SSH Connect** and then click the **Browse** button next to the field 'PC folder' to configure a folder on the PC to which to send the information.
2. In the 'PC IP Address' field, enter the IP address of the PC on which the utility is installed and then click the **Start DSP Record** button.
3. After a period of recording, click **Stop DSP Record**.

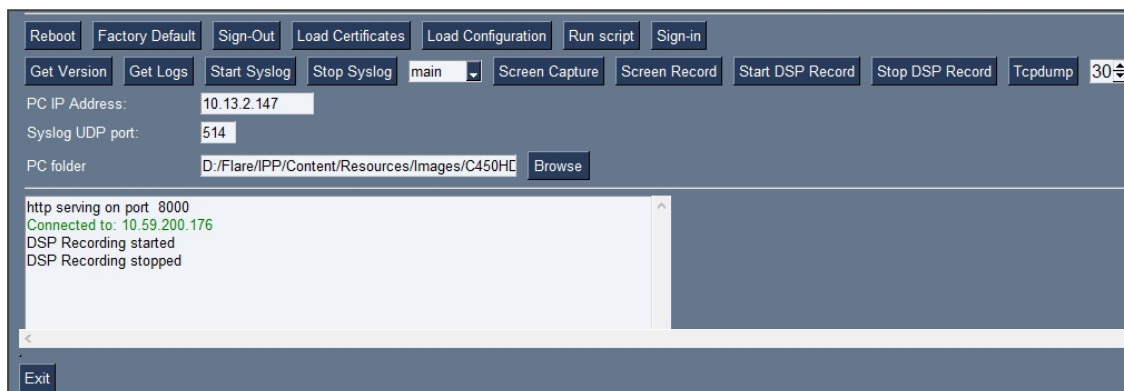

4. View the DSP recording in the PC folder you configured.



Network administrators can alternatively activate a DSP recording using SSH protocol *without* the Android Device Utility, as shown next.

➤ **To activate DSP recording using SSH protocol *without* the utility, type the following at the shell prompt:**

```
setprop persist.ac.dr_voice_enable true
setprop persist.ac.dr_ipaddr <local host ip address>
setprop persist.ac.dr_port <50030> //default is 50030
```




DSP recording can be activated on the fly without requiring the network administrator to reset the phone.

Deactivating DSP Recording

Network administrators can deactivate DSP recording using AudioCodes' SSH protocol based Android Device Utility.

➤ **To deactivate DSP Recording:**

1. In the utility (see [Android Device Utility](#) on page 141 for more information about the application), click **Stop DSP Record** after a period of recording (see [Activating DSP Recording](#) on page 151 for information on how to start DSP recording).

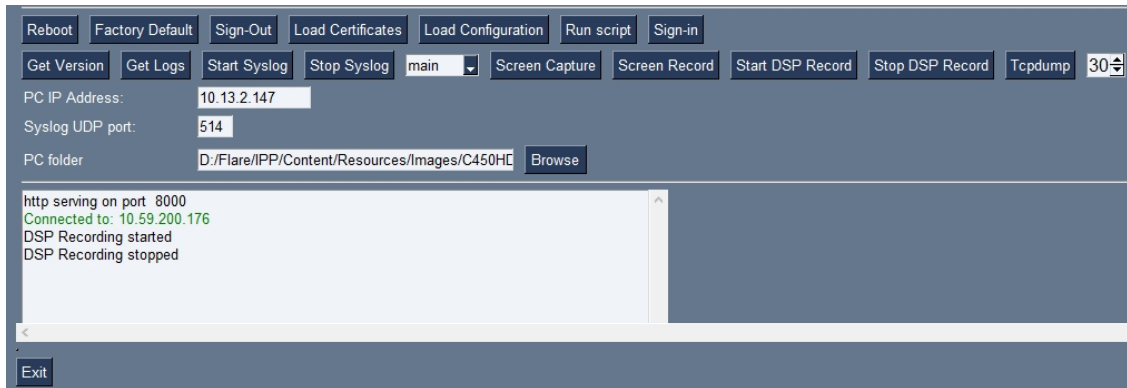

2. View the DSP recording in the PC folder you configured when [Activating DSP Recording](#) on page 151.



Network administrators can alternatively deactivate a DSP recording using SSH protocol *without* the Android Device Utility, as shown next.

➤ **To deactivate DSP recording using SSH protocol *without* the utility, type the following at the shell prompt:**

```
setprop ac.dr_voice_enable false
```



DSP recording can be deactivated on the fly without requiring the network administrator to reset the phone.

SSH

The phone can be accessed via Secure Shell (SSH) cryptographic network protocol after the network administrator signs in.



SSH is by default disabled and can be enabled with Administrator permissions in the phone screen (**Device Administration > Debugging > SSH**).

To sign in, the administrator needs to know their username and password; **admin** and **1234** are the defaults.



- The default password must be changed before access to the device via SSH is allowed.
- The default password can be changed per device in the phone screen, or via bulk configuration of multiple devices using Microsoft's TAC or AudioCodes' Device Manager.
- After entering a password, the user is prompted to verify it. Criteria required for a strong password are provided: The password length must be greater than or equal to 8. The password must contain one or more uppercase characters. The password must contain one or more lowercase characters. The password must contain one or more numeric values. The password must contain one or more special characters.

SSH access allows administrators debugging capabilities such as:

- [Getting the Phone IP Address](#) below
- Pulling files from the phone sdcard (using the curl command)
- [Activating DSP Recording](#) on page 151
- [Deactivating DSP Recording](#) on page 152
- [Installing the APK using SSH](#) below

Getting the Phone IP Address

Network administrators can get a phone's IP address using SSH protocol.

- **To get the phone's IP address using SSH protocol, type the following at the shell prompt:**

```
ifconfig
```

Installing the APK using SSH

Network administrators can install the Teams Android Application Package using SSH protocol.

Updating Phones using SSH Commands

- **To upgrade firmware:**

1. Download the required firmware version to **sdcard/update_image.zip**.

For example, use the following:

```
SCP <file name> admin@<DeviceIP>:/sdcard/update_image.zip
```

2. Update the firmware using the following:

```
setprop ctl.start local_update
```

3. Track progress using the following:

```
logcat | grep update_engine_client_android
```

➤ **To upgrade the Android Package Kit (APK):**

1. Download the required APK to sdcard/teams.apk

For example use the following:

```
SCP <file name> admin@<DeviceIP>:/sdcard/teams.apk
```

2. Update the APK using the following:

```
pm install -r -g /sdcard/<filename>
```

3. Delete the old APK using the following:

```
pm uninstall com.microsoft.skype.teams.ipphone
```



If the new APK is older than the existing one, delete the existing APK before installing the new one.

➤ **To collect logs:**

1. Collect logs using the following:

```
param_tool scp command/bugreport 1
```

2. Wait until the logs are created (see in /sdcard/logs/bugreports/ that there is a .gz file)
3. Get the logs from the "/sdcard/logs/bugreports/" folder.

For example, use the following:

```
SCP admin@<DeviceIP>:/sdcard/logs/bugreports/<log file name>  
C:\<destination Directory>
```

➤ **To install the Client Certificate:**

1. Download certificates to /sdcard/devcert/
2. Install the certificate using the following:

```
setprop ctl.start sdcard_certs_install.
```

Microsoft Teams Admin Center

The Microsoft Teams Admin Center allows network administrators to troubleshoot issues encountered with the phone.


Collecting Logs

Network administrators can download *all logs* from the Microsoft Teams admin center. Logs that administrators can download include device diagnostics (Logcat), dumphsys, ANRs, Client Log, Call Policies File, Call Log Info File, Sky lib Log Files, Media Log Files, and CP. The logs can help debug Teams application issues and also for issues related to the device.

➤ To collect logs:


1. Reproduce the issue.
2. Access Microsoft Admin Center and under the **Devices** tab click the **Diagnostics** icon.

Figure 7-4: Microsoft Teams Admin Center - Diagnostics

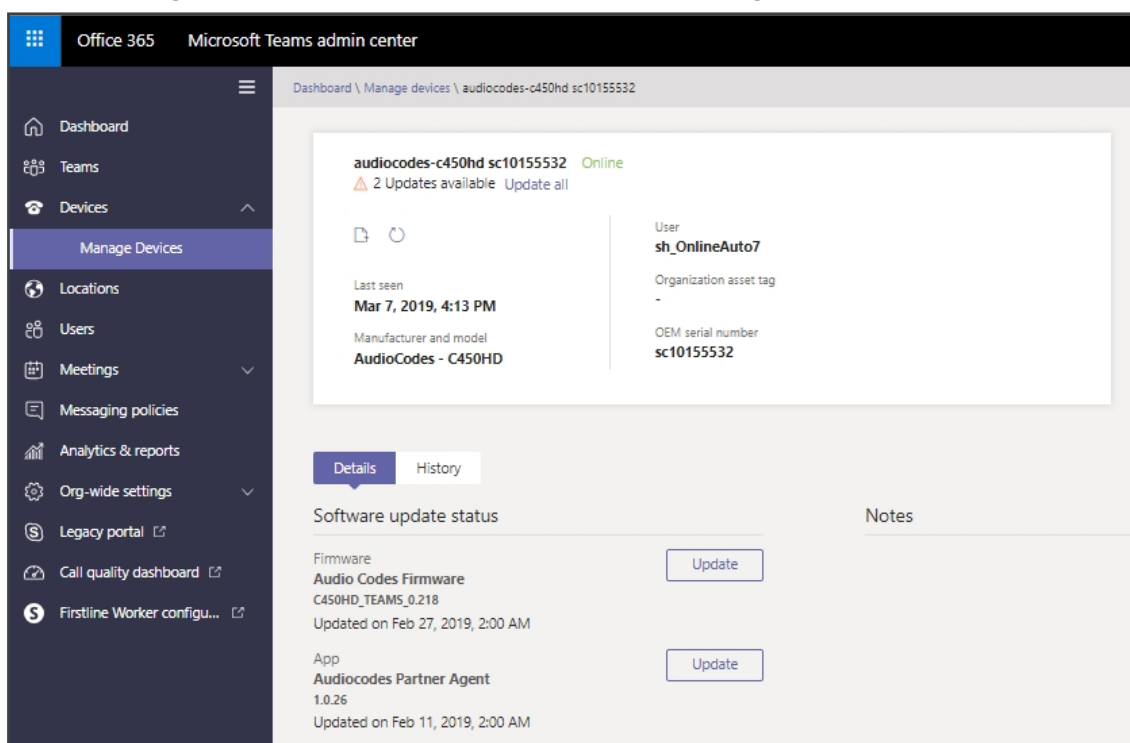


Applies to all AudioCodes phones for Microsoft Teams even though a specific model is shown in the figures here.

3. Click the **Diagnostics** icon  and in the 'Device diagnostics' prompt that pops up, click **Proceed**; log files are retrieved from the devices and uploaded to the server.

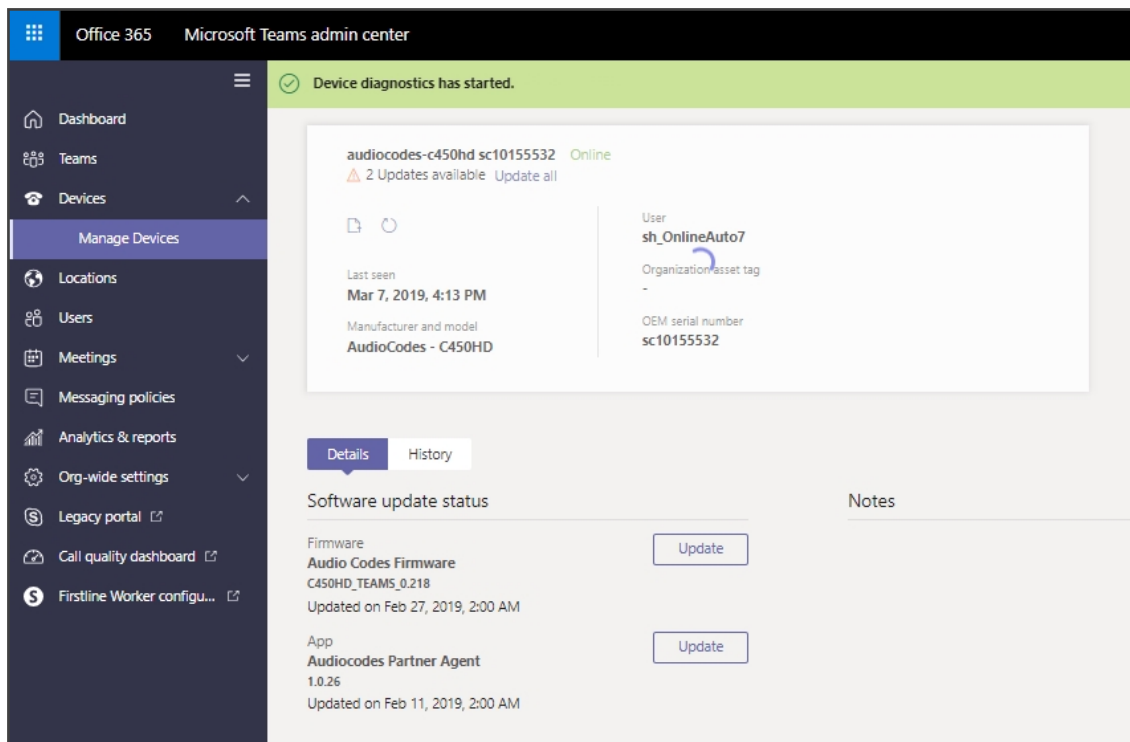Figure 7-5: Microsoft Teams Admin Center – Logs Upload to Server

4. Click the **History** tab.

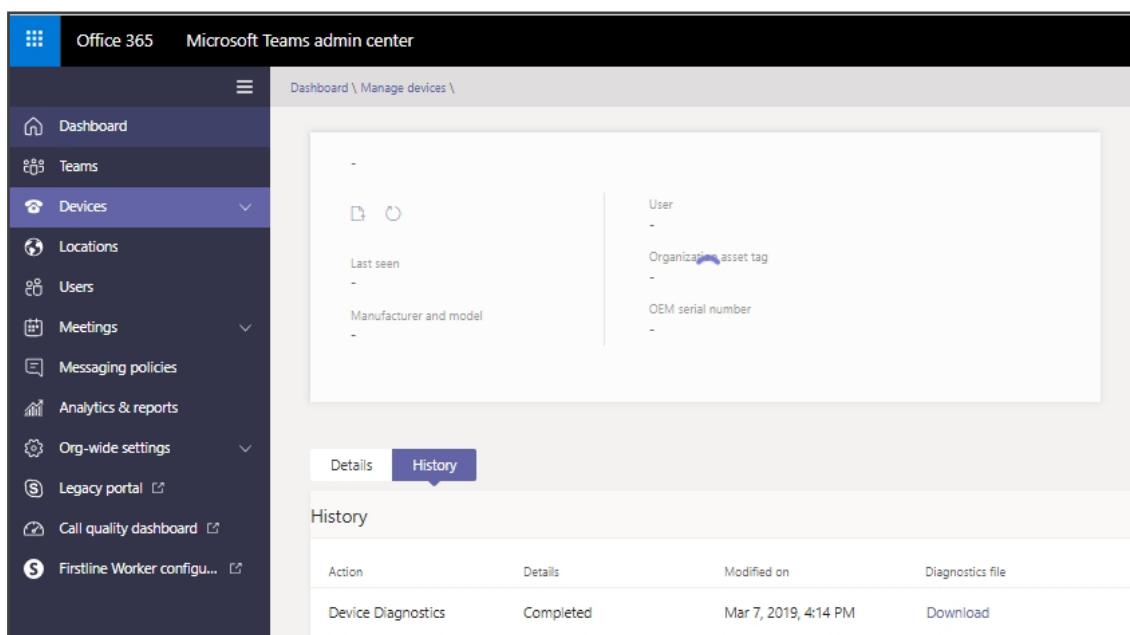Figure 7-6: History - Download

Click **Download** to download the logs.




- AudioCodes Device Manager's 'Collect Logs' action also includes all information collected by Microsoft Teams admin center (TAC). The .zip file includes the following files:
 - ✓ Android BugReport
 - ✓ AdminAgentLogs.zip - includes logcat collected by the OVOC/Device Manager.
 - ✓ blog files (media logs)
 - ✓ Skylib-XXX.blog
 - ✓ app_process32.XXX.blog
 - ✓ config.cfg & status.cfg - Device configuration and status
 - ✓ ac_config.xml and ac_status.xml - Device configuration and status for internal use.
 - ✓ dmesg - Diagnostic messages command useful for debugging hardware-related issues.
 - ✓ SessionID_For_Company_Portal_Logs.txt (this is the CP SSDI, not the logs; the logs are sent to the OVOC / Device Manager server).
- See also the *Device Manager Administrator's Manual*.

Getting Audio Debug Recording Logs

Network admins can opt to get Audio Debug Recording logs from the phone screen. The purpose of these logs is for issues related to media.

➤ To enable Audio Debug Recording logs:

1. Log in as Administrator.
2. Open the Settings screen and scroll down to **Debug**.

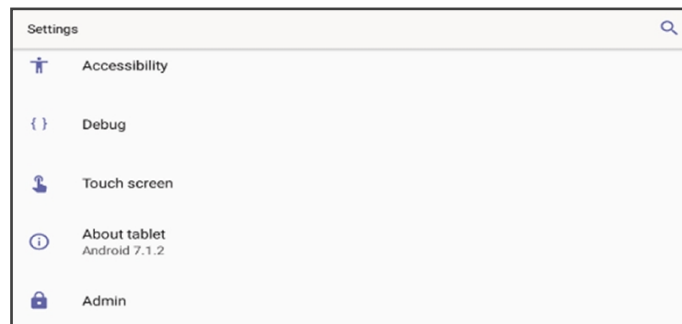

3. Select **Debug** and then scroll down to **Debug Recording**.



4. Configure the remote IP address and port.

5. Enable 'Voice record'.
6. Start Wireshark on your PC to capture the Audio traffic.

Collecting Media Logs (*.blog) from the Phone

Network administrators can collect Media Logs (*.blog) from the phone.

➤ To collect Media Logs (*.blog) from the phone

1. Access the phone via SSH.



SSH is by default disabled and can be enabled with Administrator permissions in the phone screen (Device Administration > Debugging > SSH).

2. Set the phone to the screen to capture.
3. Run the following command:

```
scp -r admin@hosp_  
ip:/sdcard/android/data/com.microsoft.skype.teams.ipphone/cache/ .
```

Capturing Traffic Using 'rpcapd'


The 'rpcapd' (Remote Packet Capture) network sniffer application enables network admins to analyze and debug Android traffic on their desktop PC using the app's integral SSH server.




SSH is by default disabled and can be enabled with Administrator permissions in the phone screen (Device Administration > Debugging > SSH).


➤ To capture traffic using 'rpcapd':

1. Open the phone's Debugging screen and switch **Remote Packet Capture** on.

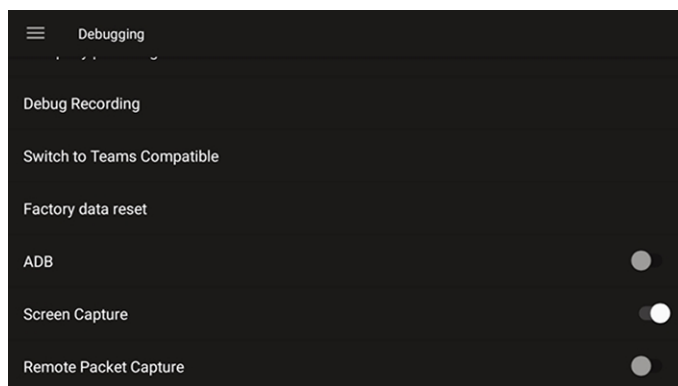

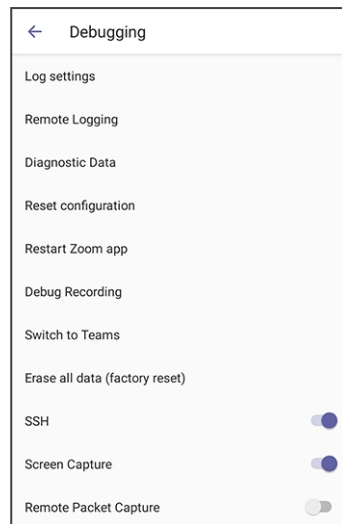

2. After 'rpcapd' is enabled on the phone, use Wireshark to connect with it. Follow **the steps below** to connect to the phone.

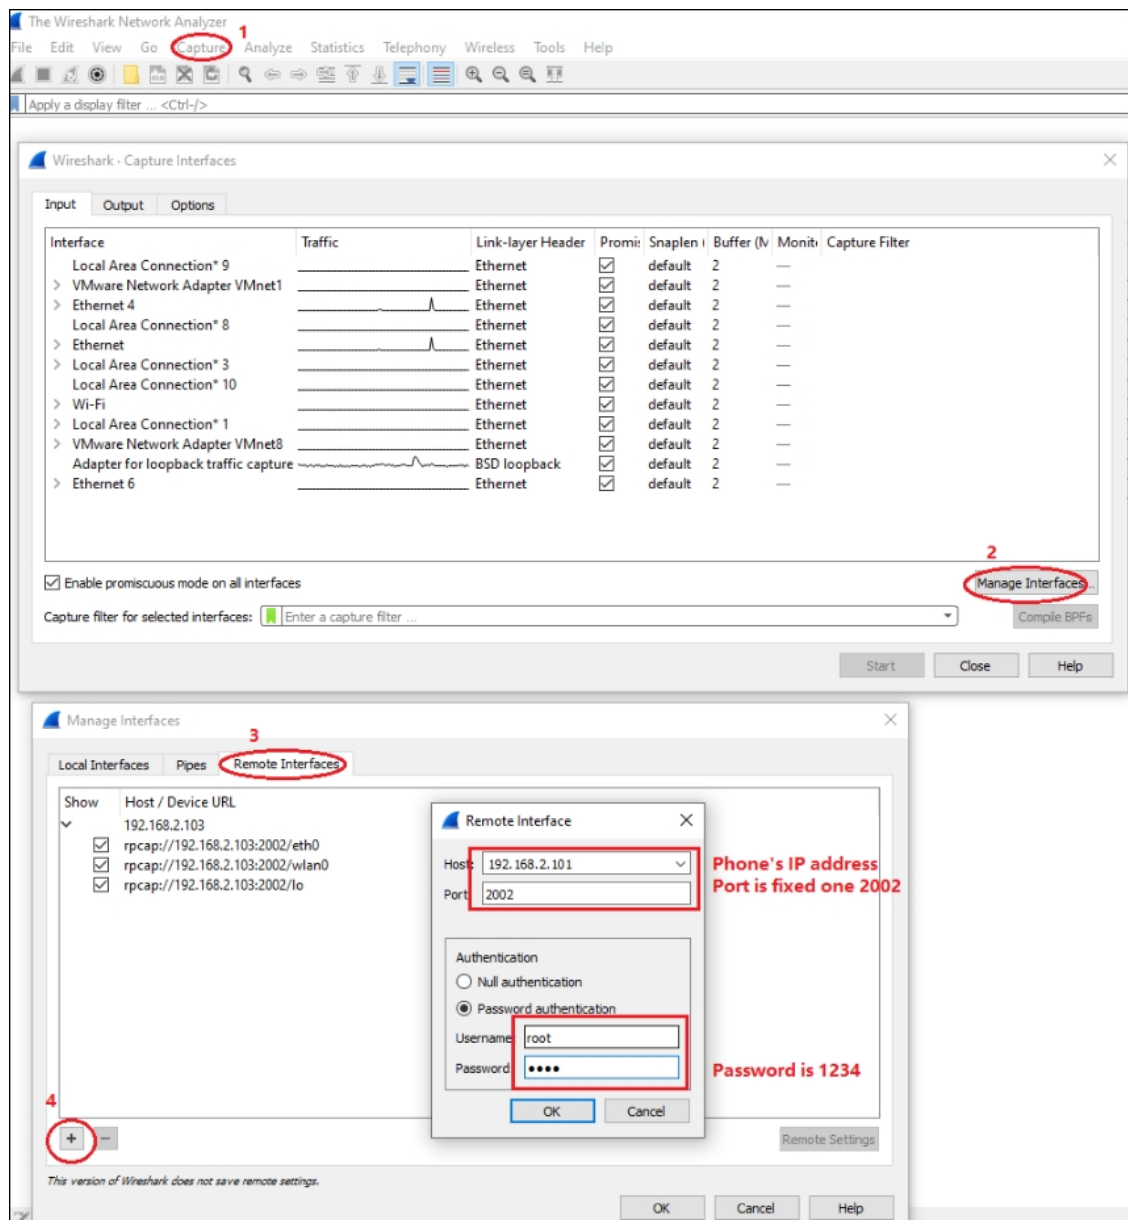

3. View all the interfaces on the phone and choose your preferred interface with which to capture packets.

This page is intentionally left blank.

International Headquarters

6 Ofra Haza Street

Naimi Park

Or Yehuda, 6032303, Israel

Tel: +972-3-976-4000

Fax: +972-3-976-4040

AudioCodes Inc.

80 Kingsbridge Rd

Piscataway, NJ 08854, USA

Tel: +1-732-469-0880

Fax: +1-732-469-2298

Contact us: <https://www.audiocodes.com/corporate/offices-worldwide>

Website: <https://www.audiocodes.com/>

Documentation Feedback: <https://online.audiocodes.com/documentation-feedback>

©2024 AudioCodes Ltd.. All rights reserved. AudioCodes, AC, HD VoIP, HD VoIP Sounds Better, IPmedia, Mediant, MediaPack, What's Inside Matters, OSN, SmartTAP, User Management Pack, VMAS, VoIPerfect, VoIPerfectHD, Your Gateway To VoIP, 3GX, VocaNom, AudioCodes One Voice, AudioCodes Meeting Insights, and AudioCodes Room Experience are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

Document #: LTRT-13455

