

SNMP

For MSBR Series

Version 7.2

Notice

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from <https://www.audiocodes.com/library/technical-documents>.

This document is subject to change without notice.

Date Published: June-15-2023

WEEE EU Directive

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Customer Support

Customer technical support and services are provided by AudioCodes or by an authorized AudioCodes Service Partner. For more information on how to buy technical support for AudioCodes products and for contact information, please visit our website at <https://www.audiocodes.com/services-support/maintenance-and-support>.

Documentation Feedback

AudioCodes continually strives to produce high quality documentation. If you have any comments (suggestions or errors) regarding this document, please fill out the Documentation Feedback form on our website at <https://online.audiocodes.com/documentation-feedback>.

Stay in the Loop with AudioCodes



Related Documentation

Document Name
MSBR Series Release Notes
Mediant 500 MSBR User's Manual
Mediant 500L MSBR User's Manual

Document Name
Mediant 800 MSBR User's Manual
MSBR CLI Reference Guide

Document Revision Record

LTRT	Description
52374	Initial document release for Ver. 7.2.
52378	Typos.
52380	MP-1288 added; number of trap varbinds (13); acBoardTrapGlobalsSystemSerialNumber (new); acLicensePoolInfraAlarm (updated); acLicensePoolApplicationAlarm (updated); acLicensePoolOverAllocationAlarm (updated); acTrackIdStateChangeAlarm (new); acModuleServiceAlarm; acClusterBandwidthAlarm (new); acSBAServicesStatusAlarm (updated); acKeepAlive (updated); acProxyConnectivity (updated)
52381	SBA-related SNMP removed (added to SBA documents).
52383	Typos; varbinds increased to 16 (new - acBoardTrapGlobalsDeviceName, acBoardTrapGlobalsDeviceInfo, acBoardTrapGlobalsDeviceDescription); acLicensePoolInfraAlarm (description updated); acLicensePoolApplicationAlarm (description updated); acLicenseKeyHitlessUpgradeAlarm (new)
52384	Source names added for PM MIB names; event source added to acPerformanceMonitoringThresholdCrossing; description updated for entConfigChange
52385	Source name for acPMSBCIPGroupInCallEstablishedDurationTable; Media Transcoding Cluster removed
52386	Updated descriptions: acPowerSupplyAlarm; acHwFailureAlarm; acHASystemFaultAlarm; acHASystemSwitchOverAlarm New alarm -acHANetworkMonitorAlarm
52389	Updated to Ver. 7.20A.200.019 New traps: acHAEthernetGroupAlarm; acHANetworkMismatchAlarm; acNGINXConfigurationIsInvalidAlarm; acNGINXPprocessIsNotRunningAlarm Updated traps: acHwFailureAlarm; acHASystemFaultAlarm; acHANetworkMonitorAlarm (OID); acHTTPProxyServiceAlarm

LTRT	Description
52391	<p>Updated to Ver. 7.20A.202.112</p> <p>Updated traps: AcPowerSupplyAlarm; acBoardTemperatureAlarm; acCertificateExpiryNotification changed to acCertificateExpiryAlarm; acLicensePoolApplicationAlarm; acIpGroupNoRouteAlarm; acIDSPolicyAlarm; acKeepAlive</p> <p>New traps: acCloudLicenseManagerAlarm; acFloatingLicenseAlarm</p> <p>Performance Monitoring - updated</p>
52392	<p>Updated to Ver. 7.20A.204.115</p> <p>acAWSecurityRoleAlarm</p>
52393	<p>acDataInterfaceStatus removed; acNATTraversalAlarm removed</p>
52394	<p>OIDs of performance monitoring MIBs; acProxyConnectionLost updated (severity); SNMPSysName updated</p>
52395	<p>Updated for Ver. 7.20A.252</p> <p>Configuring performance monitoring thresholds; coder enums for acPMChannelsPerCoderTable; new acAnalogLineLeftOffhookAlarm; acIpGroupNoRouteAlarm (description updated); new PM MIBs (acPMActiveContextCountTable, acPMSBCInAttemptedCallsTable, acPMSBCOutAttemptedCallsTable, acPMSBCInEstablishedCallsTable, acPMSBCOutEstablishedCallsTable, acPMSBCMediaBrokenConnectionCallsTable, acPMSBCInShortCallsTable, acPMSBCOutShortCallsTable, acPMSBCInAttemptedRegistrationsTable, acPMSBCOutAttemptedRegistrationsTable, acPMSBCInSuccessfulRegistrationsTable, acPMSBCOutSuccessfulRegistrationsTable, acPMSBCIPGroupMediaBrokenConnectionCallsTable, acPMSBCIPGroupInShortCallsTable, acPMSBCIPGroupOutShortCallsTable, acPMSBCIPGroupInAttemptedRegistrationsTable, acPMSBCIPGroupOutAttemptedRegistrationsTable, acPMSBCIPGroupInSuccessfulRegistrationsTable, acPMSBCIPGroupOutSuccessfulRegistrationsTable, acPMSBCSRDInAttemptedCallsTable, acPMSBCSRDOutAttemptedCallsTable, acPMSBCSRDInEstablishedCallsTable, acPMSBCSRDOutEstablishedCallsTable, acPMSBCSRDMediaBrokenConnectionCallsTable, acPMSBCSRDInShortCallsTable, acPMSBCSRDOutShortCallsTable, acPMSBCSRDInAttemptedRegistrationsTable, acPMSBCSRDOutAttemptedRegistrationsTable, acPMSBCSRDInSuccessfulRegistrationsTable, acPMSBCSRDOutSuccessfulRegistrationsTable, acPMSBCInUserDefinedFailures<1-26>Table,</p>

LTRT	Description
	acPMSBCOutUserDefinedFailures<1-26>Table, cPMSBCSRDInUserDefinedFailures<1-26>Table, acPMSBCSRDOutUserDefinedFailures<1-26>Table, acPMSBCIPGroupInUserDefinedFailures<1-26>Table, acPMSBCIPGroupOutUserDefinedFailures<1-26>Table, acPMSBCInCapsTable, acPMSBCOutCapsTable, acPMSBCSrdInCapsTable, acPMSBCSrdOutCapsTable
52396	acCDRServerAlarm alarm added
52397	Updated to Ver. 7.20A.254 AcFanTrayAlarm and acBoardTemperatureAlarm updated for Mediant 90xx; CLI command added to acBoardOverloadAlarm
52398	Typo fixed for acPMSIPSBCEstablishedCallsTable
52399	Updated to Ver. 7.20A.256.024 New PM MIB - acPMChannelsPerCoderG711Table; AcDSPFarmsMismatchAlarm (new); acRemoteMonitoringAlarm (new); acBoardEvResettingBoard (text updated); acMtcMClusterHaAlarm (updated); acMtceNetworkFailureAlarm (updated); acMtceSwUpgradeFailureAlarm (updated); acMediaClusterAlarm (new).
52428	Updated to Ver. 7.20M1.256.029; acFloatingLicenseAlarm (new); acCloudLicenseManagerAlarm (new); acWirelessCellularModemStatusChanged (updated for LTE) Miscellaneous typos; acBoardEthernetLinkAlarm (description); acEthernetGroupAlarm (description); acFeatureKeyError (not supported note removed).
52429	AcDChannelStatus moved to alarms and description updated
52461	Text updated of acNqmLqMosAlarm and acNqmCqMosAlarm.
52486	acNoReplyFromDNSServerAlarm; acSBCCallAttemptsPerSecTable; acPMCPCallAttemptsPerSecTable
52455	SNMP Get operations on performance monitoring parameters updated; AttemptedCallCountOnStart; acPMSipIPGroupIP2TelActiveCallsTable; acPMSipIPGroupTel2IPActiveCallsTable; acPMSipIP2TelActiveCallsTable; acPMSipTel2IPActiveCallsTable

Table of Contents

1	Introduction	1
2	SNMP Overview	2
	SNMP Standards and Objects	2
	SNMP Message Standard	2
	SNMP MIB Objects	3
	SNMP Extensibility Feature	4
	Supported MIBs	4
	SNMP Interface Details	8
	SNMP Community Names	9
	Configuring Community Strings via the Web	9
	Configuring Community Strings via the ini File	9
	Configuring Community Strings via SNMP	9
	SNMPv3 USM Users	11
	Configuring SNMPv3 Users via ini File	12
	Configuring SNMPv3 Users via SNMP	13
	Trusted Managers	14
	Configuring Trusted Managers via ini File	14
	Configuring Trusted Managers via SNMP	15
	SNMP Ports	16
	Multiple SNMP Trap Destinations	16
	Configuring Trap Managers via Host Name	16
	Configuring Trap Managers via ini File	17
	Configuring SNMP Engine ID	18
	Configuring Trap Managers via SNMP	18
3	Carrier-Grade Alarm System	20
	Active Alarm Table	20
	Alarm History	20
4	SNMP Traps	21
	Standard Traps	21
	Proprietary Traps	21
	Trap Varbinds	22
	Customizing Trap's Enterprise OID	27
	SNMP Alarms in Syslog	27
5	Topology MIB Objects	29
	Physical Entity (RFC 2737)	29
	IF-MIB (RFC 2863)	29
	Ethernet Interface	29
	DS1 Interface	31
	BRI Interface	32
	ADSL/VDSL Interface	33
	VLAN Interface	34

MIB-II Counters	35
6 File Management	39
Downloading a File to the Device	39
Uploading and Deleting a File	39
7 Performance Monitoring	41
SNMP Performance Monitoring MIBs	47
Performance Monitoring MIBs for IP Network Interfaces	47
Performance Monitoring MIBs for Media Realms	49
Performance Monitoring MIBs for VoIP Calls	54
Performance Monitoring MIBs for SIP Messages	59
Performance Monitoring MIBs for Calls per IP Group	60
Performance Monitoring MIBs for Gateway Application	66
IP-to-Tel and Tel-to-IP Calls	67
Trunks	73
Trunk Groups	76
Performance Monitoring MIBs for SBC Application	80
SBC Sessions	80
SBC Calls per IP Group	85
SBC Calls per SRD	94
SBC Calls Per Second	97
SBC Call Attempts per Second	99
Performance Monitoring MIB for DSP Resource Utilization	100
Performance Monitoring MIBs for Data-Router Networking	101
8 Advanced SNMP Features	104
SNMP NAT Traversal	104
Systems	104
SNMP Administrative State Control	105
9 Getting Started with SNMP	106
Basic SNMP Configuration Setup	106
Configuring SNMP Port	106
Configuring Trap Managers (Trap Destination)	106
Configuring Trap Destination Port	108
Configuring Trusted Managers	108
Getting Acquainted with AudioCodes MIBs	110
Traps and Alarms	112
Device Configuration	112
Carrier Grade Alarm (CGA)	113

1 Introduction

This document provides you with supplementary information on Simple Network Management Protocol (SNMP) based management for your AudioCodes device. This information complements the information provided by the device's *User's Manual*, and includes SNMP configuration, and SNMP performance monitoring MIBs.



- The SNMP MIB manual is supplied in the Software Release Package delivered with the device.
- For large deployments (for example, multiple devices in globally distributed enterprise offices) that need to be managed by central personnel, it is recommended to use AudioCodes One Voice Operations Center (OVOC). OVOC is not included in the device's supplied package. Contact AudioCodes for more information on its OVOC solution for large VoIP deployments.

2 SNMP Overview

Simple Network Management Protocol (SNMP) is a standards-based network control protocol for managing elements in a network. The SNMP Manager, usually implemented by a third-party Network Management System (NMS) or AudioCodes One Voice Operations Center (OVOC), connects to an SNMP Agent (embedded on a remote Network Element (NE) to perform network element Operation, Administration, Maintenance, and Provisioning (OAMP).

Both the SNMP Manager and the NE refer to the same database to retrieve information or configure parameters. This database is referred to as the Management Information Base (MIB), and is a set of statistical and control values. Apart from the standard MIBs documented in IETF RFCs, SNMP additionally enables the use of proprietary MIBs, containing non-standard information set (specific functionality provided by the Network Element).

Directives, issued by the SNMP Manager to an SNMP Agent, consist of the identifiers of SNMP variables (referred to as MIB object identifiers or MIB variables) along with instructions to either get the value for that identifier, or set the identifier to a new value (configuration). The SNMP Agent can also send unsolicited events towards an EMS, called SNMP traps.

The definitions of MIB variables supported by a particular agent are incorporated in descriptor files, written in Abstract Syntax Notation (ASN.1) format, made available to EMS client programs so that they can become aware of MIB variables and their usage.

The device contains an embedded SNMP Agent supporting both general network MIBs (such as the IP MIB), VoP-specific MIBs (such as RTP) and proprietary MIBs (acGateway, acAlarm, acMedia, acControl, and acAnalog MIBs) enabling a deeper probe into the interworking of the device. All supported MIB files are supplied to customers as part of the release.

SNMP Standards and Objects

This section discusses the SNMP standards and SNMP objects.

SNMP Message Standard

Four types of SNMP messages are defined:

- **Get:** A request that returns the value of a named object.
- **Get-Next:** A request that returns the next name (and value) of the "next" object supported by a network device given a valid SNMP name.
- **Set:** A request that sets a named object to a specific value.
- **Trap:** A message generated asynchronously by network devices. It notifies the network manager of a problem apart from the polling of the device.

Each of these message types fulfills a particular requirement of network managers:

- **Get Request:** Specific values can be fetched via the "get" request to determine the performance and state of the device. Typically, many different values and parameters can

be determined via SNMP without the overhead associated with logging into the device, or establishing a TCP connection with the device.

- **Get Next Request:** Enables the SNMP standard network managers to "walk" through all SNMP values of a device (via the "get-next" request) to determine all names and values that a device supports.
- **Get-Bulk:** Extends the functionality of GETNEXT by allowing multiple values to be returned for selected items in the request. This is accomplished by beginning with the first SNMP object to be fetched, fetching the next name with a "get-next", and repeating this operation.
- **Set Request:** The SNMP standard provides a action method for a device (via the "set" request) to accomplish activities such as disabling interfaces, disconnecting users, clearing registers, etc. This provides a way of configuring and controlling network devices via SNMP.
- **Trap Message:** The SNMP standard furnishes a mechanism for a device to "reach out" to a network manager on their own (via the "trap" message) to notify or alert the manager of a problem with the device. This typically requires each device on the network to be configured to issue SNMP traps to one or more network devices that are awaiting these traps.

The above message types are all encoded into messages referred to as "Protocol Data Units" (PDUs) that are interchanged between SNMP devices.

SNMP MIB Objects

The SNMP MIB is arranged in a tree-structure, similar to a disk directory structure of files. The top-level SNMP branch begins with the ISO "internet" directory, which contains four main SNMP branches:

- **"mgmt":** Contains the standard SNMP objects usually supported (at least in part) by all network devices.
- **"private":** Contains those "extended" SNMP objects defined by network equipment vendors.
- **"experimental" and "directory":** Also defined within the "internet" root directory, are usually devoid of any meaningful data or objects.

The "tree" structure described above is an integral part of the SNMP standard, though the most pertinent parts of the tree are the "leaf" objects of the tree that provide actual management data regarding the device. Generally, SNMP leaf objects can be partitioned into two similar but slightly different types that reflect the organization of the tree structure:

- **Discrete MIB Objects:** Contain one precise piece of management data. These objects are often distinguished from "Table" items (below) by adding a ".0" (dot-zero) extension to their names. The operator must merely know the name of the object and no other information.
- **Table MIB Objects:** Contain multiple pieces of management data. These objects are distinguished from "Discrete" items (above) by requiring a "." (dot) extension to their

names that uniquely distinguishes the particular value being referenced. The "." (dot) extension is the "instance" number of an SNMP object. For "Discrete" objects, this instance number is zero. For "Table" objects, this instance number is the index into the SNMP table. SNMP tables are special types of SNMP objects, which allow parallel arrays of information to be supported. Tables are distinguished from scalar objects, such that tables can grow without bounds. For example, SNMP defines the "ifDescr" object (as a standard SNMP object) that indicates the text description of each interface supported by a particular device. Since network devices can be configured with more than one interface, this object can only be represented as an array.

By convention, SNMP objects are always grouped in an "Entry" directory, within an object with a "Table" suffix. (The "ifDescr" object described above resides in the "ifEntry" directory contained in the "ifTable" directory).

SNMP Extensibility Feature

One of the principal components of an SNMP manager is a MIB Compiler, which allows new MIB objects to be added to the management system. When a MIB is compiled into an SNMP manager, the manager is made "aware" of new objects that are supported by agents on the network. The concept is similar to adding a new schema to a database.

Typically, when a MIB is compiled into the system, the manager creates new folders or directories that correspond to the objects. These folders or directories can typically be viewed with a "MIB Browser", which is a traditional SNMP management tool incorporated into virtually all network management systems.

The act of compiling the MIB allows the manager to know about the special objects supported by the agent and access these objects as part of the standard object set.

Supported MIBs

The device contains an embedded SNMP agent supporting the MIBs listed below. A description in HTML format for all supported MIBs can be found in the MIBs directory in the release package.

- **Standard MIB (MIB-2):** The various SNMP values in the standard MIB are defined in RFC 1213. The standard MIB includes various objects to measure and monitor IP activity, TCP activity, UDP activity, IP routes, TCP connections, interfaces, and general system description.
 - The standard icmpStatsTable and icmpMsgStatsTable under MIB-2 support ICMP statistics for both IPv4 and IPv6.
 - The inetCidrRouteTable (from the standard IP-FORWARD-MIB) supports both IPv4 and IPv6.
- **System MIB (under MIB-2):** Standard system group: sysDescr, sysObjectID, sysUpTime, sysContact, sysName, sysLocation, and sysServices. You can replace the value of sysObjectID.0 with a variable value using the ini file parameter SNMPSysOid. This

parameter is polled during startup and overwrites the standard sysObjectID. SNMPSysName is an administratively assigned name for this managed node. By convention, this is the node's fully-qualified domain name (FQDN). If the name is unknown, the value is the zero-length string. If the [HostName] ini file parameter is configured, its' value overwrites the value of SNMPSysName.

- **Host Resources MIB (RFC 2790):** The Host Resources MIB is used for managing host systems. The term host is any computer that communicates with other similar computers connected to the Internet and that is directly used by one or more human beings. The following are the Host Resources MIB objects:

- hrSystem group
- hrStorage group (basic only)
- hrDevice group (CPU, RAM, Flash - basic only)
- hrSWRunPerf (basic only)
- hrSWInstalled (OS only)



The Host Resources MIB is applicable only to data-routing functionality.

- **RTP MIB:** The MIB is supported according to RFC 2959. It contains objects relevant to the RTP streams generated and terminated by the device and to the RTCP information related to these streams.



The inverse tables are not supported.

- **Notification Log MIB:** Standard MIB (RFC 3014 - iso.org.dod.internet.mgmt.mib-2) supported for implementation of Carrier Grade Alarms.
- **Alarm MIB:** IETF MIB (RFC 3877) Supported as part of the implementation of Carrier Grade Alarms.
- **SNMP Target MIB:** (RFC 2273) Allows for configuration of trap destinations and trusted managers.
- **SNMP MIB:** (RFC 3418) Allows support for the coldStart and authenticationFailure traps.
- **SNMP Framework MIB:** (RFC 3411).
- **SNMP Usm MIB:** (RFC 3414) Implements the user-based Security Model.
- **SNMP Vacm MIB:** (RFC 3415) Implements the view-based Access Control Model.
- **SNMP Community MIB:** (RFC 3584) Implements community string management.
- **ipForward MIB:** (RFC 2096) Fully supported.
- **RTCP-XR:** (RFC) implements the following partial support:
 - The rtpXrCallQualityTable is fully supported.

- In the `rtcpXrHistoryTable`, support of the RCQ objects is provided only with no more than 3 intervals, 15 minutes long each.
- Supports the `rtcpXrVoipThresholdViolation` trap.

■ **ds1 MIB:** supports the following:

- `ds1ConfigTable`: partially supports the following objects with SET and GET applied:
 - ◆ `dsx1LineCoding`
 - ◆ `dsx1LoopbackConfig`
 - ◆ `dsx1LineStatusChangeTrapEnable`
 - ◆ `dsx1CircuitIdentifier`

All other objects in this table support GET only.

- `dsx1CurrentTable`
- `dsx1IntervalTable`
- `dsx1TotalTable`
- `dsx1LineStatusChange` trap

■ **acPSTN MIB:**

- `acSonetSDHTable`: currently has one entry (`acSonetSDHFbrGrpMappingType`) for selecting a low path mapping type. Relevant only for PSTN applications.



The acPSTN MIB is applicable only to devices with digital interfaces.

In addition to the standard MIBs, the complete product series contains proprietary MIBs:

- **AC-TYPES MIB:** lists the known types defined by the complete product series. This is referred to by the `sysObjectID` object in the MIB-II.

- **AcBoard MIB:** includes the `acTrap` group.

Each proprietary MIB contains a Configuration subtree for configuring the related parameters. In some, there also are Status and Action subtrees.

■ **AcAnalog MIB**



The AcAnalog MIB is applicable only to devices with analog interfaces.

■ **acControl MIB**

■ **acMedia MIB**

■ **acSystem MIB**

■ **acSysInterfaceStatusTable:** supports the networking multiple interfaces feature status. This table reflects all the device's active interfaces. The lines indices consist of both the Entry Index and the Type Index. The table contains the following columns:

- Entry Index - related Interface index in the interface configuration table (if the table is empty, i.e., there is only single IP address, the index appears with 0)
- Type Index - 1 for IP Address and 2 for IPv6 Link-Local Address
- Application Types - type assigned to the interface
- Status Mode - interface configuration mode
- IP Address - IP address (either IPv4 or IPv6) for this interface
- Prefix Length - number of '1' bits in this interface's net mask
- Gateway - default gateway
- Vlan ID - VLAN ID of this interface
- Name - interface's name
- Primary DNS Server IP Address - IP address of primary DNS server for this interface
- Secondary DNS Server IP Address - IP address of secondary DNS server for this interface

■ **acSysModuleTable**

■ **acPSTN MIB**



The acPSTN MIB is applicable only to devices with digital interfaces.

■ **acGateway MIB:** This proprietary MIB contains objects related to configuration of the SIP device. This MIB complements the other proprietary MIBs. The acGateway MIB includes the following groups:

- Common: parameters common to both SIP and H.323.
- SIP: SIP only parameters.

■ **AcAlarm:** This is a proprietary carrier-grade alarm MIB. It is a simpler implementation of the notificationLogMIB and the IETF suggested alarmMIB (both supported).

The acAlarm MIB has the following groups:

- **ActiveAlarm:** straight forward (single indexed) table listing all currently active Alarms together with their bindings (the Alarm bindings are defined in acAlarm. acAlarmVarbinds and also in acBoard.acTrap. acBoardTrapDefinitions. oid_1_3_6_1_4_1_5003_9_10_1_21_2_0).
- **acAlarmHistory:** straight forward (single indexed) table listing all recently sent Alarms together with their bindings (the Alarm bindings are defined in acAlarm.

acAlarmVarbinds and also in acBoard.acTrap. acBoardTrapDefinitions. oid_1_3_6_1_4_1_5003_9_10_1_21_2_0).

The table size can be altered by one of the following:

- notificationLogMIB.notificationLogMIBObjects.nlmConfig.nlmConfigGlobalEntryLimit
- noti-
fic-
ationLo-
gMIB.no-
tific-
ationLo-
gMIBOb-
jects.nlmConfig.nlmConfigLogTable.nlmConfigLogEntry.nlmConfigLogEntryLimit.

The table size (i.e., number of contained alarms) can be any value between 10 and 1,000 (default is 500).



- A detailed explanation of each parameter can be viewed in the MIB Description field.
- A detailed description in HTML format of all MIBs can be found in the MIBs directory (included in the Release package).
- Not all groups in the MIB are implemented.
- MIB Objects that are marked as 'obsolete' are not implemented.
- When a parameter is Set to a new value via SNMP, the change may affect device functionality immediately or may require that the device be soft reset for the change to take effect. This depends on the parameter type.
- The current (updated) device configuration parameters are configured on the device provided the user doesn't load an ini file to the device after reset. Loading an ini file after reset overrides the updated parameters.

SNMP Interface Details

This subsection describes details of the SNMP interface needed when developing an Element Management System (EMS) for any AudioCodes devices, or to manage a device with a MIB browser.

There are several alternatives for SNMP security:

- SNMPv2c community strings
- SNMPv3 User-based Security Model (USM) users
- SNMP encoded over IPSec
- Various combinations of the above

Currently, both SNMP and ini file commands and downloads are not encrypted. For ini file encoding, refer to the device's *User's Manual*.

SNMP Community Names

By default, the device uses a single, read-only community string of "public" and a single read-write community string of "private". Up to five read-only community strings and up to five read-write community strings, and a single trap community string can be configured. Each community string must be associated with one of the following predefined groups:

Table 2-1: SNMP Predefined Groups

Group	Get Access	Set Access	Sends Traps
ReadGroup	Yes	No	Yes
ReadWriteGroup	Yes	Yes	Yes
TrapGroup	No	No	Yes

Configuring Community Strings via the Web

For detailed information on configuring community strings through the Web interface, refer to the device's *User's Manual*.

Configuring Community Strings via the ini File

The following ini file parameters are used to configure community strings:

- `SNMPREADONLYCOMMUNITYSTRING_<x> = '#####'`
- `SNMPREADWRITECOMMUNITYSTRING_<x> = '#####'`

Where <x> is a number from 0 through 4. Note that the '#' character represents any alphanumeric character. The maximum length of the string is 19 characters that can include only the following:

- Upper- and lower-case letters (a to z, and A to Z)
- Numbers (0 to 9)
- Hyphen (-)
- Underline (_)

Configuring Community Strings via SNMP

To configure community strings, the EMS must use the standard `snmpCommunityMIB`. To configure the trap community string, the EMS must also use the `snmpTargetMIB`.

➤ To add a read-only v2user community string:

1. Add a new row to the `snmpCommunityTable` with `CommunityName` v2user.

2. Add a row to the `vacmSecurityToGroupTable` for `SecurityName v2user`, `GroupName ReadGroup` and `SecurityModel snmpv2c`.
- **To delete the read-only v2user community string:**
1. If `v2user` is being used as the trap community string, follow the procedure for changing the trap community string. (See below.)
 2. Delete the `snmpCommunityTable` row with `CommunityName v2user`.
 3. Delete the `vacmSecurityToGroupTable` row for `SecurityName v2user`, `GroupName ReadGroup` and `SecurityModel snmpv2c`.
- **To add a read-write v2admin community string:**
1. Add a new row to the `snmpCommunityTable` with `CommunityName v2admin`.
 2. Add a row to the `vacmSecurityToGroupTable` for `SecurityName v2admin`, `GroupName ReadWriteGroup` and `SecurityModel snmpv2c`.
- **To delete the read-write v2admin community string:**
1. If `v2admin` is being used as the trap community string, follow the procedure for changing the trap community string. (See below.)
 2. Delete the `snmpCommunityTable` row with a `CommunityName` of `v2admin` and `GroupName` of `ReadWriteGroup`.
- **To change the only read-write community string from v2admin to v2mgr:**
1. Follow the procedure above to add a read-write community string to a row for `v2mgr`.
 2. Set up the EM such that subsequent set requests use the new community string, `v2mgr`.
 3. If `v2admin` is being used as the trap community string, follow the procedure to change the trap community string. (See below.)
 4. Follow the procedure above to delete a read-write community name in the row for `v2admin`.

The following procedure assumes that a row already exists in the `snmpCommunityTable` for the new trap community string. The trap community string can be part of the `TrapGroup`, `ReadGroup`, or `ReadWriteGroup`. If the trap community string is used solely for sending traps (recommended), then it should be made part of the `TrapGroup`.

- **To change the trap community string:**
1. Add a row to the `vacmSecurityToGroupTable` with these values: `SecurityModel=2`, `SecurityName=the new trap community string`, `GroupName=TrapGroup`, `ReadGroup` or `ReadWriteGroup`. The `SecurityModel` and `SecurityName` objects are row indices.



You must add GroupName and RowStatus on the same set.

2. Modify the SecurityName field in the appropriate row of the snmpTargetParamsTable.
3. Remove the row from the vacmSecurityToGroupTable with SecurityName=the old trap community string.

SNMPv3 USM Users

You can configure up to 10 User-based Security Model (USM) users (referred to as SNMPv3 user). Each SNMPv3 user can be configured to one of the following security levels:

Table 2-2: SNMPv3 Security Levels

Security Levels	Authentication	Privacy
noAuthNoPriv(1)	none	none
authNoPriv(2)	MD5 or SHA-1	none
authPriv(3)	MD5 or SHA-1	DES, 3DES, AES128, AES192, or AES256

Each SNMPv3 user must be associated with one of the predefined groups listed in the following table:

Table 2-3: SNMPv3 Predefined Groups

Group	Get Access	Set Access	Sends Traps	Security Level
ReadGroup1	Yes	No	Yes	noAuthNoPriv(1)
ReadWriteGroup1	Yes	Yes	Yes	noAuthNoPriv(1)
TrapGroup1	No	No	Yes	noAuthNoPriv(1)
ReadGroup2	Yes	No	Yes	authNoPriv(2)
ReadWriteGroup2	Yes	Yes	Yes	authNoPriv(2)
TrapGroup2	No	No	Yes	authNoPriv(2)
ReadGroup3	Yes	No	Yes	authPriv(3)
ReadWriteGroup3	Yes	Yes	Yes	authPriv(3)
TrapGroup3	No	No	Yes	authPriv(3)



The first (initial) SNMPv3 user can only be configured through a management interface other than SNMP (i.e., Web interface, configuration ini file, or CLI). Once configured, additional users can be configured through the SNMP interface as well.

Configuring SNMPv3 Users via ini File

Use the [SNMPUsers] ini file table parameter to add, modify, and delete SNMPv3 users. The [SNMPUsers] ini table is a hidden parameter. Therefore, when you load the ini file to the device using the Web interface, the table is not included in the generated file.

Table 2-4: SNMPv3 Table Columns Description

Parameter	Description	Default
Row number	Table index. Its valid range is 0 to 9.	N/A
SNMPUsers_Username	Name of the v3 user. Must be unique. The maximum length is 32 characters.	N/A
SNMPUsers_AuthProtocol	Authentication protocol to be used for this user. Possible values are 0 (none), 1 (MD5), 2 (SHA-1)	0
SNMPUsers_PrivProtocol	Privacy protocol to be used for this user. Possible values are 0 (none), 1 (DES), 2 (3DES), 3 (AES128), 4 (AES192), 5 (AES256)	0
SNMPUsers_AuthKey	Authentication key.	""
SNMPUsers_PrivKey	Privacy key.	""
SNMPUsers_Group	The group that this user is associated with. Possible values are 0 (read-only group), 1 (read-write group), and 2 (trap group). The actual group will be ReadGroup<sl>, ReadWriteGroup<sl> or TrapGroup<sl> where <sl> is the SecurityLevel (1=noAuthNoPriv, 2=authNoPriv, 3=authPriv)	0

Keys can be entered in the form of a text password or in the form of a localized key in hex format. If using a text password, then it should be at least 8 characters in length. Below is an example showing the format of a localized key:

```
26:60:d8:7d:0d:4a:d6:8c:02:73:dd:22:96:a2:69:df
```

The following sample configuration creates three SNMPv3 USM users.

```
[ SNMPUsers ]
FORMAT SNMPUsers_Index = SNMPUsers_Username, SNMPUsers_
AuthProtocol, SNMPUsers_PrivProtocol, SNMPUsers_AuthKey, SNMPUsers_
PrivKey, SNMPUsers_Group;
SNMPUsers 0 = v3user, 0, 0, -, -, 0;
SNMPUsers 1 = v3admin1, 1, 0, myauthkey, -, 1;
SNMPUsers 2 = v3admin2, 2, 1, myauthkey, myprivkey, 1;
[ \SNMPUsers ]
```

The example above creates three SNMPv3 users:

- The user v3user is set up for a security level of noAuthNoPriv(1) and is associated with ReadGroup1.
- The user v3admin1 is setup for a security level of authNoPriv(2), with authentication protocol MD5. The authentication text password is “myauthkey” and the user is associated with ReadWriteGroup2.
- The user v3admin2 is setup for a security level of authPriv(3), with authentication protocol SHA-1 and privacy protocol DES. The authentication text password is “myauthkey”, the privacy text password is “myprivkey”, and the user is associated with ReadWriteGroup3.

Configuring SNMPv3 Users via SNMP

To configure SNMPv3 users, the EMS must use the standard snmpUsmMIB and the snmpVacmMIB.

➤ To add a read-only, noAuthNoPriv SNMPv3 user, v3user:

1. Clone the row with the same security level. After the clone step, the status of the row will be notReady(3).
2. Activate the row. That is, set the row status to active(1).
3. Add a row to the vacmSecurityToGroupTable for SecurityName v3user, GroupName ReadGroup1 and SecurityModel usm(3).



A row with the same security level (noAuthNoPriv) must already exist in the usmUserTable. (see the usmUserTable for details).

➤ To delete the read-only, noAuthNoPriv SNMPv3 user, v3user:

1. If v3user is associated with a trap destination, follow the procedure for associating a different user to that trap destination. (See below.)
2. Delete the vacmSecurityToGroupTable row for SecurityName v3user, GroupName ReadGroup1 and SecurityModel usm.
3. Delete the row in the usmUserTable for v3user.

➤ **To add a read-write, authPriv SNMPv3 user, v3admin1:**

1. Clone the row with the same security level.
2. Change the authentication key and privacy key.
3. Activate the row. That is, set the row status to active(1).
4. Add a row to the vacmSecurityToGroupTable for SecurityName v3admin1, GroupName ReadWriteGroup3 and SecurityModel usm(3).



A row with the same security level (authPriv) must already exist in the usmUserTable (see the usmUserTable for details).

➤ **To delete the read-write, authPriv SNMPv3 user, v3admin1:**

1. If v3admin1 is associated with a trap destination, follow the procedure for associating a different user to that trap destination. (See below.)
2. Delete the vacmSecurityToGroupTable row for SecurityName v3admin1, GroupName ReadWriteGroup1 and SecurityModel usm.
3. Delete the row in the usmUserTable for v3admin1.

Trusted Managers

By default, the SNMP agent accepts Get and Set requests from any IP address, as long as the correct community string is used in the request. Security can be enhanced implementing Trusted Managers. A Trusted Manager is an IP address from which the SNMP agent accepts and processes Get and Set requests. An element management can be used to configure up to five Trusted Managers.

The concept of Trusted Managers is considered to be a weak form of security and therefore is not a required part of SNMPv3 security, which uses authentication and privacy. Trusted Managers for the devices' SNMP agent are applicable only for SNMPv2c users. An exception to this is when the community string is not the default string ('public'/'private'), at which time Trusted Managers are applicable for SNMPV2c users alongside SNMPv3 users.



If Trusted Managers are defined, then all community strings work from all Trusted Managers. In other words, there is no way to associate a community string with specific Trusted Managers.

Configuring Trusted Managers via ini File

To set the Trusted Managers table from start up, write the following in the ini file:

```
SNMPTRUSTEDMGR_X = D.D.D.D
```

Where X is any integer between 0 and 4 (0 sets the first table entry, 1 sets the second and so on), and D is an integer between 0 and 255.

Configuring Trusted Managers via SNMP

To configure Trusted Managers, the Element Management System (EMS) must use the SNMP-COMMUNITY-MIB and snmpCommunityMIB and the snmpTargetMIB.

The following procedure assumes the following: at least one configured read-write community; currently no Trusted Managers; TransportTag for columns for all snmpCommunityTable rows are currently empty.

➤ To add the first Trusted Manager:

1. Add a row to the snmpTargetAddrTable with these values: Name=mgr0, TagList=MGR, Params=v2cparams.
2. Add a row to the snmpTargetAddrExtTable table with these values: Name=mgr0, snmpTargetAddrTMask=255.255.255.255:0. The agent does not allow creation of a row in this table unless a corresponding row exists in the snmpTargetAddrTable.
3. Set the value of the TransportTag field on each non-TrapGroup row in the snmpCommunityTable to MGR.

The following procedure assumes the following: at least one configured read-write community; currently one or more Trusted Managers; TransportTag for columns for all rows in the snmpCommunityTable are currently set to MGR. This procedure must be done from one of the existing Trusted Managers.

➤ To add a subsequent Trusted Manager:

1. Add a row to the snmpTargetAddrTable with these values: Name=mgrN, TagList=MGR, Params=v2cparams, where N is an unused number between 0 and 4.
2. Add a row to the snmpTargetAddrExtTable table with these values: Name=mgrN, snmpTargetAddrTMask=255.255.255.255:0.

An alternative to the above procedure is to set the snmpTargetAddrTMask column while you are creating other rows in the table.

The following procedure assumes the following: at least one configured read-write community; currently two or more Trusted Managers; taglist for columns for all rows in the snmpCommunityTable are currently set to MGR. This procedure must be done from one of the existing trusted managers, but not the one that is being deleted.

➤ To delete a Trusted Manager (not the last one):

- Remove the appropriate row from the snmpTargetAddrTable.

The change takes effect immediately. The deleted trusted manager cannot access the device. The agent automatically removes the row in the snmpTargetAddrExtTable.

The following procedure assumes the following: at least one configured read-write community; currently only one Trusted Manager; taglist for columns for all rows in the snmpCommunityTable are currently set to MGR. This procedure must be done from the final Trusted Manager.

➤ **To delete the last Trusted Manager:**

1. Set the value of the TransportTag field on each row in the snmpCommunityTable to the empty string.
2. Remove the appropriate row from the snmpTargetAddrTable.

The change takes effect immediately. All managers can now access the device. The agent automatically removes the row in the snmpTargetAddrExtTable.

SNMP Ports

The SNMP Request Port is 161 and the SNMP Trap Port is 162. These port numbers for SNMP requests and responses can be changed, by using the [SNMPPort] ini file parameter. The valid value is any valid UDP port number. The default is 161 (recommended).

Multiple SNMP Trap Destinations

An agent can send traps to up to five managers. For each manager you need to define the manager IP address and trap receiving port along with enabling the sending to that manager. You can also associate a trap destination with a specific SNMPv3 USM user. Traps are sent to this trap destination using the SNMPv3 format and the authentication and privacy protocol configured for that user.

To configure the Trap Managers table, use one of the following methods:

- Web interface (refer to the device's User's Manual)
- ini file (see [Configuring Trap Managers via ini File](#) on the next page)
- SNMP (see [Configuring Trap Managers via SNMP](#) on page 18)

Configuring Trap Managers via Host Name

One of the five available SNMP managers can be defined using the manager's host name (i.e., FQDN). This can be configured using the ini file parameter [SNMPTrapManagerHostName].

When this parameter value is defined for this trap, the device at start up tries to resolve the host name. Once the name is resolved (i.e., the IP address is found), the resolved IP address replaces the last entry of the trap manager table (defined by the parameter [SNMPManagerTableIP_x]) and the last trap manager entry of snmpTargetAddrTable in the snmpTargetMIB. The port is 162 (unless specified otherwise). The row is marked as 'used' and the sending is 'enabled'.

When using 'host name' resolution, any changes made by the user to this row in either MIBs are overwritten by the device when a resolving is redone (once an hour).



Some traps may be lost until the name resolving is complete.

Configuring Trap Managers via ini File

In the ini file, the following parameters can be set to enable or disable the sending of SNMP traps. Multiple trap destinations can be supported on the device by setting multiple trap destinations in the ini file.

- `SNMPManagerTrapSendingEnable_<x>`: indicates whether or not traps are to be sent to the specified SNMP trap manager. A value of '1' means that it is enabled, while a value of '0' means disabled. The <x> represents a number 0, 1, or 2, which is the array element index. Currently, up to five SNMP trap managers is supported.
- `SNMPManagerTrapUser_<x>`: indicates to send an SNMPv2 trap using the trap user community string configured with the `SNMPTrapCommunityString` parameter. You may instead specify an SNMPv3 user name.

The following is an example of entries in the ini file regarding SNMP. The device can be configured to send to multiple trap destinations.

```
; SNMP trap destinations
; The device maintains a table of trap destinations containing 5
; rows. The rows are numbered 0..4. Each block of 5 items below
; applies to a row in the table.
;
; To configure one of the rows, uncomment all 5 lines in that
; block. Supply an IP address and if necessary, change the port
; number.
;
; To delete a trap destination, set ISUSED to 0.
;
;SNMPManagerTableIP_0=
;SNMPManagerTrapPort_0=162
;SNMPManagerIsUsed_0=1
;SNMPManagerTrapSendingEnable_0=1
;SNMPManagerTrapUser_0=""
;
;SNMPManagerTableIP_1=
;SNMPManagerTrapPort_1=162
;SNMPManagerIsUsed_1=1
;SNMPManagerTrapSendingEnable_1=1
;SNMPMANAGERTRAPUSER_1=""
;
;SNMPManagerTableIP_2=
;SNMPManagerTrapPort_2=162
```



```

;SNMPManagerIsUsed_2=1
;SNMPManagerTrapSendingEnable_2=1
;SNMPManagerTrapUser_2=""
;
;SNMPManagerTableIP_3=
;SNMPManagerTrapPort_3=162
;SNMPManagerIsUsed_3=1
;SNMPManagerTrapSendingEnable_3=1
;SNMPManagerTrapUser_3=""
;
;SNMPMANAGERTABLEIP_4=
;SNMPManagerTrapPort_4=162
;SNMPManagerIsUsed_4=1
;SNMPManagerTrapSendingEnable_4=1
;SNMPManagerTrapUser_4=""

```

The 'trap manager host name' is configured via `SNMPTrapManagerHostName`. For example:

```

;SNMPTrapManagerHostName = 'myMananger.corp.MyCompany.com'

```



The same information that is configurable in the ini file can also be configured via the `acBoardMIB`.

Configuring SNMP Engine ID

The `[SNMPEngineIDString]` ini file parameter configures the SNMP engine ID. The ID can be a string of up to 36 characters. Once defined, the device must be reset for the parameter to take effect.

The default value is `00:00:00:00:00:00:00:00:00:00:00:00` (12 Hex characters). The provided key must be set with 12 Hex values delimited by `':'`.

If the supplied key does not pass validation of the 12 Hex values input or it is set with the default value, the engine ID is then generated, according to RFC 3411.

Before setting this parameter, all SNMPv3 users must be deleted, otherwise the configuration is ignored.

Configuring Trap Managers via SNMP

The `snmpTargetMIB` interface is available for configuring trap managers.

➤ To add an SNMPv2 trap destination:

- Add a row to the `snmpTargetAddrTable` with these values: `Name=trapN`, `TagList=AC_TRAP`, `Params=v2cparams`, where N is an unused number between 0 and 4

All changes to the trap destination configuration take effect immediately.

➤ **To add an SNMPv3 trap destination:**

1. Add a row to the `snmpTargetAddrTable` with these values: Name=trapN, TagList=AC_TRAP, Params=usm<user>, where N is an unused number between 0 and 4, and <user> is the name of the SNMPv3 that this user is associated with.
2. If a row does not already exist for this combination of user and SecurityLevel, add a row to the `snmpTargetParamsTable` with these values: Name=usm<user>, MPMModel=3(SNMPv3), SecurityModel=3 (usm), SecurityName=<user>, SecurityLevel=M, where M is either 1 (noAuthNoPriv), 2(authNoPriv) or 3(authPriv).

All changes to the trap destination configuration take effect immediately.

➤ **To delete a trap destination:**

- Remove the appropriate row from the `snmpTargetAddrTable`.
- If this is the last trap destination associated with this user and security level, you could also delete the appropriate row from the `snmpTargetParamsTable`.

➤ **To modify a trap destination:**

You can change the IP address and or port number for an existing trap destination. The same effect can be achieved by removing a row and adding a new row.

- Modify the IP address and/or port number for the appropriate row in the `snmpTargetAddrTable`.

➤ **To disable a trap destination:**

- Change TagList on the appropriate row in the `snmpTargetAddrTable` to the empty string.

➤ **To enable a trap destination:**

- Change TagList on the appropriate row in the `snmpTargetAddrTable` to 'AC_TRAP'.
- Change TagList on the appropriate row in the `snmpTargetAddrTable` to "AC_TRAP".

3 Carrier-Grade Alarm System

The basic alarm system has been extended to a carrier-grade alarm system. A carrier-grade alarm system provides a reliable alarm reporting mechanism that takes into account EMS outages, network outages, and transport mechanism such as SNMP over UDP.

A carrier-grade alarm system is characterized by the following:

- The device allows an EMS to determine which alarms are currently active in the device. That is, the device maintains an active alarm table.
- The device allows an EMS to detect lost alarms and clear notifications [sequence number in trap, current sequence number MIB object]
- The device allows an EMS to recover lost alarm raise and clear notifications [maintains a log history]
- The device sends a cold start trap to indicate that it is starting. This allows the EMS to synchronize its view of the device's active alarms.

When the SNMP alarm traps are sent, the carrier-grade alarm system does not add or delete alarm traps as part of the feature. This system provides the mechanism for viewing of history and current active alarm information.

Active Alarm Table

The device maintains an active alarm table to allow an EMS to determine which alarms are currently active in the device. Two views of the active alarm table are supported by the agent:

- `acActiveAlarmTable` in the enterprise `AcAlarm`
- `alarmActiveTable` and `alarmActiveVariableTable` in the IETF standard `AcAlarm` MIB (rooted in the MIB tree)

The `acActiveAlarmTable` is a simple, one-row per alarm table that is easy to view with a MIB browser.

Alarm History

The device maintains a history of alarms that have been sent and traps that have been cleared to allow an EMS to recover any lost raise or clear traps. Two views of the alarm history table are supported by the agent:

- `acAlarmHistoryTable` in the enterprise `AcAlarm` - a simple, one-row per alarm table, that is easy to view with a MIB browser.
- `nImLogTable` and `nImLogVariableTable` in the standard `NOTIFICATION-LOG-MIB`

4 SNMP Traps

This section describes the SNMP traps supported by the device.

Standard Traps

The device also supports the following standard traps:

- authenticationFailure
- coldStart: The device supports a cold start trap to indicate that the device is starting up. This allows the OVOC to synchronize its view of the device's active alarms. In fact, two different traps are sent at start-up:
 - Standard coldStart trap: iso(1).org(3).dod(6).internet(1).snmpV2(6).snmpModules(3).snmpMIB(1).snmpMIBObjects(1).snmpTraps(5).coldStart(1) sent at system initialization.
 - Enterprise acBoardEvBoardStarted: generated at the end of system initialization. This is more of an "application-level" cold start sent after all the initializing process is over and all the modules are ready
- linkDown
- linkup
- entConfigChange
- dsx1LineStatusChange (Applicable only to digital interfaces)

Proprietary Traps

This section provides information on proprietary SNMP traps supported by the device. There is a separation between traps that are alarms and traps that are not (i.e., logs). All traps have the same structure made up of the same 16 varbinds (Variable Binding), i.e., 1.3.6.1.4.1.5003.9.10.1.21.1. For a list of the varbinds, see [Trap Varbinds](#) on the next page.

The source varbind is composed of a string that details the device component from which the trap is being sent (forwarded by the hierarchy in which it resides). For example, an alarm from an SS7 link has the following string in its source varbind: acBoard#1/SS7#0/SS7Link#6. The SS7 link number is specified as 6 and is part of the only SS7 module in the device that is placed in slot number 1 (in a chassis) and is the module to which this trap relates. For devices where there are no chassis options, the slot number is always 1.

Full proprietary trap definitions and trap varbinds are found in AcBoard MIB and AcAlarm MIB.



All traps are sent from the SNMP port (default 161).

Trap Varbinds

Trap varbinds are sent with each proprietary SNMP trap. Refer to the AcBoard MIB for more information on these varbinds.

Table 4-1: Trap Varbinds for Proprietary SNMP Traps

Trap Varbind	Description
acBoardTrapGlobalsName (1)	Alarm or event number. The number value is obtained from the last digit(s) of the OID of the sent trap, and then subtracted by 1. For example, for the trap acBoardEthernetLinkAlarm, which has an OID of 1.3.6.1.4.1.5003.9.10.1.21.2.0.10, the value of the varbind is 9 (i.e., 10 – 1). The value is an integer from 0 to 1000.
acBoardTrapGlobalsTextualDescription (2)	Description of the reported issue. The value is an octet string of up to 200 characters.
acBoardTrapGlobalsSource (3)	The source of the issue. For example, Trunk#1 or Entity1#x. The value is an octet string of up to 100 characters.
acBoardTrapGlobalsSeverity (4)	Active alarm severity on the device: <ul style="list-style-type: none"> ■ noAlarm(0) ■ indeterminate(1) ■ warning(2) ■ minor(3) ■ major(4) ■ critical(5)
AcBoardTrapGlobalsUniqID (5)	Consecutive number count of trap since device was powered on. The number is managed separately for alarms and events. For example, you may have an alarm whose value is 1 and an event whose value is 1. The value is an integer from 0 to 32000.
acBoardTrapGlobalsType (6)	<ul style="list-style-type: none"> ■ other(0)

Trap Varbind	Description
	<ul style="list-style-type: none"> ■ communicationsAlarm(1) ■ qualityOfServiceAlarm(2) ■ processingErrorAlarm(3) ■ equipmentAlarm(4) ■ environmentalAlarm(5) ■ integrityViolation(6) ■ operationalViolation(7) ■ physicalViolation(8) ■ securityServiceOrMechanismViolation(9) ■ timeDomainViolation(10)
acBoardTrapGlobalsProbableCause (7)	<ul style="list-style-type: none"> ■ other(0) ■ adapterError(1) ■ applicationSubsystemFailure(2) ■ bandwidthReduced(3) ■ callEstablishmentError(4) ■ communicationsProtocolError(5) ■ communicationsSubsystemFailure(6) ■ configurationOrCustomizationError(7) ■ congestion(8) ■ corruptData(9) ■ cpuCyclesLimitExceeded(10) ■ dataSetOrModemError(11) ■ degradedSignal(12) ■ dteDceInterfaceError(13) ■ enclosureDoorOpen(14) ■ equipmentMalfunction(15) ■ excessiveVibration(16) ■ fileError(17) ■ fireDetected(18)

Trap Varbind	Description
	<ul style="list-style-type: none"> ■ floodDetected(19) ■ framingError(20) ■ heatingVentCoolingSystemProblem(21) ■ humidityUnacceptable(22) ■ inputOutputDeviceError(23) ■ inputDeviceError(24) ■ lanError(25) ■ leakDetected(26) ■ localNodeTransmissionError(27) ■ lossOfFrame(28) ■ lossOfSignal(29) ■ materialSupplyExhausted(30) ■ multiplexerProblem(31) ■ outOfMemory(32) ■ ouputDeviceError(33) ■ performanceDegraded(34) ■ powerProblem(35) ■ pressureUnacceptable(36) ■ processorProblem(37) ■ pumpFailure(38) ■ queueSizeExceeded(39) ■ receiveFailure(40) ■ receiverFailure(41) ■ remoteNodeTransmissionError(42) ■ resourceAtOrNearingCapacity(43) ■ responseTimeExcessive(44) ■ retransmissionRateExcessive(45) ■ softwareError(46) ■ softwareProgramAbnormallyTerminated (47)

Trap Varbind	Description
	<ul style="list-style-type: none"> ■ softwareProgramError(48) ■ storageCapacityProblem(49) ■ temperatureUnacceptable(50) ■ thresholdCrossed(51) ■ timingProblem(52) ■ toxicLeakDetected(53) ■ transmitFailure(54) ■ transmitterFailure(55) ■ underlyingResourceUnavailable(56) ■ versionMismatch(57) ■ authenticationFailure(58) ■ breachOfConfidentiality(59) ■ cableTamper(60) ■ delayedInformation(61) ■ denialOfService(62) ■ duplicateInformation(63) ■ informationMissing(64) ■ informationModificationDetected(65) ■ informationOutOfSequence(66) ■ intrusionDetection(67) ■ keyExpired(68) ■ nonRepudiationFailure(69) ■ outOfHoursActivity(70) ■ outOfService(71) ■ proceduralError(72) ■ unauthorizedAccessAttempt(73) ■ unexpectedInformation(74)
acBoardTrapGlobalsAdditionalInfo1 (8)	<p>Provides additional information regarding the reported trap.</p> <p>The value is an octet string of up to 100</p>

Trap Varbind	Description
	characters.
acBoardTrapGlobalsAdditionalInfo2 (9)	<p>Provides additional information regarding the reported trap.</p> <p>The value is an octet string of up to 100 characters.</p>
acBoardTrapGlobalsAdditionalInfo3 (10)	<p>Provides additional information regarding the reported trap.</p> <p>The value is an octet string of up to 100 characters.</p>
acBoardTrapGlobalsDateAndTime (11)	Date and time the trap was sent.
acBoardTrapGlobalsSystemSeverity (12)	<p>The highest alarm severity sent by the device when the trap was sent:</p> <ul style="list-style-type: none"> ■ cleared(0) ■ indeterminate(1) ■ warning(2) ■ minor(3) ■ major(4) ■ critical(5)
acBoardTrapGlobalsDeviceName (13)	<p>Name of the device.</p> <p>The value is an octet string of up to 100 characters.</p> <p>Note: The device sends an empty string "\0". AudioCodes OVOC provides the proper string value when it sends it northbound.</p>
acBoardTrapGlobalsDeviceInfo (14)	<p>Device information.</p> <p>The value is an octet string of up to 100 characters.</p> <p>Note: The device sends an empty string "\0". AudioCodes OVOC provides the proper string value when it sends it northbound.</p>
acBoardTrapGlobalsDeviceDescription (15)	<p>Device description.</p> <p>The value is an octet string of up to 100 characters.</p>

Trap Varbind	Description
	Note: The device sends an empty string "\0". AudioCodes OVOC provides the proper string value when it sends it northbound.
acBoardTrapGlobalsSystemSerialNumber (16)	The Serial Number of the device that sent the trap. The value is an octet string of up to 255 characters.

Customizing Trap's Enterprise OID

You can change the enterprise value in the device's SNMP Traps to a variable value, using the ini file parameter [SNMPTrapEnterpriseOid]. This parameter replaces the Traps' OID prefix from 'AcTrap' (1.3.6.1.4.1.5003.9.10.1.21) to user-defined root. All other OIDs remain the same.

For example, the current acBoardEvBoardStarted parameter's OID is '1.3.6.1.4.1.5003.9.10.1.21.2.0.4'. Its prefix ('1.3.6.1.4.1.5003.9.10.1.21') can be changed, and all other OIDs remain the same.

SNMP Alarms in Syslog

SNMP alarms are sent to the Syslog server using the following format.

- **Sent alarms:** RAISE-ALARM: <Alarm Name>; Textual Description: <Textual Description>; Severity <Alarm Severity>; Source <Alarm Source>; Unique ID: <Alarm Unique ID >.

If additional information exists in the alarm, the following are also added: Additional Info1:/ Additional Info2:/ Additional Info3

The message severity is as follows:

Table 4-2: Message Severity

ITU Perceived Severity (SNMP Alarm's Severity)	AudioCodes' Syslog Severity
Critical	RecoverableMsg
Major	RecoverableMsg
Minor	RecoverableMsg
Warning	Notice
Indeterminate	Notice
Cleared	Notice

■ Cleared alarm:

CLEAR-ALARM: <Alarm Name>; Textual Description: <Textual Description>; Severity <Alarm Severity>; Source <Alarm Source>; Unique ID: <Alarm Unique ID >; If exists Additional Info1:/ Additional Info2:/ Additional Info3:

5 Topology MIB Objects

This section describes the topology of the MIB objects.

Physical Entity (RFC 2737)

The following groups are supported:

- entityPhysical group: Describes the physical entities managed by a single agent.
- entityMapping group: Describes the associations between the physical entities, logical entities, interfaces, and non-interface ports managed by a single agent.
- entityGeneral group: Describes general system attributes shared by potentially all types of entities managed by a single agent.
- entityNotifications group: Contains status indication notifications.

IF-MIB (RFC 2863)

The following interface types are presented in the ifTable:

- ethernetCsmacd(6): for all Ethernet-like interfaces, regardless of speed, as per RFC 3635
- ds1(18): DS1-MIB (applicable only to device's supporting digital interfaces)
- voiceFXO(101): Voice Foreign Exchange Office (applicable only to device's supporting FXO interfaces)
- voiceFXS(102): Voice Foreign Exchange Station (applicable only to device's supporting FXS interfaces)

The numbers in the brackets above refer to the IANA's interface-number.

Ethernet Interface

Table 5-1: Ethernet Interface

ifTable & ifXTable	Value
ifIndex	Constructed as defined in the device's Index format.
ifDescr	Ethernet interface.
ifType	ethernetCsmacd(6)
ifMtu	1500
ifSpeed	Mediant 1000: acSysEthernetFirstPortSpeed in bits per second Mediant 2600/4000: 0 since it's GBE - refer to

ifTable & ifXTable	Value
	ifHighSpeed.
ifPhysAddress	00-90-8F plus acSysIdSerialNumber in hex. Will be same for both dual ports.
ifAdminStatus	Always UP. [Read Only] - Write access is not required by the standard. Support for 'testing' is not required.
ifOperStatus	Up or Down corresponding to acAnalogFxsFxoType where Unknown is equal to Down.
ifLastChange	The value of sysUpTime at the time the interface entered its current operational state.
ifInOctets	The number of octets in valid MAC frames received on this interface, including the MAC header and FCS. This does include the number of octets in valid MAC Control frames received on this interface.
ifInUcastPkts	As defined in IfMIB.
ifInDiscards	As defined in IfMIB.
ifInErrors	The sum for this interface of dot3StatsAlignmentErrors, dot3StatsFCSErrors, dot3StatsFrameTooLongs, and dot3StatsInternalMacReceiveErrors.
ifInUnknownProtos	As defined in IfMIB.
ifOutOctets	The number of octets transmitted in valid MAC frames on this interface, including the MAC header and FCS. This does include the number of octets in valid MAC Control frames transmitted on this interface.
ifOutUcastPkts	As defined in IfMIB.
ifOutDiscards	As defined in IfMIB.
ifOutErrors	The sum for this interface of: dot3StatsSQETestErrors, dot3StatsLateCollisions, dot3StatsExcessiveCollisions, dot3StatsInternalMacTransmitErrors and dot3StatsCarrierSenseErrors.
ifName	Ethernet port #1 or# 2 Mediant 2600/4000: Gb Ethernet Port 5/n, where n is the

ifTable & ifXTable	Value
	port number
ifInMulticastPkts	As defined in IfMIB.
ifInBroadcastPkts	As defined in IfMIB.
ifOutMulticastPkts	As defined in IfMIB.
ifOutBroadcastPkts	As defined in IfMIB.
ifHCInOctets ifHCOctets	64-bit versions of counters. Required for ethernet-like interfaces that are capable of operating at 20 Mb/s or faster, even if the interface is currently operating at less than 20 Mb/s.
ifHCInUcastPkts ifHCInMulticastPkts ifHCInBroadcastPkts ifHCOutUcastPkts ifHCOutMulticastPkts ifHCOutBroadcastPkts	64-bit versions of packet counters. Required for ethernet-like interfaces that are capable of operating at 640 Mb/s or faster, even if the interface is currently operating at less than 640 Mb/s. Therefore, will be constant zero.
ifLinkUpDownTrapEnable	Set to disabled (2). Refer to [RFC 2863].
ifHighSpeed	Mediant 2600/4000: 1000 Mediant 1000: 10 or 100 according to acSysEthernetFirstPortSpeed
ifPromiscuousMode	Constant False. [R/O]
ifConnectorPresent	Constant True.
ifAlias	An 'alias' name for the interface as specified by a network manager (NVM)
ifCounterDiscontinuityTime	As defined in IfMIB.

DS1 Interface



The DS1 interface is applicable only to digital PSTN interfaces.

Table 5-2: DS1 Digital Interface

ifTable	Value
ifDescr	Digital DS1 interface.
ifType	ds1(18).
ifMtu	Constant zero.
ifSpeed	DS1 = 1544000, or E1 = 2048000, according to dsx1LineType
ifPhysAddress	The value of the Circuit Identifier [dsx1CircuitIdentifier]. If no Circuit Identifier has been assigned this object should have an octet string with zero length.
ifAdminStatus	Trunk's Lock & Unlock during run time. In initialization process we need to refer the Admin-Status parameter.
ifOperStatus	Up or Down, according to the operation status.
ifLastChange	The value of sysUpTime at the time the interface entered its current operational state.
ifXTable	Value
ifName	Digital# acTrunkIndex
ifLinkUpDownTrapEnable	Set to disabled(2)
ifHighSpeed	Speed of line in Megabits per second: 2
ifConnectorPresent	Set to true(1) normally, except for cases such as DS1/E1 over AAL1/ATM where false(2) is appropriate
ifCounterDiscontinuityTime	Always zero.

BRI Interface



This table is applicable only to BRI interfaces.

Table 5-3: BRI Interface

ifTable	Value
ifDescr	BRI interface
ifType	isdns(75)
ifMtu	Constant zero
ifSpeed	144000
ifPhysAddress	Octet string with zero length
ifAdminStatus	Trunk's Lock & Unlock during run time. In initialization process, refer to the Admin-Status parameter.
ifOperStatus	Up or Down according to the operation status.
ifLastChange	The value of sysUpTime at the time the interface entered its current operational state.
ifXTable	Value
ifName	BRI port no. #
ifLinkUpDownTrapEnable	Set to disabled (2). This is an array of the list of interfaces on the device. Search for the required Ethernet index and set it to (1) to enable.
ifHighSpeed	Speed of line in megabits per second.
ifPromiscuousMode	Non promiscuous mode (1)
ifConnectorPresent	Set to true (1) normally
ifCounterDiscontinuityTime	Always zero

ADSL/VDSL Interface

Table 5-4: ADSL/VDSL Interface

ifTable & ifXTable	Value
ifInOctets	The number of octets in valid MAC frames received on this interface, including the MAC header and FCS. Includes the number of octets in valid MAC Control frames received on this interface.

ifTable & ifXTable	Value
ifInUcastPkts	As defined in IfMIB.
ifInDiscards	As defined in IfMIB.
ifInErrors	The sum for this interface of dot3StatsAlignmentErrors, dot3StatsFCSErrors, dot3StatsFrameTooLongs, and dot3StatsInternalMacReceiveErrors.
ifInUnknownProtos	As defined in IfMIB.
ifOutOctets	The number of octets transmitted in valid MAC frames on this interface, including the MAC header and FCS. This does include the number of octets in valid MAC Control frames transmitted on this interface.
ifOutUcastPkts	As defined in IfMIB.
ifOutDiscards	As defined in IfMIB.
ifOutErrors	The sum for this interface of: dot3StatsSQETestErrors, dot3StatsLateCollisions, dot3StatsExcessiveCollisions, dot3StatsInternalMacTransmitErrors and dot3StatsCarrierSenseErrors.

VLAN Interface

Table 5-5: VLAN Interface

ifTable	Value
ifDescr	CLI interface name. If not exists - Virtual LAN Interface / WAN Virtual LAN Interface
ifType	ds1(136).
ifMtu	Interface MTU [default 1500]
ifSpeed	0
ifPhysAddress	The value of the Circuit Identifier [dsx1CircuitIdentifier]. If no Circuit Identifier has been assigned this object should have an octet string with zero length.
ifAdminStatus	INTERFACE_STATUS_WORKING -> snmpIF_

ifTable	Value
	ifAdminStatus_up_E/snmpIF_ifOperStatus_up_E INTERFACE_STATUS_UNKNOWN) INTERFACE_STATUS_DISABLED INTERFACE_STATUS_INACTIVE -> snmpIF_ifAdminStatus_down_E/snmpIF_ifOperStatus_down_E
ifOperStatus	
ifLastChange	The value of sysUpTime at the time the interface entered its current operational state.
ifXTable	Value
ifName	Interface name
ifLinkUpDownTrapEnable	Set to disabled(2)
ifHighSpeed	Speed of line in Megabits per second: 2
ifConnectorPresent	Set to true(1) normally
ifCounterDiscontinuityTime	Always zero.

MIB-II Counters

■ TCP (OID 1.3.6.1.2.1.6):

- tcpRtoAlgorithm
- tcpRtoMin
- tcpRtoMax
- tcpMaxConn
- tcpActiveOpens
- tcpPassiveOpens
- tcpAttemptFails
- tcpEstabResets
- tcpCurrEstab
- tcpInSegs
- tcpOutSegs
- tcpRetransSegs

- tcpInErrs
- tcpOutRsts
- tcpHCInSegs
- tcpHCOutSegs
- UDP (OID 1.3.6.1.2.1.7):
 - udpInDatagrams
 - udpNoPorts
 - udpInErrors
 - udpOutDatagrams
 - udpHCInDatagrams
 - udpHCOutDatagrams
- IP (OID 1.3.6.1.2.1.4):
 - ipForwarding
 - ipDefaultTTL
 - ipInReceives
 - ipInHdrErrors
 - ipInAddrErrors
 - ipForwDatagrams
 - ipInUnknownProtos
 - ipInDiscards
 - ipInDelivers
 - ipOutRequests
 - ipOutDiscards
 - ipOutNoRoutes
 - ipReasmTimeout
 - ipReasmReqds
 - ipReasmOKs
 - ipReasmFails
 - ipFragCreate
- ICMP (OID 1.3.6.1.2.1.5):
 - icmpInMsgs
 - icmpInErrors

- icmpInDestUnreachs
 - icmpInTimeExcds
 - icmpInParmProbs
 - icmpInSrcQuenchs
 - icmpInRedirects
 - icmpInEchos
 - icmpInEchoReps
 - icmpInTimestamps
 - icmpInTimestampReps
 - icmpInAddrMasks
 - icmpInAddrMaskReps
 - icmpOutMsgs
 - icmpOutErrors
 - icmpOutDestUnreachs
 - icmpOutTimeExcds
 - icmpOutParmProbs
 - icmpOutSrcQuenchs
 - icmpOutRedirects
 - icmpOutEchos
 - icmpOutEchoReps
 - icmpOutTimestamps
 - icmpOutTimestampReps
 - icmpOutAddrMasks
 - icmpOutAddrMaskReps
- IF (OID 1.3.6.1.2.1.2.2):
- ifInOctets
 - ifInUcastPkts
 - ifInDiscards
 - ifInErrors
 - ifOutOctets
 - ifOutUcastPkts
 - ifOutErrors

- ifInMulticastPkts
- ifInBroadcastPkts
- ifOutMulticastPkts
- ifOutBroadcastPkts

6 File Management

SNMP supports file download, upload, and removal.

Downloading a File to the Device

The file URL is set in the appropriate MIB object under the `acSysHTTPClient` subtree (refer to the subtree objects description for the URL form). The download can be scheduled using the `acSysHTTPClientAutoUpdatePredefinedTime` and `acSysHTTPClientAutoUpdateFrequency` objects. It can also be a manual process using `acSysActionSetAutoUpdate`. In this case (only) and as long as one URL is set at a time, the result can be viewed in `acSysActionSetAutoUpdateActionResult`. In both cases, the `acHTTPDownloadResult` trap is sent, indicating the success or failure of the process.

`acSysActionSetActionId` can be set to any value and can be used to indicate an action performed by a certain manager.

A successful process also ends with the file name in the appropriate object under the `acSysFile` subtree or in the `acCASFileTable` or the `acAuxiliaryFiles` subtree, along with the URL being erased from the object under the `acSysHTTPClient` subtree.



- The action result (both in the `acSysActionSetAutoUpdateActionResult` object and `acHTTPDownloadResult` trap) for the Voice Prompt and XML indicates only that the file reached the device and has no indication on the application's ability to parse the file.
- The action result in `acSysActionSetAutoUpdateActionResult` is reliable as long as only one file is downloaded at a time.

Uploading and Deleting a File

File upload is the procedure of sending a file from the device to the manager. Deleting a file is erasing it from the device, an offline action that requires a reset for it to be applied. The `acSysUpload` subtree holds all relevant objects.

- `acSysUploadFileURI` indicates the file name and location along with the file transfer protocol (HTTP or NFS), for example, "`http:\\server\filename.txt`".
- `acSysUploadFileType` and `acSysUploadFileNumber` are used to determine the file to be uploaded along with its instance when relevant (for CAS or Video Font).
- `acSysUploadActionID` is at the disposal of the manager and can be used to indicate that a certain manager has performed the action.
- `acSysUploadActionType` determines the action that occurs and triggers it off at the same time.



File upload using SNMP is supported only for ini files; file removal using SNMP is supported for all files except ini files.

7 Performance Monitoring

Performance measurements (performance monitoring) are available for third-party performance monitoring systems through an SNMP interface. These can be polled at scheduled intervals by an external poller or utility in the management server or other off-board systems.

The device provides performance measurements in the form of two types:

- **Gauges:** Gauges represent the current state of activities on the device. Gauges, unlike counters, can decrease in value and like counters, can increase. The value of a gauge is the current value or a snapshot of the current activity on the device at that moment.
- **Counters:** Counters always increase in value and are cumulative. Counters, unlike gauges, never decrease in value unless the server is reset, which causes the counters to reset to zero (0).

The device's performance measurements are provided by the following proprietary MIBs that are located under the `acPerformance` subtree, `iso (1).org (3).dod (6).internet (1).private (4).enterprises(1).AudioCodes(5003).acPerformance(10)`:

- **acPMMedia:** Media-related (voice) monitoring such as RTP and DSP. The MIB includes the following parameters:
 - Number of active DSP channels
 - Channels used for each coder
 - Discarded packets in robust RTP filter
 - Media Networking subtree - an array of packet behavior parameters such as delay, jitter, transmitted/received and lost RTP bytes and packets.
 - Media Networking Aggregated subtree - displays similar data only for the entire device and includes TDM-IP and IP-IP calls.
 - Channel Utilization subtree - parameters regarding channel use by fax, modem, TDM-IP calls, RTP, SRTP, multicast source and modem relay
 - Streaming Cache subtree - hit count, miss count and server request count
- **acPMControl:** Control protocol-related (SIP) monitoring such as connections, commands.
 - CP Connection subtree – parameters include connection lifetime/state, counters for commands, retransmissions, active contexts, command success/failure and process time, transaction processing time and call attempts
 - SIP subtree
- **acPMAnalog:** Analog channels off-hook state (one table only).
- **acPMPSTN:** PSTN-related monitoring such as channel use and trunk utilization. All statistics in this MIB are per trunk:
 - Number of active channels
 - Trunk activity

- Number of channels that are in/out of service and in maintenance

■ **acPMSystem:** General device monitoring:

- IP connection.
- Discarded UDP packets due to unknown port
- System Net Utils subtree – transmitted/received bytes/packets, discarded packets
- System Network subtree – DHCP response time/request count and STUN-related statistics
- System Multicast subtree – multicast IP packets received, multicast IP packets conveying UDP payload packets received/rejected, IGMP packets/general-queries/specific-queries received, IGMP membership-report/leave-group sent messages
- System Congestion subtree – congestion state for general resources, DSP resources, IP resources, conference resources
- System NFS subtree – NFS-related parameters
- System MSBR subtree – includes received good/bad octets, received undersized/oversized/discarded packets, received MAC errors, received FSC error packets, transmitted octets/packets/collisions/late-packets

Performance monitoring MIBs all have an identical, fixed structure, which includes two major subtrees:

■ **Configuration subtree:** Allows configuration of general attributes of the MIB and specific attributes of the monitored objects. This subtree includes:

- Reset Total Counters: Resets the "total" (see below) objects in all the MIB's tables, if they are defined.
- Attributes subtrees: Number of subtrees in which scalars are used to configure high and low thresholds for relevant tables.

■ **Data subtree:** Consists of monitored data and statistics, and includes:

- Time From Start Of Interval object: GETs the time in seconds from the beginning of the current interval.
- Data tables: All have similar structure. Not all possible columns appear in all of them. The specific structure of a table (i.e. what columns are defined) is parameter specific. The only column that always appears is the interval column. The information in each column is a statistical attribute of the parameter being measured.

The device measures performance at fixed intervals of 15 minutes. The device keeps a record of the last two completed intervals. These intervals are used as a key in the MIB tables in which the performance monitoring results are presented. There are one or two indices in each table. If there are two, the first is a sub-set in the table (e.g., trunk number) and the second (or the single where there is only one) index represents the interval number:

■ **0:** Current interval (not completed)


- 1: Last completed interval
- 2: Second last completed interval

When the current interval (Interval 0) completes (reaches 15 minutes), Interval 2 is discarded, Interval 1 becomes Interval 2, Interval 0 becomes Interval 1, and a new Interval 0 is created.



- The interval's start time is synchronized with the device's clock so that the intervals begin on the hour (e.g., 12:00). If you are using NTP, then it is likely that the last interval within the first hour after device startup will be cut short to accommodate for this synchronization.
- Some performance monitoring parameters support a history with more than two intervals. These include conference calls, trunk-test calls and digit-collect requests.
- An attribute whose value is -1 means that the attribute isn't relevant at that point of time.
- If the device has just started up and the first measuring interval has not elapsed, intervals 1 and 2 are not applicable and their data values are typically displayed as "-1" or as empty cells.


The following figure shows an example of a monitored parameter, in this case, the number of utilized B-channels in a single trunk:

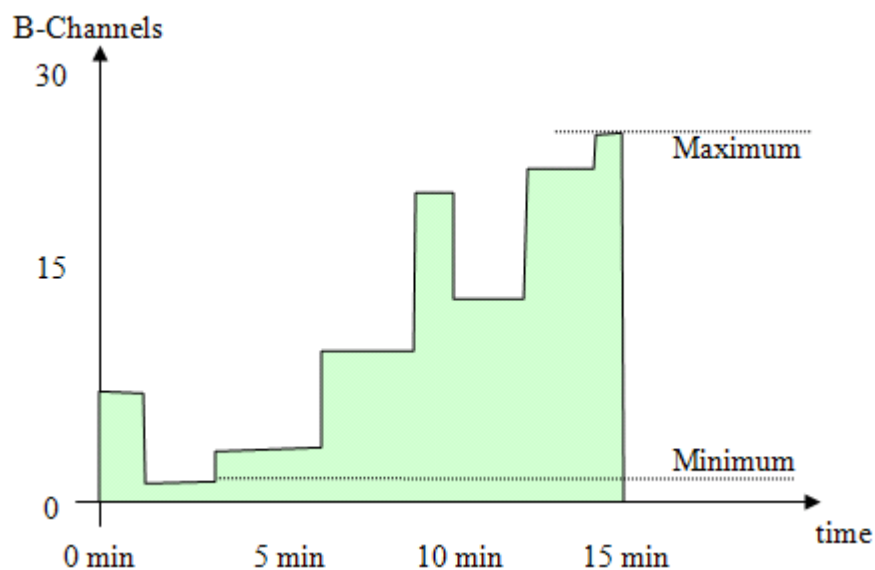

The x-axis is the time within the interval; the y-axis is the number of used channels. The parameter's value is a gauge. While the interval index is 0 (i.e., current interval), any GET on the parameter value will return a y-axis value at that moment. When the interval is complete (index 1 or 2), the gauge value is no longer relevant and other attributes become relevant such as the average (area in green divided by the interval length in seconds), which is called time-based statistics.

The following figure shows an example of the last three intervals. In this example, the device was powered up at 11:24. The first interval (of 15 minutes) ended at 11:39 and the second interval (of 15 minutes) ended at 11:54. The current interval (Interval 0) has not completed the

15 minutes. Typically, you would want the measured performance of the last completed interval (i.e., Interval 1).

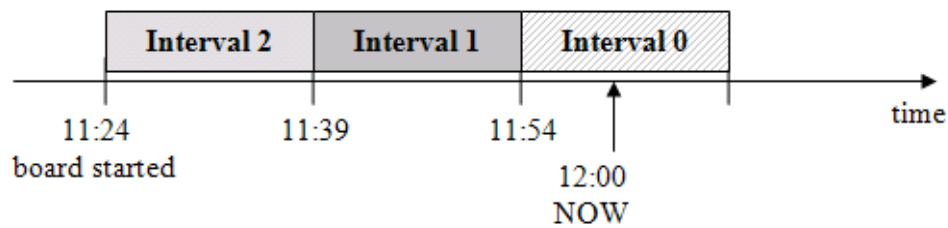


The performance monitoring MIB tables can include the following properties (columns):

- **Table specific index:** This is a table key.
- **Interval:** Indicates the measured interval (0, 1, or 2), which is a table key.
- **Val:** Indicates the value of the gauge or counter. This is the snapshot view of the device's current activity.
 - **Counter:** Cumulative value (only increases).
 - **Gauge:** Fluctuates in value (increases and decreases).
- **Average:** Indicates the average value within the interval.
- **Max:** Indicates the maximum gauge value during the interval.
- **Min:** Indicates the minimum gauge value during the interval.
- **Volume:** Indicates the number of times the gauge or counter was updated (i.e., the volume of change), for example:
 - For a trunk utilization element, the volume indicates how many calls were made and released.
 - For the Ethernet connection status element, the volume indicates how many network connections and disconnections occurred.
- **Thresholds:**
 - **TimeBelowLowThreshod:** Indicates the percent (%) of the interval time for which the gauge was below the low threshold (if defined).
 - **TimeAboveHighThreshod:** Indicates the percent (%) of the interval time for which the gauge was above the high threshold (if defined).
 - **TimeBetweenThresholds:** Indicates the percent (%) of the interval time for which the gauge was between the low and high thresholds (if defined).

The following figure shows an example of how the device calculates thresholds. The purple bar indicates the time when the element was below the low threshold (about 40% of the interval time), the blue bar indicates the time when the element was between the low and

high threshold (about 30%), and the red bar indicates the time when the element was above the high threshold (about 30%).

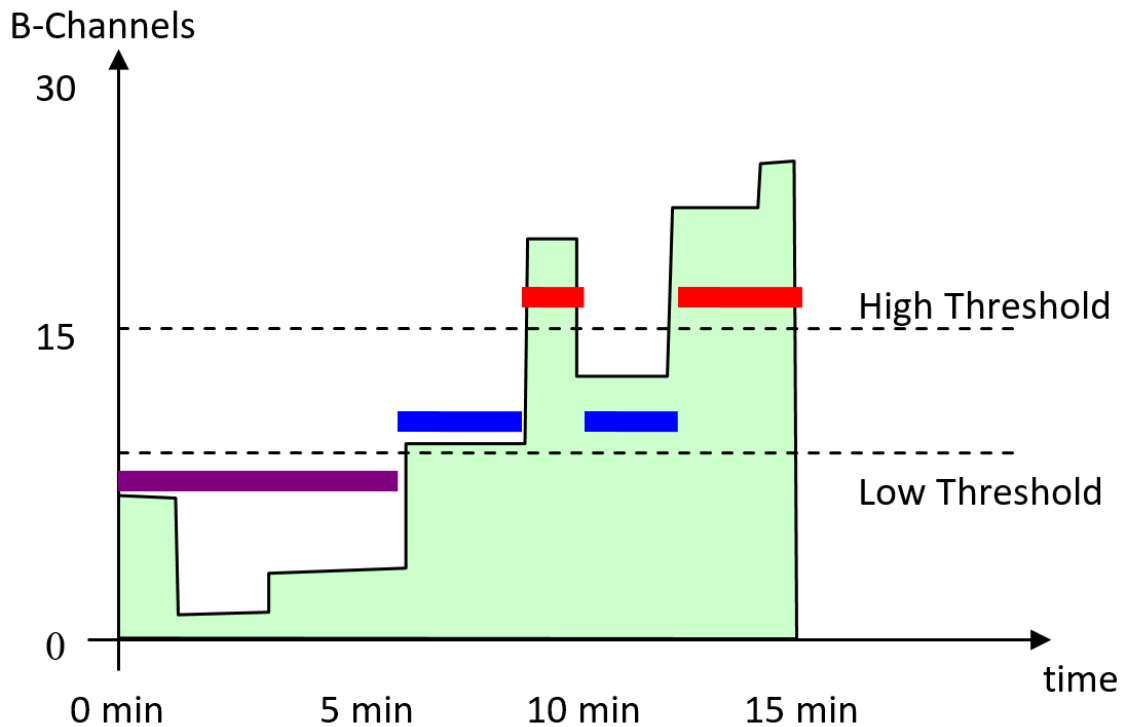

The following summarizes how to do an SNMP Get operation for performance monitoring:

- To perform SNMP Get operations on **global** performance monitoring (PM) parameters:
 - Realtime PMs: Append ".0" to the end of the PM (e.g., acPMSBCAsrVal.0).
 - History PMs:
 - ◆ For the last completed 15-minute interval, append ".1" to the end of the PM (e.g., acPMSBCAsrVal.1).
 - ◆ For the second last completed 15-minute interval (i.e., 30 minutes ago), append ".2" to the end of the PM (e.g., acPMSBCAsrVal.2).
- To perform SNMP Get operations on **table** PM parameters:
 - Realtime PMs: Append to the end of the PM, the table row index of the entity followed by ".0" (e.g., for IP Group #4: acPMSBCIPGroupAsrVal.4.0).
 - History PMs:
 - ◆ For the last completed 15-minute interval, append to the end of the PM, the table row index of the entity followed by ".1" (e.g., for IP Group #4: acPMSBCIPGroupAsrVal.4.1).
 - ◆ For the second last completed 15-minute interval (i.e., 30 minutes ago), append to the end of the PM, the table row index of the entity followed by ".2" (e.g., for IP Group #4: acPMSBCIPGroupAsrVal.4.2).

The SNMP trap event `acPerformanceMonitoringThresholdCrossing` is sent every time the high or low threshold of a Performance Monitored MIB object is crossed (see Performance Monitoring Threshold-Crossing Trap). The severity field is 'indeterminate' when the crossing is above the threshold and 'cleared' when it returns to below the threshold. The trap's 'source varbind' indicates the object for which the threshold is crossed. To enable this feature, load an ini file to the device with the following parameter setting:

```
PM_EnableThresholdAlarms = 1
```

Once enabled, you can change the low and high threshold values from their default values, through ini file by using the following syntax:

```
PM_<MIB Source Name> = '1,<Low Threshold>,<High Threshold>,15'
```

where:

- *<MIB Source Name>*: The source name of the MIB (e.g., `PM_TrunkUtilization`, `PM_NetUtilKBytes`, and `PM_gwIPGroupOutINVITEDialogs`)
- *<Low Threshold>*: Defines the low-threshold value
- *<High Threshold>*: Defines the high-threshold value

The value "15" in the syntax is the measuring interval, which is always fixed at 15 minutes.

The following is an example of an ini file that configures the `acPMSIPIGroupOutInviteDialogsTable` performance monitoring MIB (OID 1.3.6.1.4.1.5003.10.8.2.52.35) with a low threshold of 10 and a high threshold of 18:

```
PM_gwIPGroupOutINVITEDialogs = '1,10,18,15'
```




If you download (save) the device's ini file, it includes all SNMP performance monitoring MIBs whose thresholds (low and/or high) you have changed from default. To apply these same threshold values to other devices, load the file to the other devices.

- **FullDayAverage:** Indicates the 24-hour average.
- **Total:** (Applicable only to Counters) Indicates the summation of all counter values. In other words, it does not reset to zero for each new interval. However, the total does reset after a device reset. In addition, you can reset this property per MIB module, by setting the `ResetTotal` object to the value 2:
 - PM-Analog: `acPMAAnalogConfigurationResetTotalCounters`
 - PM-Control: `acPMControlConfigurationResetTotalCounters`
 - PM-Media: `acPMMediaConfigurationResetTotalCounters`
 - PM-PSTN: `acPMPSTNConfigurationResetTotalCounters`
 - PM-System: `acPMSystemConfigurationResetTotalCounters`

For example:


```
acPMMediaConfigurationResetTotalCounters.0 (integer) resetTotalCounters
(2)
```

- **StateChanges:** Indicates the number of times a state (mostly active/non-active) was toggled.

 Not all the properties listed above are applicable to every Performance Monitoring MIB. Properties that are not applicable are displayed as "-1" or as an empty cell.

SNMP Performance Monitoring MIBs

This section describes the Performance Monitoring SNMP MIBs.

 The tables in this section use check marks "√" and crosses "x" to indicate support for the specific MIB property:

- ✓ "G/C": gauge / counter
- ✓ "Int": measured interval
- ✓ "Val": value of gauge or counter
- ✓ "Min": minimum gauge value
- ✓ "Max": maximum gauge value
- ✓ "Avg": average within the interval
- ✓ "TbLT": percentage of interval time that value was below low threshold
- ✓ "TbT": percentage of interval time that value was between low and high thresholds
- ✓ "TaHT": percentage of interval time that value was above high threshold
- ✓ "HT": configured or default high threshold
- ✓ "LT": configured or default low threshold

- For performance monitoring MIBs that count attempted calls (e.g., acPMSIPAttemptedCallsTable), you can configure the stage of the call (start or termination) to include in the count. This is done using the [AttemptedCallCountOnStart] parameter.

Performance Monitoring MIBs for IP Network Interfaces

The following table lists the performance monitoring MIBs for IP network interfaces.

Table 7-1: Performance Monitoring MIBs for IP Network Interface

Performance Monitoring MIB	G/ C	In t	V al	Mi n	M ax	Av g	Tb LT	Tb T	Ta HT	H T	L T
■ MIB Name: acPMNetUtilKBytesTable											
■ OID: 1.3.6.1.4.1.5003.10.11.2.31.1											

Performance Monitoring MIB	G/C	In t	V al	Mi n	M ax	Av g	Tb LT	Tb T	Ta HT	H T	L T
<p>■ Source Name: PM_NetUtilKBytes</p>											
<p>Indicates the number of Kbytes (1000 bytes) received and transmitted on the interface (Index 0 is transmit; Index 1 is receive), including those received in error, from the beginning of the current collection interval as indicated by the time interval.</p> <p>OVOC parameter name: Number of Incoming / Outgoing Kbytes</p> <p>■ High threshold: acPMNetUtilsAttributesKBytesHighThreshold (1.3.6.1.4.1.5003.10.11.1.33.1)</p> <p>■ Low threshold: acPMNetUtilsAttributesKBytesLowThreshold (1.3.6.1.4.1.5003.10.11.1.33.2)</p>	G	15	✓	✓	✓	✓	✓	✓	✓	x	x
<p>■ MIB Name: acPMNetUtilPacketsTable</p> <p>■ OID: 1.3.6.1.4.1.5003.10.11.2.31.2</p> <p>■ Source Name: PM_NetUtilPackets</p>											
<p>Indicates the number of incoming and outgoing packets from the interface (Index 0 is transmit; Index 1 is receive), from the beginning of the current collection interval as indicated by time interval.</p> <p>OVOC parameter name: Number of Outgoing /</p>	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB	G/C	In t	V al	Mi n	M ax	Av g	Tb LT	Tb T	Ta HT	H T	L T
<p>Incoming Pkts.</p> <ul style="list-style-type: none"> High threshold: acPMNetUtilsAttributesPacketsHighThreshold (1.3.6.1.4.1.5003.10.11.1.33.3) Low threshold: acPMNetUtilsAttributesPacketsLowThreshold (1.3.6.1.4.1.5003.10.11.1.33.4) 											
<ul style="list-style-type: none"> MIB Name: acPMNetUtilDiscardedPacketsTable OID: 1.3.6.1.4.1.5003.10.11.2.31.3 Source Name: PM_NetUtilDiscardedPackets 											
<p>Indicates the number of malformed IP packets received on the interface during the last interval. These are packets which are corrupted or discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, etc.</p> <p>OVOC parameter name: Number of Incoming Discarded Pkts.</p>	C	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIBs for Media Realms

The following table lists the performance monitoring MIBs for Media Realms.

Table 7-2: Performance Monitoring MIBs for Media Realms

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmPacketLossRxTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.10 ■ Source Name: PM_MediaRealmPacketLossRx 											
Indicates the received RTP packet loss (reported by RTCP) per Media Realm.	G	1 5	x	✓	✓	✓	✓	✓	✓	50	30
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmPacketLossTxTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.11 ■ Source Name: PM_MediaRealmPacketLossTx 											
Indicates the transmitted RTP packet loss (reported by RTCP) per Media Realm.	G	1 5	x	✓	✓	✓	✓	✓	✓	50	30
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmBytesTxTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.1 ■ Source Name: PM_MediaRealmBytesTx 											
Indicates the number of bytes received in RTCP data, per Media Realm.	G	1 5	x	✓	✓	✓	✓	✓	✓	150 000 0	100 000 0
<ul style="list-style-type: none"> ■ High threshold: acPMMediaRealmAttributes MediaRealmBytesTxHighThre shold (1.3.6.1.4.1.5003.10.8.1.35.1) ■ Low threshold: acPMMediaRealmAttributes MediaRealmBytesTxLowThres hold (1.3.6.1.4.1.5003.10.8.1.35.2) 											
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmBytesRxTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.2 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b LT	T b T	T a H T	HT	LT
<ul style="list-style-type: none"> Source Name: PM_MediaRealmBytesRx 											
<p>Indicates the number of bytes received in RTCP data, per Media Realm.</p> <ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributes MediaRealmBytesRxHighThreshold (1.3.6.1.4.1.5003.10.8.1.35.3) Low threshold: acPMMediaRealmAttributes MediaRealmBytesRxLowThreshold (1.3.6.1.4.1.5003.10.8.1.35.4) 	G	15	*	✓	✓	✓	✓	✓	✓	150000	100000
<ul style="list-style-type: none"> MIB Name: acPMMediaRealmPacketsTxTable OID: 1.3.6.1.4.1.5003.10.8.2.53.3 Source Name: PM_MediaRealmPacketsTx 											
<p>Indicates the number of media packets sent in RTCP data, per Media Realm.</p> <ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributes MediaRealmPacketsTxHighThreshold (1.3.6.1.4.1.5003.10.8.1.35.5) Low threshold: acPMMediaRealmAttributes MediaRealmPacketsTxLowThreshold (1.3.6.1.4.1.5003.10.8.1.35.6) 	G	15	*	✓	✓	✓	✓	✓	✓	7500	6000
<ul style="list-style-type: none"> MIB Name: acPMMediaRealmPacketsRxTable OID: 1.3.6.1.4.1.5003.10.8.2.53.4 Source Name: PM_MediaRealmPacketsRx 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b LT	T b T	T a H T	HT	LT
<p>Indicates the number of media packets received in RTCP data, per Media Realm.</p> <ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributesMediaRealmPacketsRxHighThreshold (1.3.6.1.4.1.5003.10.8.1.35.7) Low threshold: acPMMediaRealmAttributesMediaRealmPacketsRxLowThreshold (1.3.6.1.4.1.5003.10.8.1.35.8) 	G	15	x	✓	✓	✓	✓	✓	✓	7500	6000
<ul style="list-style-type: none"> MIB Name: acPMMediaRealmVERealmPacketDelayTable OID: 1.3.6.1.4.1.5003.10.8.2.53.5 Source Name: PM_VERealmPacketDelay 											
<p>Indicates the packet delay in RTCP data, per Media Realm.</p> <ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributesVERealmPacketDelayHighThreshold (1.3.6.1.4.1.5003.10.8.1.35.9) Low threshold: acPMMediaRealmAttributesVERealmPacketDelayLowThreshold (1.3.6.1.4.1.5003.10.8.1.35.10) 	G	15	x	✓	✓	✓	x	x	x	150	120
<ul style="list-style-type: none"> MIB Name: acPMMediaRealmVERealmPacketJitterTable OID: 1.3.6.1.4.1.5003.10.8.2.53.6 Source Name: PM_VERealmPacketJitter 											
Indicates the packet jitter in RTCP	G	1	✓	✓	✓	✓	x	x	x	150	120

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b LT	T b T	T a H T	HT	LT
data, per Media Realm. <ul style="list-style-type: none"> ■ High threshold: acPMMediaRealmAttributesV ERealmPacketJitterHighThres hold (1.3.6.1.4.1.5003.10.8.1.35.1 1) ■ Low threshold: acPMMediaRealmAttributesV ERealmPacketJitterLowThresh old (1.3.6.1.4.1.5003.10.8.1.35.1 2) 		5									
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmRealmMOSTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.7 ■ Source Name: PM_RealmMOS 											
Indicates the MOS quality in RTCP-XR data, per Media Realm. <ul style="list-style-type: none"> ■ High threshold: acPMMediaRealmAttributesR ealmMOSHHighThreshold (1.3.6.1.4.1.5003.10.8.1.35.1 3) ■ Low threshold: acPMMediaRealmAttributesR ealmMOSLowThreshold (1.3.6.1.4.1.5003.10.8.1.35.1 4) 	G	1 5	✓	✓	✓	✓	x	x	x	50	10
<ul style="list-style-type: none"> ■ MIB Name: acPMMediaRealmBwRxTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.53.8 ■ Source Name: PM_MediaRealmBwRx 											
Indicates the average bandwidth for Rx bytes, per Media Realm.	G	1 5	✓	✓	✓	✓	x	x	x	150 000	0

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b LT	T b T	T a H T	HT	LT
<ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributes MediaRealmBwRxHighThresh old (1.3.6.1.4.1.5003.10.8.1.35.1 5) Low threshold: acPMMediaRealmAttributes MediaRealmBwRxLowThresho ld (1.3.6.1.4.1.5003.10.8.1.35.1 6) 										0	
<ul style="list-style-type: none"> MIB Name: acPMMediaRealmBwTxTable OID: 1.3.6.1.4.1.5003.10.8.2.53.9 Source Name: PM_MediaRealmBwTx 											
<p>Indicates the average bandwidth for Tx bytes, per Media Realm.</p> <ul style="list-style-type: none"> High threshold: acPMMediaRealmAttributes MediaRealmBwTxHighThresh old (1.3.6.1.4.1.5003.10.8.1.35.1 7) Low threshold: acPMMediaRealmAttributes MediaRealmBwTxLowThresho ld (1.3.6.1.4.1.5003.10.8.1.35.1 8) 	G	15	✓	✓	✓	✓	x	x	x	1500000	0

Performance Monitoring MIBs for VoIP Calls

The following table lists the performance monitoring MIBs for VoIP calls.

Table 7-3: Performance Monitoring MIBs for VoIP Calls

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> ■ MIB Name: acPMChannelsPerCoderTable ■ OID: 1.3.6.1.4.1.5003.10.7.2.22 ■ Source Name: PM_VEChannelsPerCoder 											
<p>Indicates the number of active channels per coder, where the Index denotes the coder: 0 (G.711), 1 (G.723), 2 (G.728), 3 (G.729A), 4 (G.729E), 5 (AMR), 6 (G.729EV), 7 (EG.711), 8 (EVRC), 9 (Unknown Coder), 10 (G.726), 11 (RTA), 12 (SILK), 13 (AMR-WB), 14 (G.722), 15 (G.727), 16 (GSM), 17 (QCELP), 18 (VOX ADPCM), 19 (iLBC), 20 (Speex).</p> <ul style="list-style-type: none"> ■ High threshold: acPMCodersAttributesChannelsPerCoderHighThreshold (1.3.6.1.4.1.5003.10.7.1.32.1) ■ Low threshold: acPMCodersAttributesChannelsPerCoderLowThreshold (1.3.6.1.4.1.5003.10.7.1.32.2) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> ■ MIB Name: acPMChannelsPerCoderG711Table ■ OID: 1.3.6.1.4.1.5003.10.7.2.26 ■ Source Name: PM_VeG711Channels 											
<p>Indicates the number of active channels per G.711 A-law or G.711 U-law, where the Index denotes the coder type: 0 (G.711 A-law) and 1 (G.711 U-law).</p> <ul style="list-style-type: none"> ■ High threshold: acPMCodersAttributesChannelsPerCoderHighThreshold (1.3.6.1.4.1.5003.10.7.1.32.1) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> Low threshold: acPM CodersAttributesChannelsP erCoderLowThreshold (1.3.6.1.4.1.5003.10.7.1.32.2) 											
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPPacketLossRxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.9 Source Name: PM_veModuleRTPPacketLossRx 											
<p>Indicates the Rx RTP packet loss (reported by RTCP), during the time Interval.</p> <p>OVOC parameter name: Rx RTP Packet Loss.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesModu leRTPPacketLossRxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.17) Low threshold: acPMNetworkingAttributesModu leRTPPacketLossRxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.18) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPPacketLossTxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.10 Source Name: PM_veModuleRTPPacketLossTx 											
<p>Indicates the Tx RTP packet loss (reported by RTCP), during the time Interval.</p> <p>OVOC parameter name: Tx RTP Packet Loss.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesModu leRTPPacketLossTxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.19) Low threshold: acPMNetworkingAttributesModu 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB	G / C	I n t	V al	M in	M ax	A v g	Tb LT	T b T	Ta HT	H T	L T
leRTPPacketLossTxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.20)											
<ul style="list-style-type: none"> MIB Name: acPMModulePacketDelayTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.1 Source Name: PM_veModulePacketDelay 											
<p>Indicates the RTP packet delay during the collection time interval. OVOC parameter name: RTP delay.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesPacketDelayHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.1) Low threshold: acPMNetworkingAttributesPacketDelayLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.2) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> MIB Name: acPMModulePacketJitterTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.2 Source Name: PM_veModulePacketJitter 											
<p>Indicates the RTP packet jitter during the collection time interval. OVOC parameter name: RTP jitter.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesPacketJitterHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.3) Low threshold: acPMNetworkingAttributesPacketJitterLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.4) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPBytesRxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.4 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> Source Name: PM_veModuleRTPBytesRx 											
<p>Indicates the Tx RTP bytes during the collection time interval.</p> <p>OVOC parameter name: Rx RTP Bytes.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesRTPBytesRxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.7) Low threshold: acPMNetworkingAttributesRTPBytesRxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.8) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPBytesTxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.3 Source Name: PM_veModuleRTPBytesTx 											
<p>Indicates the Rx RTP bytes during the collection time interval.</p> <p>OVOC parameter name: Tx RTP Bytes.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesRTPBytesTxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.5) Low threshold: acPMNetworkingAttributesRTPBytesTxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.6) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPPacketsRxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.6 Source Name: PM_RTPModulePacketsRx 											
<p>Indicates the Rx RTP packets during the collection time interval.</p>	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB	G / C	I n t	V al	M in	M ax	A v g	Tb LT	T b T	Ta HT	H T	L T
<p>OVOC parameter name: Rx RTP Packets.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesRTPPacketsRxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.11) Low threshold: acPMNetworkingAttributesRTPPacketsRxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.12) 											
<ul style="list-style-type: none"> MIB Name: acPMModuleRTPPacketsTxTable OID: 1.3.6.1.4.1.5003.10.7.2.31.21.5 Source Name: PM_RTPModulePacketsTx 											
<p>Indicates the Tx RTP Packets during the collection time interval.</p> <p>OVOC parameter name: Tx RTP Packets.</p> <ul style="list-style-type: none"> High threshold: acPMNetworkingAttributesRTPPacketsTxHighThreshold (1.3.6.1.4.1.5003.10.7.1.33.9) Low threshold: acPMNetworkingAttributesRTPPacketsTxLowThreshold (1.3.6.1.4.1.5003.10.7.1.33.10) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIBs for SIP Messages

The following table lists the performance monitoring MIBs for SIP messages.

Table 7-4: Performance Monitoring MIBs for SIP Messages

Performance Monitoring MIB	G / C	I n t	V al	M in	M ax	A v g	Tb LT	T b T	Ta HT	H T	L T
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPActiveSIPTransactionsPerSecondTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.41 ■ Source Name: PM_gwActiveSIPTransacionsPerSecond 											
<p>Indicates the number of active incoming and outgoing SIP transactions (e.g., INVITE message) per second.</p> <ul style="list-style-type: none"> ■ High threshold: acPMSipAttributesActiveSIPTransactionsPerSecondHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.35) ■ Low threshold: acPMSipAttributesActiveSIPTransactionsPerSecondLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.36) 	G	1 5	✓	x	x	x	x	x	x	0	0
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPIPGroupInviteDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.22 ■ Source Name: PM_gwIPGroupINVITEDialogs 											
<p>Indicates the number of INVITE dialogs per IP Group.</p> <ul style="list-style-type: none"> ■ High threshold: acPMSipAttributesIPGroupINVITEDialogsHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.25) ■ Low threshold: acPMSipAttributesIPGroupINVITEDialogsLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.26) 	G	1 5	✓	✓	✓	✓	✓	✓	✓	0	0

Performance Monitoring MIBs for Calls per IP Group

The following table lists the performance monitoring MIBs for Gateway and SBC calls per IP Group.



For additional performance monitoring MIBs for SBC calls per IP Group, see [SBC Calls per IP Group](#) on page 85.

Table 7-5: Performance Monitoring MIBs for Call Sessions per IP Group

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAttemptedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.3 ■ Source Name: PM_gwSBCIPGroupInAttemptedCalls 											
Indicates the number of attempted incoming calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutAttemptedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.6 ■ Source Name: PM_gwSBCIPGroupOutAttemptedCalls 											
Indicates the number of attempted outgoing calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupRoutingFailedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.9 ■ Source Name: PM_gwSBCIPGroupRoutingFailedCalls 											
Indicates the number of failed call routing per	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInNoResourcesCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.18 ■ Source Name: PM_gwSBCIPGroupInNoResourcesCalls 											
Indicates the number of incoming call resource allocation failures per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutNoResourcesCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.19 ■ Source Name: PM_gwSBCIPGroupOutNoResourcesCalls 											
Indicates the number of outgoing call resource allocation failures per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInNoMatchCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.20 ■ Source Name: PM_gwSBCIPGroupInNoMatchCalls 											
Indicates the	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
number of incoming call media negotiation failures per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutNoMatchCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.21 ■ Source Name: PM_gwSBCIPGroupOutNoMatchCalls 											
Indicates the number of outgoing call media negotiation failures per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInBusyCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.22 ■ Source Name: PM_gwSBCIPGroupInBusyCalls 											
Indicates the number of incoming busy calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutBusyCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.23 ■ Source Name: PM_gwSBCIPGroupOutBusyCalls 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
Indicates the number of outgoing busy calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInNoAnswerCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.24 ■ Source Name: PM_gwSBCIPGroupInNoAnswerCalls 											
Indicates the number of incoming no-answer calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutNoAnswerCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.25 ■ Source Name: PM_gwSBCIPGroupOutNoAnswerCalls 											
Indicates the number of outgoing no-answer calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInForwardedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.26 ■ Source Name: PM_gwSBCIPGroupInForwardedCalls 											
Indicates the	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
number of incoming forwarded calls per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutForwardedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.29 ■ Source Name: PM_gwSBCIPGroupOutForwardedCalls 											
Indicates the number of outgoing forwarded calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInGeneralFailedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.32 ■ Source Name: PM_gwSBCIPGroupInGeneralFailedCalls 											
Indicates the number of incoming calls that failed due to general fail reason per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutGeneralFailedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.35 ■ Source Name: PM_gwSBCIPGroupOutGeneralFailedCalls 											
Indicates	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
the number of outgoing calls that failed due to general fail reason per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.38 ■ Source Name: PM_gwSBCIPGroupInEstablishedCalls 											
Indicates the number of incoming established calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.41 ■ Source Name: PM_gwSBCIPGroupOutEstablishedCalls 											
Indicates the number of outgoing established calls per IP Group.	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIBs for Gateway Application



This section is applicable only to the Gateway application (i.e., Tel/PSTN interfaces).

IP-to-Tel and Tel-to-IP Calls

The following table lists the performance monitoring MIBs for IP-to-Tel and Tel-to-IP calls.



In the MIB tables, Index 0 indicates Tel-to-IP calls and Index 1 indicates IP-to-Tel calls.

Table 7-6: Performance Monitoring MIBs for IP-to-Tel and Tel-to-IP Calls

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> MIB Name: acPMSipIPGroupIP2TelActiveCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.46 Source Name: PM_gwSipIPGroupIP2TelActiveCalls 											
Indicates the number of currently active IP-to-Tel calls per IP Group.	G	1 5	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSipIPGroupTel2IPActiveCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.47 Source Name: PM_gwSipIPGroupTel2IPActiveCalls 											
Indicates the number of currently active Tel-to-IP calls per IP Group.	G	1 5	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSipIP2TelActiveCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.44 Source Name: PM_gwSipIP2TelActiveCalls 											
Indicates the total number of currently active IP-to-Tel calls	G	1 5	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSipTel2IPActiveCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.45 Source Name: PM_gwSipTel2IPActiveCalls 											
Indicates the total number of currently active Tel-to-IP calls	G	1 5	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPAttemptedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.1 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> Source Name: PM_gwAttemptedCalls 											
Indicates the number of attempted calls (Index 1) during last interval. OVOC parameter name: IP to Tel / Tel to IP Number of Call Attempts	C	15	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> MIB Name: acPMCPCallAttemptsPerSecTable OID: 1.3.6.1.4.1.5003.10.8.2.31.10 Source Name: PM_CPCallAttemptsPerSec 											
Indicates the number of attempted calls per second. It counts the number of SIP INVITE messages per second.	G	15	✓	✓	✓	✓	✓	✓	✓	0	0
<ul style="list-style-type: none"> High threshold: acPMCPConnectionAttributesCallAttemptsPerSecHighThreshold (1.3.6.1.4.1.5003.10.8.1.32.19) Low threshold: acPMCPConnectionAttributesCallAttemptsPerSecLowThreshold (1.3.6.1.4.1.5003.10.8.1.32.20) 											
<ul style="list-style-type: none"> MIB Name: acPMActiveContextCountTable OID: 1.3.6.1.4.1.5003.10.8.2.31.5 Source Name: PM_ActiveContextCount 											
Indicates the number of Gateway calls.	G	15	✓	✓	✓	✓	✓	✓	✓	0	0
<ul style="list-style-type: none"> High threshold: acPMActiveContextCountTimeAboveHighThreshold (1.3.6.1.4.1.5003.10.8.2.31.5.1.9) Low threshold: acPMActiveContextCountTimeBelowLowThreshold 											

Performance Monitoring MIB	G / C	I n t	V al	M in	M ax	A v g	T b LT	T b T	T a HT	H T	L T
(1.3.6.1.4.1.5003.10.8.2.31.5.1.7)											
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPCallDurationTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.2 ■ Source Name: PM_gwCallDuration 											
Indicates the call duration of established calls during last interval. OVOC parameter name: IP to Tel / Tel to IP Average Call Duration [sec]calls. <ul style="list-style-type: none"> ■ High threshold: acPMSipAttributesCallDurationHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.1) ■ Low threshold: acPMSipAttributesCallDurationLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.2) 	G / C	15	✓	✓	✓	✓	✓	✓	✓	✓	✓
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPNoMatchCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.3 ■ Source Name: PM_gwNoMatchCalls 											
Indicates the number of calls that failed due to mismatched media server capabilities for calls, during last interval. OVOC parameter name: IP to Tel / Tel to IP Number of Failed Calls due to No Matched Capabilities.	C	15	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPBusyCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.4 ■ Source Name: PM_gwBusyCalls 											
Indicates the number of calls that	C	1	✓	✗	✗	✗	✗	✗	✗	✗	✗

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<p>failed as a result of a busy line, during last interval.</p> <p>OVOC parameter name: IP to Tel / Tel to IP Number of Calls Terminated due to a Busy Line.</p>		5									
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPNoAnswerCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.5 ■ Source Name: PM_gwNoAnswerCalls 											
<p>Indicates the number of calls that weren't answered during last interval.</p> <p>OVOC parameter name: IP to Tel / Tel to IP Number of Calls Terminated due to No Answer.</p>	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPNoRouteCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.6 ■ Source Name: PM_gwNoRouteCalls 											
<p>Indicates the number of calls whose destinations weren't found during last interval.</p> <p>OVOC parameter name: IP to Tel / Tel to IP Number of Failed Calls due to No Route.</p>	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPFailCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.7 ■ Source Name: PM_gwFailCalls 											
<p>This counter is incremented as a result of calls that fail due to reasons not covered by the other counters during last interval.</p> <p>OVOC parameter name: IP to Tel / Tel to IP Number of Failed Calls due to Other reasons.</p>	C	1 5	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> MIB Name: acPMSIPEstablishedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.8 Source Name: PM_gwEstablishedCalls 											
Indicates the number of established calls during last interval. OVOC parameter name: IP to Tel / Tel to IP Number of Established Calls.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPFaxAttemptedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.9 Source Name: PM_gwFaxAttemptedCalls 											
Indicates the number of attempted fax calls.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPFaxSuccessCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.10 Source Name: PM_gwFaxSuccessCalls 											
Indicates the number of successfully established fax calls.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPForwardedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.11 Source Name: PM_gwForwardedCalls 											
Indicates the number of calls that were terminated due to a call forward during last interval. OVOC parameter name: IP to Tel / Tel to IP Number of Calls Terminated due to Forward.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPNoResourcesCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.12 Source Name: PM_gwNoResourcesCalls 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
Indicates the number of calls that failed due to unavailable resources or a media server lock during last interval. OVOC parameter name: IP to Tel / Tel to IP Number of Failed Calls due to No Resources.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPTel2IPTrunkEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.13 ■ Source Name: PM_gwTel2IPTrunkEstablishedCalls 											
Indicates the current number of established calls pertaining to a trunk for Tel-to-IP calls.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPIP2TelTrunkEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.14 ■ Source Name: PM_gwIP2TelTrunkEstablishedCalls 											
Indicates the current number of established calls pertaining to a trunk for IP-to-Tel calls.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPTel2IPTrunkGroupEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.15 ■ Source Name: PM_gwTel2IPTrunkGroupEstablishedCalls 											
Indicates the current number of established calls pertaining to a Trunk Group for Tel-to-IP calls.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPIP2TelTrunkGroupEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.16 ■ Source Name: PM_gwIP2TelTrunkGroupEstablishedCalls 											
Indicates the current number of established calls pertaining to a Trunk Group for IP-to-Tel calls.	G	15	✓	x	x	x	x	x	x	x	x

Trunks

The following table lists the performance monitoring MIB for trunks.

Table 7-7: Performance Monitoring MIBs for Trunks

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbL T	TbT	TaH T	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: dsx1IntervalTable ■ OID: 1.3.6.1.2.1.10.18.8 											
<p>The DS1 Interval Table contains various statistics collected by each DS1 Interface over the previous 24 hours. The past 24 hours are broken into 96 completed 15-minute intervals. Each row in this table represents one such interval (identified by dsx1IntervalNumber) for one specific instance (identified by dsx1IntervalIndex:</p> <ul style="list-style-type: none"> ■ dsx1IntervalESs: Number of Errored Seconds (OVOC parameter name: Trunk Errored Seconds) 	G	15	✓	×	×	×	×	×	×	×	×

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> ■ dsx1IntervalCSSs: Number of Controlled Slip Seconds (OVOC parameter name: Trunk Controlled Slip Seconds) ■ dsx1IntervalPCVs: Number of Path Coding Violations (OVOC parameter name: Trunk Path Coding Violations) ■ dsx1IntervalBESs: Number of Bursty Errored Seconds (OVOC parameter name: Trunk Bursty Errored Seconds) ■ dsx1TotalESs: Call duration per timeslot and 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbL T	TbT	TaH T	HT	LT
<p>E1 since last clear (OVOC parameter name: Trunk Calls Duration)</p> <ul style="list-style-type: none"> ■ dsx1TotalCS Ss: Number of Controlled Slip Seconds encountered by a DS1 interface in the previous 24-hour interval (OVOC parameter name: Trunk Controlled Slip Seconds) ■ dsx1TotalPC Vs: Number of Path Coding Violations encountered by a DS1 interface in the previous 24-hour interval (OVOC parameter name: Trunk Path Coding Violations) 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> dsx1TotalBE Ss: Number of Bursty Errored Seconds encountered by a DS1 interface in the previous 24-hour interval (OVOC parameter name: Trunk Bursty Errored Seconds) 											

Trunk Groups

The following table lists the performance monitoring MIBs for trunk groups.

Table 7-8: Performance Monitoring MIBs for Trunk Groups

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> MIB Name: acPMSIPTrunkGroupNoResourcesCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.28 Source Name: PM_gwTrunkGroupNoResourcesCalls 											
Indicates the number of calls that could not be established due to unavailable device resources (e.g., no free channels) per Trunk Group. <ul style="list-style-type: none"> High threshold: acPMSipAttributesTrunkGroupNoResourcesCallsHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.7) 	C	15	✓	×	×	×	×	×	×	0	0

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> Low threshold: acPMSipAttributesTrunkGroupNoResourcesCallsLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.8) 											
<ul style="list-style-type: none"> MIB Name: acPMSIPTrunkGroupCallDurationTable OID: 1.3.6.1.4.1.5003.10.8.2.52.29 Source Name: PM_gwTrunkGroupCallDuration 											
<p>Indicates the average call duration (in seconds) of calls per trunk group.</p> <ul style="list-style-type: none"> High threshold: acPMSipAttributesCallDurationHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.1) Low threshold: acPMSipAttributesCallDurationLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.2) 	G	15	✓	✓	✓	✓	x	x	x	0	0
<ul style="list-style-type: none"> MIB Name: acPMSIPTrunkGroupUtilizationTable OID: 1.3.6.1.4.1.5003.10.8.2.52.26 Source Name: PM_gwTrunkGroupUtilization 											
<p>Indicates the number of channels currently in use (busy) per trunk group. For example, if the device has 240 channels and the threshold is set to 106, if the number of concurrent busy channels exceeds 106, this threshold alarm is sent. Note that if a trunk is in LOF state, this MIB counts only the channels that are used.</p> <ul style="list-style-type: none"> High threshold: acPMSipAttributesTrunkGroupUtilizationHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.3) Low threshold: 	G	15	✓	✓	✓	✓	✓	✓	✓	2016	0

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
acPMSipAttributesTrunkGroupUtilizationLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.4)											
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPTrunkGroupPercentageUtilizationTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.27 ■ Source Name: PM_gwTrunkGroupPercentageUtilization 											
<p>Indicates the percentage (%) of channels currently in use (busy) per trunk group. The device supports configuration of a busy channel threshold per trunk group, which when exceeded, sends an SNMP alarm. For example, if a device has 200 voice channels and the threshold is set to 90%, if the number of concurrent busy channels exceeds 90% (i.e., 180 channels), this threshold alarm is sent.</p> <ul style="list-style-type: none"> ■ High threshold: acPMSipAttributesTrunkGroupPercentageUtilizationHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.5) ■ Low threshold: acPMSipAttributesTrunkGroupPercentageUtilizationLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.6) 	G	15	✓	✓	✓	✓	✓	✓	✓	95	85
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPTrunkGroupAllTrunksBusyTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.25 ■ Source Name: PM_gwTrunkGroupAllTrunksBusy 											
Indicates the duration (in seconds) that all channels of a specific trunk group were concurrently busy, if this scenario occurs. For example, if trunk group #3 has 200 channels and all these were concurrently busy for 60	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
seconds, then this MIB will display 60 for this trunk group. Note that trunks that are out of service or not configured (set to NONE) are considered "busy" in this calculation.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSIPTrunkGroupAllTrunksBusyPercentageTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.52.40 ■ Source Name: PM_gwTrunkGroupAllTrunksBusyPercentage 											
<p>Indicates the percentage (%) of time within a 15-minute polling interval, that all channels in a specific trunk group were busy simultaneously. This measurement is sent only at the end of the interval (beginning of the current interval), so each measurement reflects the previous interval. For example, assume that all trunks of a trunk group were busy for 6 minutes during an interval. The MIB will send a measurement of 40% (i.e., 6 minutes / 15 minutes * 100). In other words, all trunks of the trunk group were simultaneously busy for 40% of the time during this 15-minute interval.</p> <ul style="list-style-type: none"> ■ High threshold: acPMSipAttributesTrunkGroupAllTrunksBusyPercentageHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.33) ■ Low threshold: acPMSipAttributesTrunkGroupAllTrunksBusyPercentageLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.34) 	G	15	✓	x	x	x	x	x	x	0	0
<ul style="list-style-type: none"> ■ MIB Name: acPMTrunkUtilizationTable 											

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> OID: 1.3.6.1.4.1.5003.10.10.2.21 Source Name: PM_TrunkUtilization 											
Indicates the number of busy channels on a specific E1 / T1 trunk. A busy channel is when the Physical DS0 Termination isn't in Null context or OOS. <ul style="list-style-type: none"> High threshold: acPMTrunkUtilizationAttributesHighThreshold (1.3.6.1.4.1.5003.10.10.1.31.1) Low threshold: acPMTrunkUtilizationAttributesLowThreshold (1.3.6.1.4.1.5003.10.10.1.31.2) 	G	15	✓	✓	✓	✓	✓	✓	✓	30	25

Performance Monitoring MIBs for SBC Application

This section describes the performance monitoring MIBs of the SBC application.

SBC Sessions

The following table lists the performance monitoring MIBs for SBC sessions. For MIBs that have low and high thresholds, if a threshold is crossed the device sends the acPerformanceMonitoringThresholdCrossing trap (see Performance Monitoring Threshold-Crossing Trap).

Table 7-9: Performance Monitoring MIBs for SBC Sessions

Performance Monitoring MIB	G / C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> MIB Name: acPMSIPSBCAttemptedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.42 Source Name: PM_gwSBCAttemptedCalls 											
Indicates the number of attempted SBC calls. It applies	C	15	✓	✓	✓	✓	✓	✓	✓	0	0

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<p>only to SIP dialog-initiating INVITE messages and counts both incoming and outgoing legs per call. Therefore, each successful call increments the counter by 2. If the INVITE fails Classification stage, only the incoming side is counted (i.e., counter incremented only by 1).</p> <ul style="list-style-type: none"> High threshold: acPMSipAttributesSBCAttemptedCallsHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.37) Low threshold: acPMSipAttributesSBCAttemptedCallsLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.38) 											
<ul style="list-style-type: none"> MIB Name: acPMSBCInAttemptedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.65 Source Name: PM_gwSBCInAttemptedCalls 											
Indicates the total number of attempted incoming SBC calls.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCOutAttemptedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.67 Source Name: PM_gwSBCOutAttemptedCalls 											
Indicates the total number of attempted outgoing SBC calls.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSIPSBCEstablishedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.52.43 Source Name: PM_gwSBCEstablishedCalls 											
Indicates the number of	C	1	✓	✓	✓	✓	✓	✓	✓	0	0

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	H T	L T
established SBC calls. ■ High threshold: acPMSipAttributesSBCEstablishedCallsHighThreshold (1.3.6.1.4.1.5003.10.8.1.34.39) ■ Low threshold: acPMSipAttributesSBCEstablishedCallsLowThreshold (1.3.6.1.4.1.5003.10.8.1.34.40)		5									
■ MIB Name: acPMSBCInEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.69 ■ Source Name: PM_gwSBCInEstablishedCalls											
Indicates the total number of incoming established SBC calls.	C	15	✓	x	x	x	x	x	x	x	x
■ MIB Name: acPMSBCOutEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.71 ■ Source Name: PM_gwSBCOutEstablishedCalls											
Indicates the total number of outgoing established SBC calls.	C	15	✓	x	x	x	x	x	x	x	x
■ MIB Name: acPMSBCMediaBrokenConnectionCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.151.1 ■ Source Name: PM_gwSBCMediaBrokenConnectionCalls											
Indicates the total number of established calls that were disconnected because no RTP packets (media) were received for a user-defined period (configured by the BrokenConnectionEventTimeout parameter).	C	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G /C	I n t	V al	M in	M ax	A vg	Tb LT	T bT	Ta HT	H T	L T
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCInShortCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.152.1 ■ Source Name: PM_gwSBCInShortCalls 											
Indicates the total number of incoming calls whose duration was less than the value configured by the ShortCallSeconds parameter.	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCOutShortCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.152.2 ■ Source Name: PM_gwSBCOutShortCalls 											
Indicates the total number of outgoing calls whose duration was less than the value configured by the ShortCallSeconds parameter.	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCInAttemptedRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.153.1 ■ Source Name: PM_gwSBCInAttemptedRegistrations 											
Indicates the number of incoming attempted SBC registrations.	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCOutAttemptedRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.153.2 ■ Source Name: PM_gwSBCOutAttemptedRegistrations 											
Indicates the number of outgoing attempted SBC registrations.	C	1 5	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCInSuccessfulRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.154.1 											

Performance Monitoring MIB	G /C	I n t	V a l	M i n	M a x	A v g	T b L T	T b T	T a H T	H T	L T
<ul style="list-style-type: none"> Source Name: PM_gwSBCInSuccessfulRegistrations 											
Indicates the number of incoming successful registrations.	C	1 5	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> MIB Name: acPMSBCOutSuccessfulRegistrationsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.154.2 Source Name: PM_gwSBCOutSuccessfulRegistrations 											
Indicates the number of outgoing successful registrations.	C	1 5	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> MIB Name: acPMSBCMediaLegsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.47 Source Name: PM_gwSBCMediaLegs 											
Indicates the number of media (RTP) session resources currently utilized.	G	1 5	✓	✓	✓	✓	✓	✓	✓	0	0
<ul style="list-style-type: none"> High threshold: acPMSbcMediaLegsHighThreshold (1.3.6.1.4.1.5003.10.8.1.36.50) Low threshold: acPMSbcMediaLegsLowThreshold (1.3.6.1.4.1.5003.10.8.1.36.51) 											
<ul style="list-style-type: none"> MIB Name: acPMSBCTranscodingSessionsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.48 Source Name: PM_gwSBCTranscodingSessions 											
Indicates the number of transcoding sessions.	G	1 5	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> High threshold: acPMSbcSBCTranscodingSessionsHighThreshold (1.3.6.1.4.1.5003.10.8.1.36.52) Low threshold: acPMSbcSBCTranscodingSessionsLowThreshold (1.3.6.1.4.1.5003.10.8.1.36.53) 											

SBC Calls per IP Group

The following table lists the performance monitoring MIBs for SBC calls per IP Group.



For additional performance monitoring MIBs for SBC calls per IP Group, see [Performance Monitoring MIBs for Calls per IP Group](#) on page 60.

Table 7-10: Performance Monitoring MIBs for SBC Calls per IP Group

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupInCallEstablishedDurationTable OID: 1.3.6.1.4.1.5003.10.8.2.54.1 Source Name: PM_gwSBCIPGroupInCallEstablishedDuration 											
Indicates the call duration of the last incoming established SBC call per IP Group.	C	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutCallEstablishedDurationTable OID: 1.3.6.1.4.1.5003.10.8.2.54.2 Source Name: PM_gwSBCIPGroupOutCallEstablishedDuration 											
Indicates the call duration of the last outgoing established	C	15	✓	×	×	×	×	×	×	×	×

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
SBC call per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAttemptedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.4 ■ Source Name: PM_gwSBCIPGroupInAttemptedSUBSCRIBEDialogs 											
Indicates the number of attempted incoming SUBSCRIBE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAttemptedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.5 ■ Source Name: PM_gwSBCIPGroupInAttemptedOtherDialogs 											
Indicates the number of attempted incoming dialogs other than SUBSCRIBE and INVITE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutAttemptedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.7 ■ Source Name: PM_gwSBCIPGroupOutAttemptedSUBSCRIBEDialogs 											
Indicates the number of attempted outgoing SUBSCRIBE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutAttemptedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.8 ■ Source Name: PM_gwSBCIPGroupOutAttemptedOtherDialogs 											
Indicates the number of attempted outgoing dialogs other than SUBSCRIBE and INVITE dialogs per	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupRoutingFailedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.10 ■ Source Name: PM_gwSBCIPGroupRoutingFailedSUBSCRIBEDialogs 											
Indicates the number of failed call routing of SUBSCRIBE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupRoutingFailedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.11 ■ Source Name: PM_gwSBCIPGroupRoutingFailedOtherDialogs 											
Indicates the number of failed call routing of all dialogs other than SUBSCRIBE per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAdmissionFailedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.12 ■ Source Name: PM_gwSBCIPGroupInAdmissionFailedCalls 											
Indicates the number of failed incoming dialogs due to Admission Control rules per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAdmissionFailedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.13 ■ Source Name: PM_gwSBCIPGroupInAdmissionFailedSUBSCRIBEDialogs 											
Indicates the number of failed incoming SUBSCRIBE dialogs pertaining to Admission Control per	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
IP Group.											
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupInAdmissionFailedOtherDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.14 Source Name: PM_gwSBCIPGroupInAdmissionFailedOtherDialogs 											
Indicates the number of failed incoming dialogs other than SUBSCRIBE dialogs pertaining to Admission Control per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutAdmissionFailedCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.15 Source Name: PM_gwSBCIPGroupOutAdmissionFailedCalls 											
Indicates the number of failed outgoing dialogs pertaining to Admission Control per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutAdmissionFailedSubscribeDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.16 Source Name: PM_gwSBCIPGroupOutAdmissionFailedSUBSCRIBEDialogs 											
Indicates the number of failed outgoing SUBSCRIBE dialogs pertaining to Admission Control per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutAdmissionFailedOtherDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.17 Source Name: PM_gwSBCIPGroupOutAdmissionFailedOtherDialogs 											
Indicates the number	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
of failed outgoing dialogs other than SUBSCRIBE dialogs pertaining to Admission Control per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInForwardedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.27 ■ Source Name: PM_gwSBCIPGroupInForwardedSUBSCRIBEDialogs 											
Indicates the number of incoming forwarded SUBSCRIBE dialogs per IP Group.	G	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInForwardedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.28 ■ Source Name: PM_gwSBCIPGroupInForwardedOtherDialogs 											
Indicates the number of incoming forwarded dialogs other than SUBSCRIBE and INVITE dialogs per IP Group.	G	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutForwardedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.30 ■ Source Name: PM_gwSBCIPGroupOutForwardedSUBSCRIBEDialogs 											
Indicates the number of outgoing forwarded SUBSCRIBE dialogs per IP Group.	G	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutForwardedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.31 ■ Source Name: PM_gwSBCIPGroupOutForwardedOtherDialogs 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
Indicates the number of outgoing forwarded dialogs other than SUBSCRIBE and INVITE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInGeneralFailedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.33 ■ Source Name: PM_gwSBCIPGroupInGeneralFailedSUBSCRIBEDialogs 											
Indicates the number of incoming SUBSCRIBE dialogs that failed due to general fail reason per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInGeneralFailedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.34 ■ Source Name: PM_gwSBCIPGroupInGeneralFailedOtherDialogs 											
Indicates the number of incoming dialogs other than SUBSCRIBE and INVITE that failed due to general fail reason per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutGeneralFailedSubscribeDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.36 ■ Source Name: PM_gwSBCIPGroupOutGeneralFailedSUBSCRIBEDialogs 											
Indicates the number of outgoing SUBSCRIBE dialogs that failed due to general fail reason per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutGeneralFailedOtherDialogsTable 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> OID: 1.3.6.1.4.1.5003.10.8.2.54.37 Source Name: PM_gwSBCIPGroupOutGeneralFailedOtherDialogs 											
Indicates the number of outgoing dialogs other than SUBSCRIBE and INVITE that failed due to general fail reason per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupInEstablishedSubscribeDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.39 Source Name: PM_gwSBCIPGroupInEstablishedSUBSCRIBEDialogs 											
Indicates the number of incoming established SUBSCRIBE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupInEstablishedOtherDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.40 Source Name: PM_gwSBCIPGroupInEstablishedOtherDialogs 											
Indicates the number of incoming established dialogs other than SUBSCRIBE and INVITE per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutEstablishedSubscribeDialogsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.42 Source Name: PM_gwSBCIPGroupOutEstablishedSUBSCRIBEDialogs 											
Indicates the number of outgoing established SUBSCRIBE dialogs per IP Group.	G	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutEstablishedOtherDialogsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.43 ■ Source Name: PM_gwSBCIPGroupOutEstablishedOtherDialogs 											
Indicates the number of outgoing established dialogs other than SUBSCRIBE and INVITE per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAbnormallyTerminatedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.44 ■ Source Name: PM_gwSBCIPGroupInAbnormallyTerminatedCalls 											
Indicates the number of incoming calls that were abnormally terminated per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutAbnormallyTerminatedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.45 ■ Source Name: PM_gwSBCIPGroupOutAbnormallyTerminatedCalls 											
Indicates the number of outgoing calls that were abnormally terminated per IP Group.	G	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupMediaBrokenConnectionCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.151.3 ■ Source Name: PM_gwSBCIPGroupMediaBrokenConnectionCalls 											
Indicates the number of established calls per IP Group that were disconnected	C	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
because no RTP packets (media) were received for a user-defined period (configured by the BrokenConnectionEventTimeout parameter).											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInShortCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.152.5 ■ Source Name: PM_gwSBCIPGroupInShortCalls 											
Indicates the number of incoming calls per IP Group, whose duration was less than the value configured by the ShortCallSeconds parameter.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutShortCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.152.6 ■ Source Name: PM_gwSBCIPGroupOutShortCalls 											
Indicates the number of outgoing calls per IP Group, whose duration was less than the value configured by the ShortCallSeconds parameter.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInAttemptedRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.153.5 ■ Source Name: PM_gwSBCIPGroupInAttemptedRegistrations 											
Indicates the number	C	15	✓	x	x	x	x	x	x	x	x

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
of incoming attempted user registrations per IP Group.											
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutAttemptedRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.153.6 ■ Source Name: PM_gwSBCIPGroupOutAttemptedRegistrations 											
Indicates the number of outgoing attempted user registrations per IP Group.	C	15	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupInSuccessfulRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.154.5 ■ Source Name: PM_gwSBCIPGroupInSuccessfulRegistrations 											
Indicates the number of successful incoming registrations per IP Group.	C	15	✓	✗	✗	✗	✗	✗	✗	✗	✗
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCIPGroupOutSuccessfulRegistrationsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.154.6 ■ Source Name: PM_gwSBCIPGroupOutSuccessfulRegistrations 											
Indicates the number of successful outgoing registrations per IP Group.	C	15	✓	✗	✗	✗	✗	✗	✗	✗	✗

SBC Calls per SRD

The following table lists the performance monitoring MIBs for SBC calls per SRD.

Table 7-11: Performance Monitoring MIBs for SBC Sessions per SRD

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Av g	TbL T	Tb T	TaH T	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRDInAttemptedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.66 ■ Source Name: PM_gwSBCSRDInAttemptedCalls, 											
Indicates the number of incoming attempted calls per SRD.	C	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRDOutAttemptedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.68 ■ Source Name: PM_gwSBCSRDOutAttemptedCalls 											
Indicates the number of outgoing attempted calls per SRD.	C	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRDInEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.70 ■ Source Name: PM_gwSBCSRDInEstablishedCalls 											
Indicates the number of incoming calls per SRD that were established.	C	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRDOutEstablishedCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.72 ■ Source Name: PM_gwSBCSRDOutEstablishedCalls 											
Indicates the number of outgoing calls per SRD that were established.	C	15	✓	×	×	×	×	×	×	×	×
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRDMediaBrokenConnectionCallsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.151.2 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> Source Name: PM_gwSBCSRDMediaBrokenConnectionCalls 											
Indicates the number of established calls per SRD that were disconnected because no RTP packets (media) were received for a user-defined period (configured by the BrokenConnectionEventTimeout parameter).	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDInShortCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.152.3 Source Name: PM_gwSBCSRDInShortCalls 											
Indicates the number of incoming calls per SRD, whose duration was less than the value configured by the ShortCallSeconds parameter.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDOutShortCallsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.152.4 Source Name: PM_gwSBCSRDOutShortCalls 											
Indicates the number of outgoing calls per SRD, whose duration was less than the value configured by the ShortCallSeconds parameter.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDInAttemptedRegistrationsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.153.3 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> Source Name: PM_gwSBCSRDInAttemptedRegistrations 											
Indicates the number of incoming attempted user registrations per SRD.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDOutAttemptedRegistrationsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.153.4 Source Name: PM_gwSBCSRDOutAttemptedRegistrations 											
Indicates the number of outgoing attempted user registrations per SRD.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDInSuccessfulRegistrationsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.154.3 Source Name: PM_gwSBCSRDInSuccessfulRegistrations 											
Indicates the number of incoming successful registrations per SRD.	C	15	✓	x	x	x	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCSRDOutSuccessfulRegistrationsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.154.4 Source Name: PM_gwSBCSRDOutSuccessfulRegistrations 											
Indicates the number of outgoing successful registrations per SRD.	C	15	✓	x	x	x	x	x	x	x	x

SBC Calls Per Second

The following table lists the performance monitoring MIBs for SBC calls per second (CPS).

Table 7-12: Performance Monitoring MIBs for SBC Calls Per Second

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCInCapsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.59 ■ Source Name: PM_gwSBCInCPS 											
Indicates the number of CPS for incoming SBC calls.	G	15	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCOutCapsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.60 ■ Source Name: PM_gwSBCOutCPS 											
Indicates the number of CPS for outgoing SBC calls.	G	15	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRdInCapsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.63 ■ Source Name: PM_gwSBCSRDInCPS 											
Indicates the number of CPS for incoming SBC calls per SRD.	G	15	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> ■ MIB Name: acPMSBCSRdOutCapsTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.64 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Avg	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> Source Name: PM_gwSBCSRDOutCPS 											
Indicates the number of CPS for outgoing SBC calls per SRD.	G	15	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupInCapsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.61 Source Name: PM_gwSBCIPGroupInCPS 											
Indicates the number of CPS for incoming SBC calls per IP Group.	G	15	✓	✓	✓	✓	x	x	x	x	x
<ul style="list-style-type: none"> MIB Name: acPMSBCIPGroupOutCapsTable OID: 1.3.6.1.4.1.5003.10.8.2.54.62 Source Name: PM_gwSBCIPGroupOutCPS 											
Indicates the number of CPS for outgoing SBC calls per IP Group.	G	15	✓	✓	✓	✓	x	x	x	x	x

SBC Call Attempts per Second

The following table lists the performance monitoring MIBs for SBC call attempts per second.

Table 7-13: Performance Monitoring MIBs for SBC Call Attempts Per Second

Performance Monitoring MIB	G/C	In t	V al	Mi n	M ax	Av g	Tb LT	Tb T	Ta HT	H T	L T
<ul style="list-style-type: none"> ■ MIB Name: acSBCCallAttemptsPerSecTable ■ OID: 1.3.6.1.4.1.5003.10.8.2.54.73 ■ Source Name: PM_SBCCallAttemptsPerSec 											
<p>Indicates the number of SBC call attempts (SIP INVITES) per second. Each leg is included in the count. For example, if the device receives an INVITE on the incoming leg and then sends it on the outgoing leg, it's considered as two call attempts (if within a second).</p> <ul style="list-style-type: none"> ■ High threshold: acPMSbcCallAttemptsPerSecHighThreshold (1.3.6.1.4.1.5003.10.8.1.36.56) ■ Low threshold: acPMSbcCallAttemptsPerSecLowThreshold (1.3.6.1.4.1.5003.10.8.1.36.57) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓	✓

Performance Monitoring MIB for DSP Resource Utilization

The following table lists the SNMP MIB that reports the percentage of DSP resources utilized by the device. Low and high thresholds can also be defined, which if crossed, the SNMP trap event, acPerformanceMonitoringThresholdCrossing is sent by the device.

Table 7-14: Performance Monitoring MIB for DSP Utilization

Performance Monitoring MIB	G/C	I n t	V al	M in	M ax	A vg	Tb LT	T b T	Ta HT	HT	LT
<ul style="list-style-type: none"> ■ MIB Name: acPMDSPUsageTable 											

Performance Monitoring MIB	G/C	Int	Val	Min	Max	Av	TbLT	TbT	TaHT	HT	LT
<ul style="list-style-type: none"> OID: 1.3.6.1.4.1.5003.10.7.2.25 Source Name: PM_VEDSPUsage 											
<p>Indicates the percentage (%) of DSP resources utilized by the device. A value of 0% indicates that no DSP resources have been used; a value of 100% indicates that all DSP resources have been used.</p> <ul style="list-style-type: none"> High threshold: acPMMediaDSPUsageAttr DSPUsageHighThreshold (1.3.6.1.4.1.5003.10.7.1.3 5.1) Low threshold: acPMMediaDSPUsageAttr DSPUsageLowThreshold (1.3.6.1.4.1.5003.10.7.1.3 5.2) 	G	15	✓	✓	✓	✓	✓	✓	✓	✓ (101)	✓ (101)

Performance Monitoring MIBs for Data-Router Networking

The acSysDataInterfaceStatusTable (OID 1.3.6.1.4.1.5003.9.10.10.2.6.4.22) table lists the performance monitoring MIBs for Data Networking. This table contains a summary of the IP status and configuration of the data interfaces. The interface types are: VLAN, loopback, sub interface, physical port, bridge, Dot11, GRE, IPIP, PPPoE, L2tp, PPTP, ATM, ATM VLAN, cellular, serial, multilink. Every entry in the table represents a data/logic interface and contains the following fields:

Table 7-15: Performance Monitoring MIBs for Data Networking

MIB Name	Description
Name	Interface name
IPAddress	IPv4 address for this interface
Netmask	Netmask for this interface

MIB Name	Description
Info	Status of interface can be one of the following: Unknown, Disabled, Enabled, Connected or Disconnected
Description	Description of the interface
OperationalState	Protocol is Up or Down
StateTime	State Time (hh:mm:ss)
Uptime	Uptime (hh:mm:ss)
MtuMode	Maximum Transmission Unit (MTU) on the specified interface. Can be: automatically, DHCP or value (in bytes)
DnsStatus	The primary and secondary IP addresses
RxPackets	Total packets received
RxBytes	Total bytes received
RxDropped	No space in Linux buffers
RxErrors	Bad packets received
TxPackets	Total packets transmitted
TxBytes	Total bytes transmitted
TxDropped	No space available in Linux
TxErrors	Packet transmit problem
Minutes	Determines the time interval (minutes) in which the rate sampling is done. The value is relevant to the columns MinuteInputRate and MinuteOutputRate. The value is 5 minutes.
MinuteInputRate	Average value of packets and bits transmitted (per second units) in the last x minutes.
MinuteOutputRate	Average value of packets and bits received (per second units) in the last x minutes. The output rate is exponentially weighted averages with a time of x minutes.
Seconds	Determines the time interval (seconds) in which the rate sampling is done. The value is relevant to the columns SecondInputRate and SecondOutputRate. The value is 15 seconds.

MIB Name	Description
SecondInputRate	Average value of packets and bits transmitted (per second units) in the last x seconds.
SecondOutputRate	Average value of packets and bits received (per second units) in the last x seconds. The output rate is exponentially weighted averages with a time of x seconds.

8 Advanced SNMP Features

This section describes advanced SNMP features.

SNMP NAT Traversal

A NAT placed between the device and the element manager calls for traversal solutions:

- **Trap source port:** all traps are sent from the SNMP port (default is 161). A manager receiving these traps can use the binding information (in the UDP layer) to traverse the NAT back to the device. The trap destination address (port and IP) are as configured in the `snmpTargetMIB`.
- **acKeepAliveTrap:** this trap is designed to be a constant life signal from the device to the manager, allowing the manager NAT traversal at all times. The `acBoardTrapGlobalsAdditionalInfo1 varbind` has the device's serial number.

The destination port (i.e., the manager port for this trap), can be set to be different than the port to which all other traps are sent. To do this, use the `acSysSNMPKeepAliveTrapPort` object in the `acSystem` MIB or the `KeepAliveTrapPort` ini file parameter.

The Trap is instigated in three ways:

- Via an ini file parameter `[SendKeepAliveTrap] = [1]`. This ensures that the trap is continuously sent. The frequency is set via the 9/10 of the `[NATBindingDefaultTimeout]` parameter or MIB object `acSysSTUNBindingLifeTime`.
- After the STUN client has discovered a NAT (any NAT).
- If the STUN client cannot contact a STUN server.



The two latter options require the STUN client be enabled (ini file parameter `[EnableSTUN]`). In addition, once the `acKeepAlive` trap is instigated it does not stop.

- The manager can view the NAT type in the MIB: `audioCodes(5003).acProducts(9).acBoardMibs(10).acSystem(10).acSystemStatus(2).acSysNetwork(6).acSysNAT(2).acSysNATType(1)`
- The manager also has access to the STUN client configuration: `audioCodes(5003).acProducts(9).acBoardMibs(10).acSystem(10).acSystemConfiguration(1).acSysNetworkConfig(3).acSysNATTraversal(6).acSysSTUN(21)`
- `acNATTraversalAlarm`: When the NAT is placed in front of a device that is identified as a symmetric NAT, this alarm is sent. It is cleared when a non-symmetric NAT or no NAT replaces the symmetric one.

Systems

For the management of a system (a chassis with more than one type of module running), the `acSystem/acSystemChassis` subtree in the `acSystem` MIB should be used:

- The first few objects are scalars that are read-only objects for the dry-contacts' state.
- `acSysModuleTable`: A table containing mostly status information that describes the modules in the system. In addition, the table can be used to reset an entire system.

SNMP Administrative State Control

Node maintenance for the device is provided via an SNMP interface. The `acBoardMIB` provides two parameters for graceful and forced shutdowns of the device. These parameters are in the `acBoardMIB` as follows:

- **`acSysActionAdminState`**: Read-write MIB object. When a GET request is sent for this object, the agent returns the current device administrative state - determines the device's desired operational state:
 - **locked (0)**: Shutdown the device in the time frame set by `acSysActionAdminStateLockTimeout`.
 - **shuttingDown (1)**: (read-only) Graceful shutdown is being performed - existing calls are allowed to complete, but no new calls are allowed.
 - **unlocked (2)**: The device is in service.

On a SET request, the manager supplies the required administrative state, either `locked(0)` or `unlocked(2)`. When the device changes to either `shuttingDown` or `locked` state, an `adminStateChange` alarm is sent. When the device changes to an `unlocked` state, the `adminStateChange` alarm is cleared.

- **`acSysActionAdminStateLockTimeout`**: Defines the time remaining (in seconds) for the shutdown to complete:
 - **0**: immediate shutdown and calls are terminated (forced lock)
 - **1**: waits until all calls are terminated (i.e., perform a Graceful shutdown)
 - **> 0**: the number of seconds to wait before the graceful shutdown turns into a force lock



The `acSysActionAdminStateLockTimeout` must be set before the `acSysActionAdminState`.

9 Getting Started with SNMP

This section provides a getting started for quickly setting up the device for management using AudioCodes SNMP MIBs.

Basic SNMP Configuration Setup

This subsection provides a description of the required SNMP configuration when first accessing the SNMP agent running on the device.

To access the device's SNMP agent, there are a few parameters that can be configured if you don't want to use default settings. The SNMP agent default settings include the following:

- SNMP agent is enabled.
- Port 161 in the agent is used for SNMP GET/SET commands.
- No default trap managers are defined and therefore, the device does not send traps.
- The trap destination port is 162.
- The SNMP agent is accessible to all SNMP managers (i.e., no trusted managers).
- SNMP protocol version is SNMPv2c with 'public' and 'private' as the read-only and read-write community strings, respectively.

Configuring these SNMP attributes is described in the following subsections:

Configuring SNMP Port

To configure the agent's SNMP port:

- ini file:

```
SNMPPort = <x>
; where 'x' is the port number
```

- CLI:

```
(config-system)# snmp settings
(snmp)# port
```

Configuring Trap Managers (Trap Destination)

Configuring Trap Managers (i.e., trap destinations) includes defining IP address and port. This configuration corresponds to the `snmpTargetAddrTable`. The agent supports up to five separate trap destinations. For each manager, you need to set the manager IP address and trap-receiving port along with enabling the sending to that manager.

In addition, you can associate a trap destination with a specific SNMPv3 USM user. Traps will be sent to that trap destination using the SNMPv3 format and the authentication and privacy protocol configured for that user.

■ ini File: two options that can be used separately or together:

- Explicit IP address:

```
SNMPMANAGERTABLEIP_x=<IP address>
SNMPMANAGERISUSED_x=1
SNMPMANAGERTRAPSENDINGENABLE_x=1
SNMPMANAGERTRAPPORT_x=162 ;(optional)
Where x is the entry index from 0 to 4
```

- Manager host name:

```
SNMPTrapManagerHostName = <'host name on network'>
```

For example: 'myManager.corp.MyCompany.com'

The host name is translated into the IP address using DNS resolution and is then defined as the fifth (last) trap manager. Until the address is resolved, some traps are expected to be lost.



- This option also requires you to configure the DNS server IP address (in the IP Interfaces table).
- This option results in the fifth manager being overrun by the resolved IP address. Online changes to the Manager table will also be overrun.

■ SNMP: The trap managers are SET using the SNMPTargetMIB MIB object.

- To add an SNMPv2 trap destination: Add a row to the snmpTargetAddrTable with these values:

- ◆ Name=trapN, where N is an unused number between 0 and 4.
- ◆ TagList=AC_TRAP
- ◆ Params=v2cparamsm

All changes to the trap destination configuration take effect immediately.

- To add an SNMPv3 trap destination:

- Add a row to the snmpTargetAddrTable with these values: Name=trapN, >, where N is an unused number between 0 and 4, and <user> is the name of the SNMPv3 that this user is associated with:


```
TagList=AC_TRAP
Params=usm<user>
```

- ii. If a row does not already exist for this combination of user and SecurityLevel, add a row to the snmpTargetParamsTable with this values:
 - Name=usm<user>
 - MPModel=3(SNMPv3)
 - SecurityModel=3 (usm)
 - SecurityName=<user>
 - SecurityLevel=M, where M is either 1(noAuthNoPriv), 2(authNoPriv) or 3(authPriv)
 - To delete a trap destination:
 - i. Remove the appropriate row from the snmpTargetAddrTable.
 - ii. If this is the last trap destination associated with this user and security level, you can also delete the appropriate row from the snmpTargetParamsTable.
 - To modify a trap destination, change the IP address and or port number for the appropriate row in the snmpTargetAddrTable for an existing trap destination. The same effect can be achieved by removing a row and adding a new row.
 - To disable a trap destination, change TagList on the appropriate row in the snmpTargetAddrTable to the empty string.
 - To enable a trap destination, change TagList on the appropriate row in the snmpTargetAddrTable to "AC_TRAP".
- Web Interface: SNMP Trap Destinations table (Setup menu > Administration tab > SNMP folder > SNMP Trap Destinations). The check box on the left indicates if the row is used. The three columns are used to set IP address, port and enable trap sending. The SNMPv3 Users table configures trap users.
- To add a trap user: Click New, and then configure the user. The five columns include name, authentication protocol, privacy protocol, authentication key and privacy key. After configuring the columns, click Apply.
 - To delete a row: Select the corresponding index field, and then click Delete.
- CLI:

```
(config-system)# snmp trap-destination
```

Configuring Trap Destination Port

For configuring the trap destination port, see [Configuring Trap Managers \(Trap Destination\)](#) on page 106.

Configuring Trusted Managers

The configuration of trusted managers determines which managers can access the device. You can define up to five trusted managers.



- The concept of trusted managers is a weak form of security and is therefore, not a required part of SNMPv3 security, which uses authentication and privacy.
- Trusted managers are therefore, not supported in SNMPv3 – thus they apply only when the device is set to use SNMPv2c.
- If trusted managers are defined, then all community strings work from all trusted managers. That is, there is no way to associate a community string with particular trusted managers.

The configuration can be done via ini file, SNMP and Web.

- ini file: `SNMPTRUSTEDMGR_x = <IP address>`, where x is the entry index 0 to 4.
- SNMP: To configure Trusted Managers, the EM must use the `SNMP-COMMUNITY-MIB`, `snmpCommunityMIB`, and `snmpTargetMIB`.
 - To add the first Trusted Manager: This procedure assumes that there is at least one configured read-write community. There are currently no Trusted Managers. The `TransportTag` for columns for all `snmpCommunityTable` rows are currently empty.
 - i. Add a row to the `snmpTargetAddrTable` with these values:
 - Name=mgr0
 - TagList=MGR
 - Params=v2cparams.
 - ii. Add a row to the `snmpTargetAddrExtTable` table with these values:
 - Name=mgr0
 - `snmpTargetAddrTMask=255.255.255.255:0`.

The agent does not allow creation of a row in this table unless a corresponding row exists in the `snmpTargetAddrTable`.
 - iii. Set the value of the `TransportTag` field on each non-TrapGroup row in the `snmpCommunityTable` to MGR.
 - To add a subsequent Trusted Manager: This procedure assumes that there is at least one configured read-write community. There are currently one or more Trusted Managers. The `TransportTag` for columns for all rows in the `snmpCommunityTable` are currently set to MGR. This procedure must be done from one of the existing Trusted Managers.
 - i. Add a row to the `snmpTargetAddrTable` with these values:
 - Name=mgrN, where N is an unused number between 0 and 4.
 - TagList=MGR
 - Params=v2cparams
 - ii. Add a row to the `snmpTargetAddrExtTable` table with these values:
 - Name=mgrN
 - `snmpTargetAddrTMask=255.255.255.255:0`.

An alternative to the above procedure is to set the `snmpTargetAddrTMask` column while you are creating other rows in the table.

- To delete a Trusted Manager (not the final one): This procedure assumes that there is at least one configured read-write community. There are currently two or more Trusted Managers. The taglist for columns for all rows in the snmpCommunityTable are currently set to MGR. This procedure must be done from one of the existing trusted managers, but not the one that is being deleted. Remove the appropriate row from the snmpTargetAddrTable; The change takes effect immediately. The deleted trusted manager cannot access the device. The agent automatically removes the row in the snmpTargetAddrExtTable.
 - To delete the final Trusted Manager: This procedure assumes that there is at least one configured read-write community. There is currently only one Trusted Manager. The taglist for columns for all rows in the snmpCommunityTable are currently set to MGR. This procedure must be done from the final Trusted Manager.
 - i. Set the value of the TransportTag field on each row in the snmpCommunityTable to the empty string.
 - ii. Remove the appropriate row from the snmpTargetAddrTable; The change takes effect immediately. All managers can now access the device. The agent automatically removes the row in the snmpTargetAddrExtTable.
- Web interface: SNMP Trusted Managers table (Setup menu > Administration tab > SNMP folder > SNMP Trusted Managers). Click the Apply button for applying your configuration. Use the check boxes for deleting.
 - CLI:

```
(config-system)# snmp settings
(snmp)# trusted-managers
```

Getting Acquainted with AudioCodes MIBs

AudioCodes proprietary MIBs are located in the AudioCodes subtree (OID 1.3.6.1.4.1.5003). A classification within the subtree separates the MIBs according to the following:

- **Configuration and status MIBs – in the acBoardMibs subtree.** The different MIB modules are grouped according to different virtual modules of the device. In general, the division is as follows (a more detailed breakdown of the MIBs is discussed below):
 - acBoard MIB: proprietary traps.
 - acGateway MIB: SIP control protocol specific objects. This MIB's structure is unlike the other configuration and status MIBs.
 - acMedia MIB: DSP and media related objects. This MIB includes the configuration and status of DSP, voice, modem, fax, RTP/RTCP related objects.
 - acControl MIB: mostly MEGACO and MGCP CP related objects. A number of objects are also related to SIP. The MIB is divided into subtrees that are common to both MEGACO

and MGCP (amongst these are also the SIP relevant objects) and subtrees that are specific to the different CPs.

- acAnalog MIB: all objects in this MIB are related only to the configuration, status and line testing or resetting of analog interfaces.
- acPSTN MIB: configuration and status of trunk related objects only. Most of the MIB objects are trunk specific.
- acSystem MIB: configuration and status of a wide range of general objects along with chassis related objects and a variety of actions that can be instigated.

■ **Performance monitoring MIBs – in the acPerformance subtree.** The different MIB modules are grouped according to different virtual modules of the device. In general, the division is as follows (a more detailed breakdown of the MIBs is discussed below):

- acPMMedia, acPMControl, acPMAAnalog, acPMPSTN, acPMSystem: module specific parameters performance monitoring MIBs
- acPMMediaServer MIB: performance monitoring specifically for MediaServer related parameters (IVR, BCT, Conference and Trunk-Testing)
- acPerfH323SIPGateway MIB: performance specific for SIP CP devices. This MIB's structure is unlike the other performance monitoring MIBs.

■ **Proprietary Carrier Grade Alarm MIB – in the acFault subtree:**

- acAlarm: a proprietary simplification of the standard notificationLogMIB and alarmMIB (both are also supported)

The structure of the different MIBs is similar, depending on the subtree in which they reside. The MIBs in the acBoardMibs subtree have a very similar structure (except the acBoard and acGateway MIBs). Each MIB can be made up of four major subtrees:

- Configuration subtree: mostly read-write objects, tables and scalars. The relevant module's configuration is done via these objects.
- Status subtree: read-only objects, tables and scalars. Module status is collected by these objects.
- Action subtree: read-write objects that are used to instigate actions on the device (such as reset, save configuration, and so on) and read-only objects used to receive the actions' results.
- Chassis subtree (in acSystem MIB only): read-write and read-only objects related to chassis control and management (this includes, fan trays, power supply modules, PSTN IF modules, etc').

The acBoard MIB contains some deprecated objects and current proprietary trap definitions.

The acGateway MIB contains only the configuration subtree which in return is divided into common, SIP and H323 subtrees. The H323 subtree is mostly deprecated or obsolete.

Traps and Alarms

The device supports standard traps and proprietary traps. Most of the proprietary traps are alarm traps, that is, they can be sent and cleared. Thus, they are referred to as alarm traps. All the standard traps are non-alarm traps, referred to as log traps.

The proprietary traps are defined under the `acBoardTrapDefinitions` subtree.

The supported standard MIB traps include the following:

- `coldStart`
- `authenticationFailure`
- `linkDown`
- `linkup`
- `dsx1LineStatusChange`
- `rtcpXrVoipThresholdViolation`
- `dsx3LineStatusChange`
- `entConfigChange`

This subsection describes the device's configuration so that traps are sent out to user-defined managers under SNMPv2c or SNMPv3. It continues with an explanation on the 'carrier grade alarm' abilities and usage.

Device Configuration

For a device to send traps to specified managers, the most basic configuration are the trap targets. More advanced configuration includes the Trap Community String or traps over SNMPv3.

- Destination IP address and port (see [Basic SNMP Configuration Setup](#) on page 106)
- Trap Community String: The default Trap Community String is 'trapuser'. There is only 1 for the entire device.
 - INI file: `SNMPTRAPCOMMUNITYSTRING = <your community string here>`.
 - SNMP: add a new community string to the `snmpCommunityTable`. To associate the traps to the new Community String change the `snmpTargetParamsSecurityName` in the `snmpTargetParamsTable` so it coincides with the `snmpCommunitySecurityName` object. If you wish, you can remove the older Trap Community String from `snmpCommunityTable` (however, it is not mandatory).
 - Web: SNMP Community Settings page (Setup menu > Administration tab > SNMP folder > SNMP Community Settings). Use the Apply button to apply your configuration. You can't delete the Trap Community String, only modify its value.
 - CLI:

```
(config-system)# snmp trap
(snmp-trap)# community-string
```

- **SNMPv3 Settings:** When using SNMPv3 settings it is important to note that by default the trap configuration remains such that the traps are sent out in SNMPv2c mode. To have traps sent out in SNMPv3, you can use either ini file or SNMP:
 - **INI file:** amongst the SNMPv3 users ensure that you also define a trap user (the value of 2 in the SNMPUsers_Group indicates the trap user). For example: you can have the SNMP users table defined with a read-write user, 'rwmd5des' with MD5 authentication and DES privacy, along with a trap user, 'tmd5no' with SHA authentication and DES privacy:

```
[ SNMPUsers ]
FORMAT SNMPUsers_Index = SNMPUsers_Username, SNMPUsers_
AuthProtocol, SNMPUsers_PrivProtocol, SNMPUsers_AuthKey,
SNMPUsers_PrivKey, SNMPUsers_Group;
SNMPUsers 1 = rwmd5des, 1, 1, myauthkey, myprivkey, 1;
SNMPUsers 2 = tshades, 2, 1, myauthkey, myprivkey, 2
[ \SNMPUsers ]
```



- If you define a trap user only, the device runs in SNMPv3 mode but will not be accessible as there are no defined read-write or even read-only users.
- If you define non-default community strings (SNMPv2c), you need to access the device via SNMPv2c.

Along with this configuration, you also need to associate the trap targets (managers) with the user:

```
SNMPMANAGERTRAPUSER_x=tshades
```

where x is the target index and can be between 0 and 4.

Any targets that are defined in the ini file where this last parameter isn't defined, receives SNMPv2c traps.

- **SNMP:** change snmpTargetAddrParams object to the user of your choice adding the letters 'usm' as prefix (ensure it's a trap user). For example, the 'tshades' user should be added as 'usmtshades'.

Carrier Grade Alarm (CGA)

A carrier-grade alarm system provides a reliable alarm reporting mechanism that takes into account element management system outages, network outages, and transport mechanism such as SNMP over UDP.

A carrier-grade alarm system is characterized by the following:

- The device allows a manager to determine which alarms are currently active in the device. That is, the device maintains an active alarm table.
- The device allows a manager to detect lost alarms and clear notifications (sequence number in trap, current sequence number MIB object).
- The device allows a manager to recover lost alarm raise and clear notifications (maintains a log history).
- The device sends a cold start trap to indicate that it is starting. This allows the manager to synchronize its view of the device's active alarms.

When SNMP alarm traps are sent, the carrier-grade alarm system does not add or delete alarm traps as part of the feature. This system provides the mechanism for viewing history and current active alarm information.

As part of CGA, the device supports the following:

- **Active Alarm Table:** The device maintains an active alarm table to allow an OVOC to determine which alarms are currently active in the device. Two views of the active alarm table are supported by the agent:
 - `acActiveAlarmTable` in the proprietary `AcAlarm` MIB (this is a simple, one-row per alarm table that is easy to view with a MIB browser)
 - `alarmActiveTable` and `alarmActiveVariableTable` in the IETF standard `AcAlarm` MIB (rooted in the MIB tree)
- **Alarm History:** The device maintains a history of alarms that have been sent and traps that have been cleared to allow an OVOC to recover any lost sent or cleared traps. Two views of the alarm history table are supported by the agent:
 - `acAlarmHistoryTable` in the proprietary `AcAlarm` MIB (this is a simple, one-row per alarm table that is easy to view with a MIB browser)
 - `nImLogTable` and `nImLogVariableTable` in the standard `NOTIFICATION-LOG-MIB`

This page is intentionally left blank.

International Headquarters

1 Hayarden Street,

Airport City

Lod 7019900, Israel

Tel: +972-3-976-4000

Fax: +972-3-976-4040

AudioCodes Inc.

80 Kingsbridge Rd

Piscataway, NJ 08854, USA

Tel: +1-732-469-0880

Fax: +1-732-469-2298

Contact us: <https://www.audiocodes.com/corporate/offices-worldwide>

Website: <https://www.audiocodes.com/>

Documentation Feedback: <https://online.audiocodes.com/documentation-feedback>

©2023 AudioCodes Ltd.. All rights reserved. AudioCodes, AC, HD VoIP, HD VoIP Sounds Better, IPmedia, Mediant, MediaPack, What's Inside Matters, OSN, SmartTAP, User Management Pack, VMAS, VoIPerfect, VoIPerfectHD, Your Gateway To VoIP, 3GX, VocaNom, AudioCodes One Voice, AudioCodes Meeting Insights, and AudioCodes Room Experience are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

Document #: LTRT-52455

